

Hydraulic Unit

2 ℓ Tank

Model CP

Model CR



Air-Powered Hydraulic Unit 2 ℓ Tank for Space-Saving


CP/CR Unit is the united type of CB/CD Pump Unit and BC Non-Leak Valve Unit.
Suitable for hydraulic source of automatic clamps and die lifters.

Specifications

Model No.		CP20M1	CP20N1	CR2M31	CR2N31
Working Hydraulic Pressure		25 MPa			
Withstanding Pressure		37 MPa			
Tank Capacity		2 : 2 ℓ (Actual Amount for Use 1.1 ℓ)			
Operating Temperature		0 ~ 70 °C			
Use Frequency		20 Cycles / Day or less Pressure Rising Time : 2.5 min. / Cycle or less			
Main Components	Pump	Model No.	AB7000-□		AD7300-□
		Set Discharge Pressure	25 MPa	22.5 MPa	25 MPa
		Discharge Volume Under No Load	1.36 ℓ /min	1.32 ℓ /min	4.00 ℓ /min
		Set Air Pressure	0.45 MPa	0.41 MPa	0.45 MPa
		Air Consumption	max. 0.4 m ³ (Normal)/min		
	Suction Filter	Model No.	JF1030		
		Filtration Degree	174 μm (100 Mesh)		
	Non-Leak Valve	Model No.	BA5011-0	BA5011-0	BA5011-0
			BA5R11-0		BA5R11-0
	Pressure Switch (for Clamp)	Model No.	JBA2700-0G		
		Operation Mode / Set Pressure	Pressure Increase Detection / INC. 17.6 MPa		
	Pressure Switch (for Die Lifter)	Model No.	JBA0700-0G		
		Operation Mode / Set Pressure	Pressure Decrease Detection / DEC. 2.94 MPa		
	Pressure Relief Valve	Model No.	-	BR5N11-0	BR5N11-0
		Set Pressure	-	25 ⁺² / ₀ MPa	25 ⁺² / ₀ MPa

- Notes : 1. If hydraulic oil with viscosity grade higher than listed on Hydraulic Fluid List (ISO-VG-32 or equivalent), action time will be longer.
 2. If using it at low temperature action time will be longer because of high viscosity of hydraulic oil.
 3. Be sure to set an automatic drain air filter when air contains a large amount of moisture, or air supplying pipe is located at the end.
 4. When setting a pressure gauge to hydraulic circuit, install a damper or use an oil filled (glycerin) pressure gauge in order to prevent damage caused by pressure surging.
 5. Provide enough space at the bottom of the unit in consideration of hydraulic oil change.
 (Tank cleaning and suction strainer tightening become easier.)

Model No. Indication

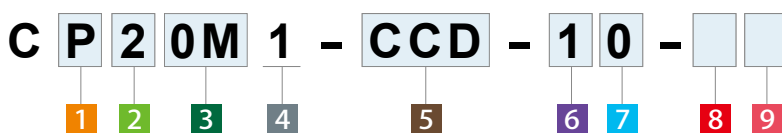

1 Pump (Amount of Discharge Oil)


P : AB Pump

R : AD Pump

2 Tank Capacity

2 : 2 ℓ (Actual Amount for Use 1.1 ℓ)

※ Please refer to Model CP□/CQ□ (P.075) for 5 ℓ / 10 ℓ Tank.

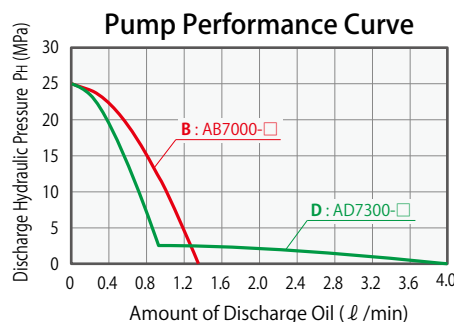

3 Working Pressure Code

When selecting **1** Pump **P**

0M : 25MPa Supply Air Pressure=0.45MPa No Pressure Relief Valve

0N : 25MPa Supply Air Pressure=0.41MPa With Pressure Relief Valve^{※2 ※3}

When selecting **1** Pump **R**

M3 : 25MPa Supply Air Pressure=0.45MPa No Pressure Relief Valve

N3 : 25MPa Supply Air Pressure=0.41MPa With Pressure Relief Valve^{※2 ※3}

4 Design No.

1 : Revision Number

5 Circuit Symbol ※ Please contact us for other types of circuits.

C : For Clamp Single Solenoid Valve (Normal Open)

D : For Die Lifter Single Solenoid Valve (Normal Close)

U : For Clamp Double Solenoid Valve

V : For Die Lifter Double Solenoid Valve

G : For Clamp Single Solenoid Valve (Normal Open)^{※4}

H : For Die Lifter Single Solenoid Valve (Normal Close)^{※4}

PP : For Double Acting Clamp Double Solenoid Valve (2 Stations)

R : Pressure Relief Valve^{※2 ※3}

Notes:

※2. Select the hydraulic unit with pressure relief valve when using hydraulic clamps under high temperature or large temperature change since there may be pressure fluctuation caused by temperature change.

※3. When choosing **3** Pressure Code **0N**, **N3**: with pressure relief valve, please select **R**: Pressure Relief Valve at **5** Circuit Symbol after circuit symbol which requires pressure relief valve.

(Ex.) When choosing three circuits **C**, **C**, **D**

With three pressure relief valves on every circuit : CP20N1-CRCRDR-□-□

With pressure relief valves only on **C** circuits : CP20N1-CRCRD-□-□

No pressure relief valve on circuits : CP20M1-CCD-□-□

※4. Please select **5** Circuit Symbol **G**, **H** only when using it with Circuit Symbol **U**.

6 Control Voltage

1 : AC 100 V

4 : AC 220 V

2 : AC 200 V

5 : DC 24 V

3 : AC 110 V

7 Fluid Code

0 : General Hydraulic Oil (Equivalent to ISO-VG-32)

G : Water-Glycol (Tank is made of steel.)

S : Silicon Oil

※ For fluids other than described above, please contact us.

8 Option

Blank : Standard (Air Regulator)

D : With Filter Regulator (Auto-Drain Type)

G : With Pressure Gauge (For Primary Pressure)

H : With Piping Block (PH Port)

Q : With Oil Level Switch

※ Please contact us for the details of option **D**, **G**, **H** and **Q**.

9 Unit of Pressure Gauge

Blank : MPa (Standard)

N : PSI (used only in USA)/ NPT-Thread Fitting

P : PSI (used only in USA)/ Rc-Thread Fitting

Clamp
Hydraulic Unit
Operation Control Panel

Die Lifter
Pre-Roller

Accessories

Cautions
Company Profile

Clamp

GA

GD

GBB

GBE

GBC

GBF

GBP

GBQ

GN

Hydraulic Unit

CP

CR

CPB

CPD

CPC

CPE

CQC

CQE

Pump Unit

CB

CD

CC

Valve Unit

BC

BH

MV

Operational Control Panel


YP

YA


Circuit Symbol / Main Circuit Examples ※Please contact us for other circuits.

Circuit Symbol	Circuit Type (For Reference)	Number of Circuits	BA Valve Number of Connections	Air Solenoid Valve	Pressure Relief Valve	Pressure Switch
C	Clamp Circuit	1	1	Single Solenoid	—	○
CR		1	1	Single Solenoid	○	○
CC		2	2	Single Solenoid	—	○
CRCR		2	2	Single Solenoid	○	○
U		1	1	Double Solenoid	—	○
PP		1	2	Double Solenoid	—	○
D	Die Lifter Circuit	1	1	Single Solenoid	—	○
V		1	1	Double Solenoid	—	○


C Single Solenoid Valve for Clamp (Normal Open)

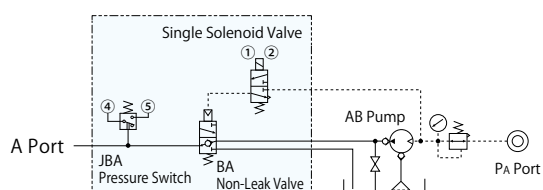


D Single Solenoid Valve for Die Lifter (Normal Close)

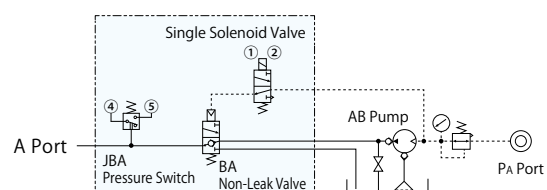


U Double Solenoid Valve for Clamp

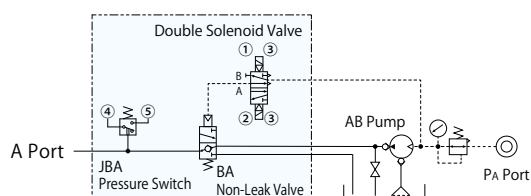

V Double Solenoid Valve for Die Lifter

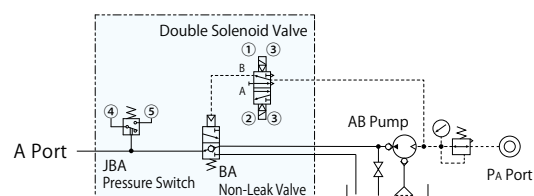


PP Double Solenoid Valve for Double-Acting Clamp

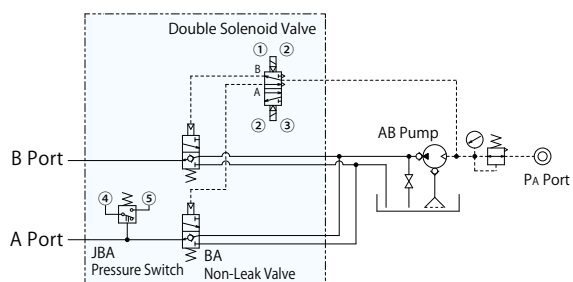

Cautions

Installation Notes (Cautions for Hydraulic Series)

- 1) Check the Usable Fluid
 - Please use the appropriate fluid by referring to the Hydraulic Fluid List.
 - If viscosity grade of hydraulic oil is higher than ISO-VG-32, action time becomes longer.
 - If using it at low temperature, action time will be longer because the viscosity of hydraulic oil becomes higher.
- 2) Procedure before Piping
 - Pipelines, piping connectors and others should be cleaned by thorough flushing.
 - Dust and cutting chips in the circuit may lead to fluid leakage and malfunction.
 - Our products except some valves are not equipped with protective function that prevents contamination.
- 3) Applying Sealing Tape
 - Wrap with tape 1 to 2 times following the screw direction.
 - Pieces of the sealing tape can lead to fluid leakage and malfunction.
 - Please implement piping construction in a clear environment to prevent anything getting in products.
- 4) Air Bleeding of the Hydraulic Circuit
 - If the hydraulic circuit has excessive air, the action time may become very long. If air enters the circuit after connecting the hydraulic port or under the condition of no air in the oil tank, please perform the following steps.
 - ① Reduce hydraulic pressure to less than 2MPa.
 - ② Loosen the cap nut of pipe fitting closest to the clamp by one full turn.
 - ③ Shake the pipeline to loosen the outlet of pipe fitting.
Hydraulic fluid mixed with air comes out.

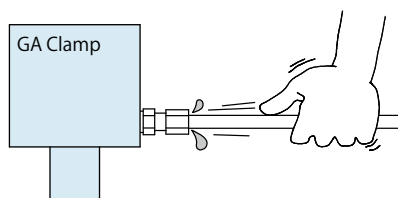

- ④ Tighten the cap nut after bleeding.
 - ⑤ It is more effective to release air at the highest point inside the circuit or at the end of the circuit.
- 5) Checking Looseness and Retightening
 - At the beginning of the machine installation, the bolt and nut may be tightened lightly. Check the looseness and re-tighten as required.

Hydraulic Fluid List

Maker	ISO Viscosity Grade ISO-VG-32	
	Anti-Wear Hydraulic Oil	Multi-Purpose Hydraulic Oil
Showa Shell Sekiyu	Tellus S2 M 32	Morlina S2 B 32
Idemitsu Kosan	Daphne Hydraulic Fluid 32	Daphne Super Multi Oil 32
JX Nippon Oil & Energy	Super Hyrando 32	Super Mulpus DX 32
Cosmo Oil	Cosmo Hydro AW32	Cosmo New Mighty Super 32
ExxonMobil	Mobil DTE 24	Mobil DTE 24 Light
Matsumura Oil	Hydol AW-32	
Castrol	Hyspin AWS 32	

Note : Please contact manufacturers when customers require products in the list above.


Notes on Hydraulic Cylinder Speed Control Unit




Please pay attention to the cautions below. Design the hydraulic circuit for controlling the action speed of hydraulic cylinder. Improper circuit design may lead to malfunctions and damages. Please review the circuit design in advance.

Flow Control Circuit for Single Acting Cylinder

For spring return single acting cylinders, restricting flow during release can extremely slow down or disrupt release action. The preferred method is to control the flow during the lock action using a valve that has free-flow in the release direction. It is also preferred to provide a flow control valve at each actuator.

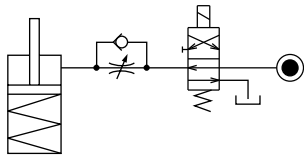


Accelerated clamping speed by excessive hydraulic flow to the cylinder may sustain damage. In this case add flow control to regulate flow.

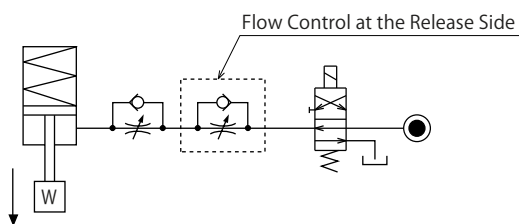


Flow Control Circuit for Double Acting Cylinder

Flow control circuit for double acting cylinder should have meter-out circuits for both the lock and release sides. Meter-in control can have adverse effect by presence of air in the system.

【Meter-out Circuit】

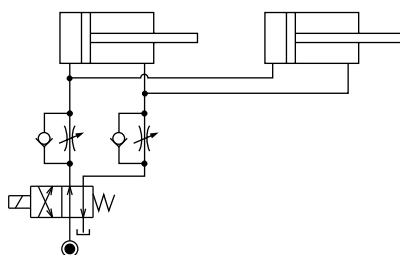


【Meter-in Circuit】

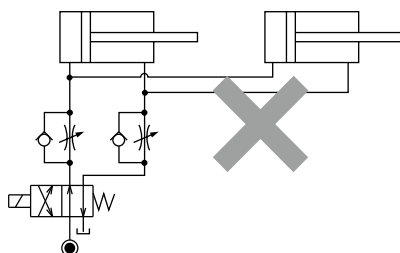


In the case of meter-out circuit, the hydraulic circuit should be designed with the following points.

- ① Single acting components should not be used in the same flow control circuit as the double acting components. The release action of the single acting cylinders may become erratic or very slow.

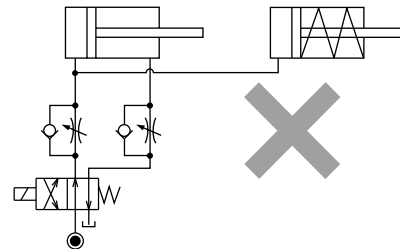


Refer to the following circuit when both the single acting cylinder and double acting cylinder are used together.


- Separate the control circuit.

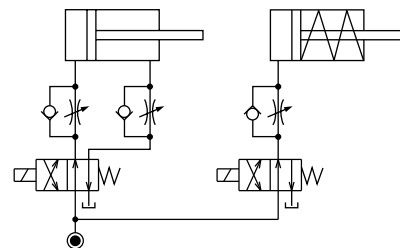

- Reduce the influence of double acting cylinder control unit. However, due to the back pressure in tank line, single action cylinder is activated after double action cylinder works.

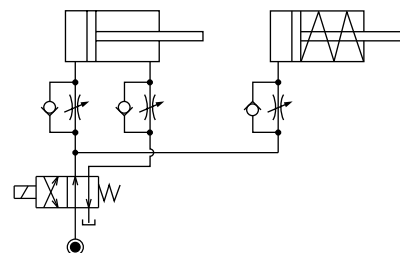


- ② In the case of meter-out circuit, the inner circuit pressure may increase during the cylinder action because of the fluid supply. The increase of the inner circuit pressure can be prevented by reducing the supplied fluid beforehand via the flow control valve. Especially when using sequence valve or pressure switches for clamping detection. If the back pressure is more than the set pressure then the system will not work as it is designed to.

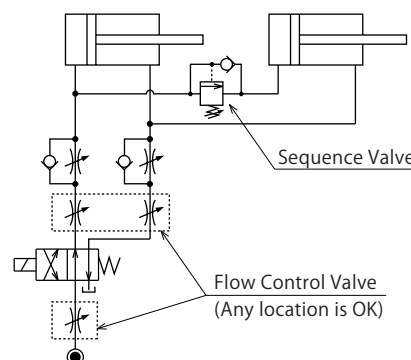

● Cautions

● Notes on Handling


- 1) It should be operated by qualified personnel.
- Hydraulic products, machines and devices should be operated and maintained by qualified personnel.
- 2) Do not operate or remove the product unless the safety protocols are ensured.
 - ① The machine and equipment can only be inspected or prepared when it is confirmed that the safety devices are in place.
 - ② Before the product is removed, make sure that the above-mentioned safety devices are in place. Shut off the pressure and power source, and make sure no pressure exists in the hydraulic and air circuits.
 - ③ After stopping the product, do not remove until the temperature drops.
 - ④ Make sure there is no abnormality in the bolts and respective parts before restarting the machine or equipment.
- 3) Do not touch a clamp (cylinder) while it is working. Otherwise, your hands may be injured.

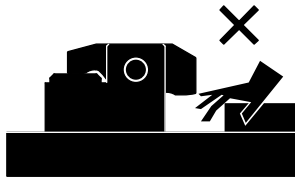

- 4) Do not disassemble or modify.
- If the product is taken apart or modified, the warranty will be voided even within the warranty period.

● Maintenance • Inspection

- 1) Removal of the Product and Shut-off of Pressure Source
 - Before removing the product, make sure that safety devices are in place. Shut off the pressure and power source, and make sure no pressure exists in the air and hydraulic circuits.
 - Make sure there is no abnormality in the bolts and respective parts before restarting.
- 2) Regularly clean the area around the product.
 - If it is used when the surface is contaminated with dirt, it may lead to packing seal damage, malfunctioning and fluid leakage.

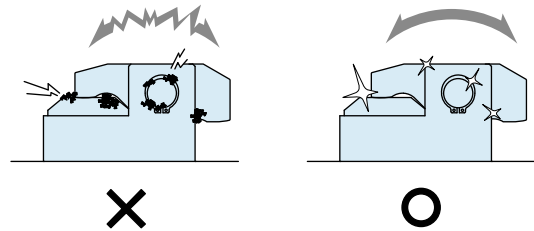

- 3) If disconnecting by couplers, air bleeding should be carried out on a regular basis to avoid air mixed in the circuit.
- 4) Regularly tighten bolts, pipe line, mounting bolt, nut, snap ring, cylinder and others to ensure proper use.
- 5) Make sure the hydraulic fluid has not deteriorated.
- 6) Make sure there is a smooth action without an irregular noise.
 - Especially when it is restarted after left unused for a long period, make sure it can be operated correctly.
- 7) The products should be stored in the cool and dark place without direct sunshine or moisture.
- 8) Please contact us for overhaul and repair.

Cautions

Installation Notes
(For Hydraulic Series)

Hydraulic Fluid List

Notes on Hydraulic Cylinder
Speed Control Unit

Notes on Handling

Maintenance / Inspection

Warranty

Company Profile

Company Profile

Our Products

History

Sales Office

● Warranty

1) Warranty Period

- The product warranty period is 18 months from shipment from our factory or 12 months from initial use, whichever is earlier.

2) Warranty Scope

- If the product is damaged or malfunctions during the warranty period due to faulty design, materials or workmanship, we will replace or repair the defective part at our expense.

Defects or failures caused by the following are not covered.

- ① If the stipulated maintenance and inspection are not carried out.
- ② If the product is used while it is not suitable for use based on the operator's judgment, resulting in defect.
- ③ If it is used or operated in an inappropriate way by the operator. (Including damage caused by the misconduct of the third party.)
- ④ If the defect is caused by reasons other than our responsibility.
- ⑤ If repair or modifications are carried out by anyone other than Kosmek, or without our approval and confirmation, it will void warranty.
- ⑥ Other caused by natural disasters or calamities not attributable to our company.
- ⑦ Parts or replacement expenses due to parts consumption and deterioration. (Such as rubber, plastic, seal material and some electric components.)

Damages excluding from direct result of a product defect shall be excluded from the warranty.

Sales Offices


Sales Offices across the World

JAPAN HEAD OFFICE Overseas Sales	TEL. +81-78-991-5162 KOSMEK LTD. 1-5, 2-chome, Murotani, Nishi-ku, Kobe-city, Hyogo, Japan 651-2241 〒651-2241 兵庫県神戸市西区室谷2丁目1番5号	FAX. +81-78-991-8787
United States of America SUBSIDIARY KOSMEK (USA) LTD.	TEL. +1-630-620-7650 650 Springer Drive, Lombard, IL 60148 USA	FAX. +1-630-620-9015
MEXICO REPRESENTATIVE OFFICE KOSMEK USA Mexico Office	TEL. +52-442-161-2347 Av. Santa Fe #103 int 59 Col. Santa Fe Juriquilla C.P. 76230 Queretaro, Qro Mexico	
EUROPE SUBSIDIARY KOSMEK EUROPE GmbH	TEL. +43-463-287587 Schleppeplatz 2 9020 Klagenfurt am Wörthersee Austria	FAX. +43-463-287587-20
CHINA KOSMEK (CHINA) LTD. 考世美(上海)贸易有限公司	TEL. +86-21-54253000 Room601, RIVERSIDE PYRAMID No.55, Lane21, Pusan Rd, Pudong Shanghai 200125, China 中国上海市浦东新区浦三路21弄55号银亿滨江中心601室 200125	FAX. +86-21-54253709
INDIA BRANCH OFFICE KOSMEK LTD - INDIA	TEL. +91-9880561695 F 203, Level-2, First Floor, Prestige Center Point, Cunningham Road, Bangalore -560052 India	
THAILAND REPRESENTATIVE OFFICE KOSMEK Thailand Representation Office	TEL. +66-2-300-5132 67 Soi 58, RAMA 9 Rd., Suanluang, Suanluang, Bangkok 10250, Thailand	FAX. +66-2-300-5133
TAIWAN (Taiwan Exclusive Distributor) Full Life Trading Co., Ltd. 盈生貿易有限公司	TEL. +886-2-82261860 16F-4, No.2, Jian Ba Rd., Zhonghe District, New Taipei City Taiwan 23511 台湾新北市中和區建八路2號 16F-4 (遠東世紀廣場)	FAX. +886-2-82261890
PHILIPPINES (Philippines Exclusive Distributor) G.E.T. Inc, Phil.	TEL. +63-2-310-7286 Victoria Wave Special Economic Zone Mt. Apo Building, Brgy. 186, North Caloocan City, Metro Manila, Philippines 1427	FAX. +63-2-310-7286
INDONESIA (Indonesia Exclusive Distributor) PT. Yamata Machinery	TEL. +62-21-29628607 Delta Commercial Park I, Jl. Kenari Raya B-08, Desa Jayamukti, Kec. Cikarang Pusat Kab. Bekasi 17530 Indonesia	FAX. +62-21-29628608

Sales Offices in Japan

Head Office Osaka Sales Office Overseas Sales	TEL. 078-991-5162 〒651-2241 兵庫県神戸市西区室谷2丁目1番5号	FAX. 078-991-8787
Tokyo Sales Office	TEL. 048-652-8839 〒331-0815 埼玉県さいたま市北区大成町4丁目81番地	FAX. 048-652-8828
Nagoya Sales Office	TEL. 0566-74-8778 〒446-0076 愛知県安城市美園町2丁目10番地1	FAX. 0566-74-8808
Fukuoka Sales Office	TEL. 092-433-0424 〒812-0006 福岡県福岡市博多区上牟田1丁目8-10-101	FAX. 092-433-0426

Global Network

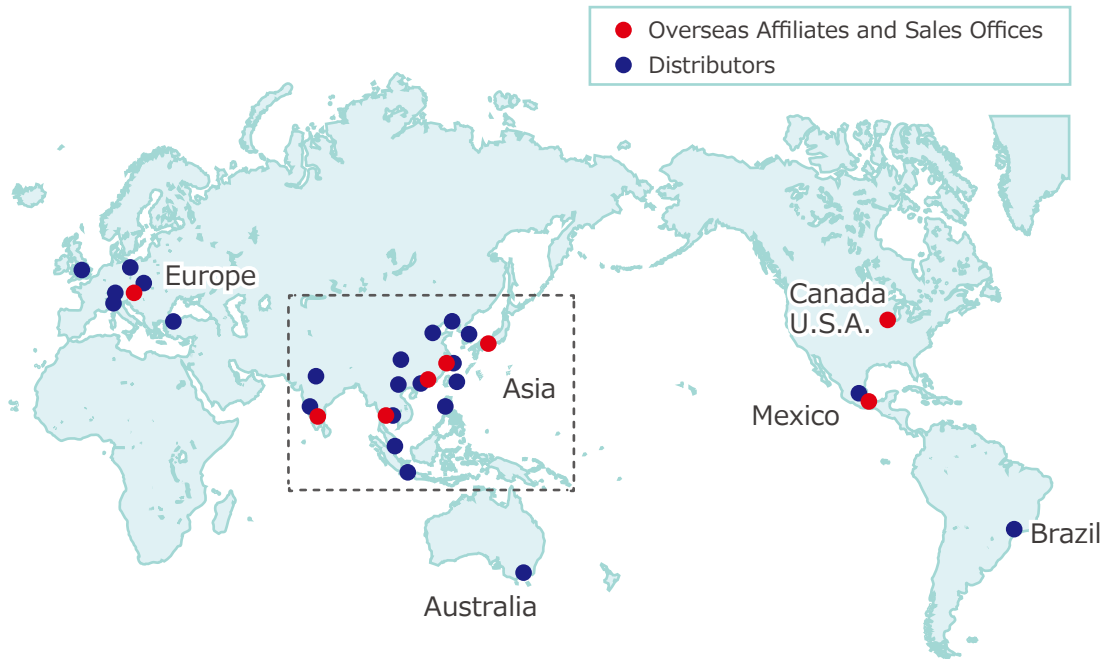

Asia Detailed Map



● FOR FURTHER INFORMATION ON UNLISTED SPECIFICATIONS AND SIZES, PLEASE CALL US.
 ● SPECIFICATIONS IN THIS CATALOG ARE SUBJECT TO CHANGE WITHOUT NOTICE.

