

Hydraulic Hole Clamp


Model SFB **NEW**

Model SFC




Gripper expands and pulls workpiece down.

PAT.

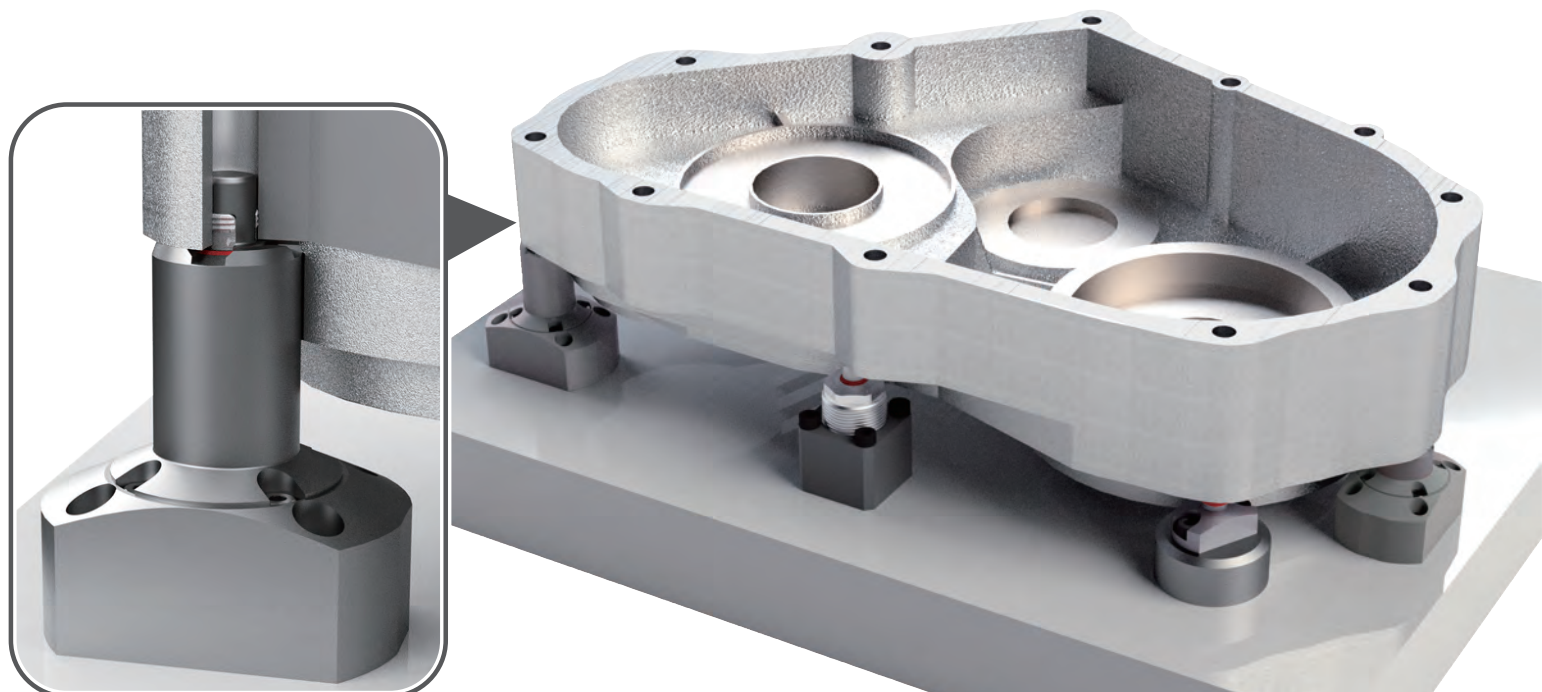


Gripper expands and pulls workpiece down.


Action Description

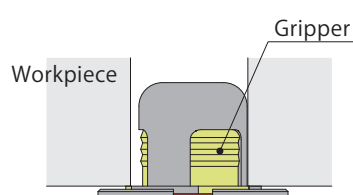

< Released State >
Load/Unload Workpiece

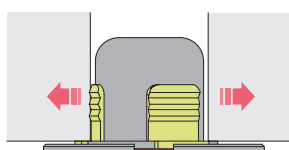

< Clamping State >
Gripper expands to hold workpiece hole.

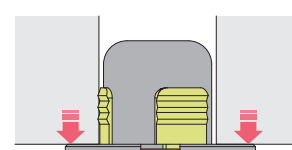

< Clamping Completed >
Pulls and clamps in workpiece hole.

Advantages

• To Workpiece



- Zero interference with 5 faces except clamping face.
- Possible to use standard length tool which provides for better machining accuracy.
- Possible to enhance cutting parameters which leads to shorter cycle times.
- Elimination of multiple setups provides better machining process and zero setup time.

• To Machining Equipment


- Fixture could be extremely downsized.
- Turn-table could be downsized.
- The movement of tool could be shorten.
- For saving weight of fixture.
- Machining equipment could be more simple.
- Good design for easy flow of chips and reduction in coolant usage.

• To Machining Line


- 5-face machining makes it possible to put process together.
- Machining line is kept small and simple.
- Possible to enhance cutting parameters which allows for shorter cycle times.

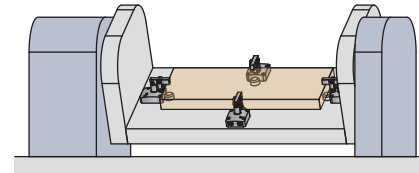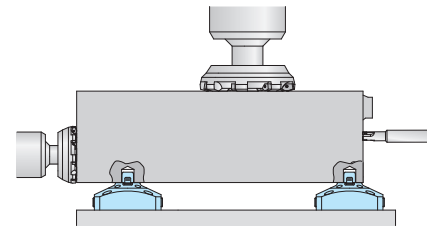


<Before> Clamping around the Workpiece

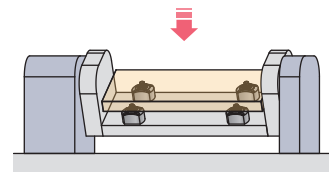

<After> Using the Hole Clamps

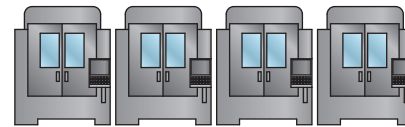

<Before> Large Machining Centers and Long Machining Lines

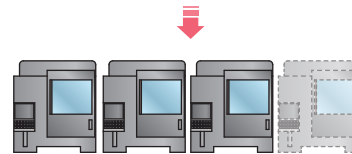

<After> Smaller Machining Centers and Shorter Machining Lines

High-Power Series

Pneumatic Series

Hydraulic Series

Valve / Coupler Hydraulic Unit

Manual Operation Accessories

Cautions / Others

Hole Clamp

SFB

SFC

Swing Clamp

LHA

LHC

LHS

LHW

LG/LT

TLA-2

TLB-2

TLA-1

Link Clamp

LKA

LKC

LKW

LJ/LM

TMA-2

TMA-1

Work Support

LD

LC

TNC

TC

Air Sensing Lift Cylinder

LLW

Linear Cylinder / Compact Cylinder

LL

LLR

LLU

DP

DR

DS

DT

Block Cylinder

DBA/DBC

Centering Vise

FVA

FVD

FVC

Control Valve

BZL

BZT

BZX/JZG

BZS

Pallet Clamp

VS/VT

Expansion Locating Pin

VFL/VFM

VFJ/VFK





Pull Stud Clamp

FP

FQ

Customized Spring Cylinder


DWA/DWB

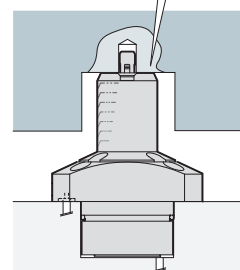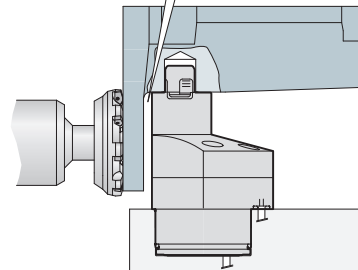	 <p>Model SFB → P.373</p>	 <p>Model SFC → P.397</p>
Classification	Double Action Standard Model	Double Action Offset Model
Features	<p>Seating heights available in 5mm increments</p> 	<p>Avoids interference with workpiece.</p> 

More Flexible Fixture Design with KOSMEK Hole Clamp


- Variable Mounting Dimensions to Suit the Process

Select appropriate mounting dimension according to the plate thickness.

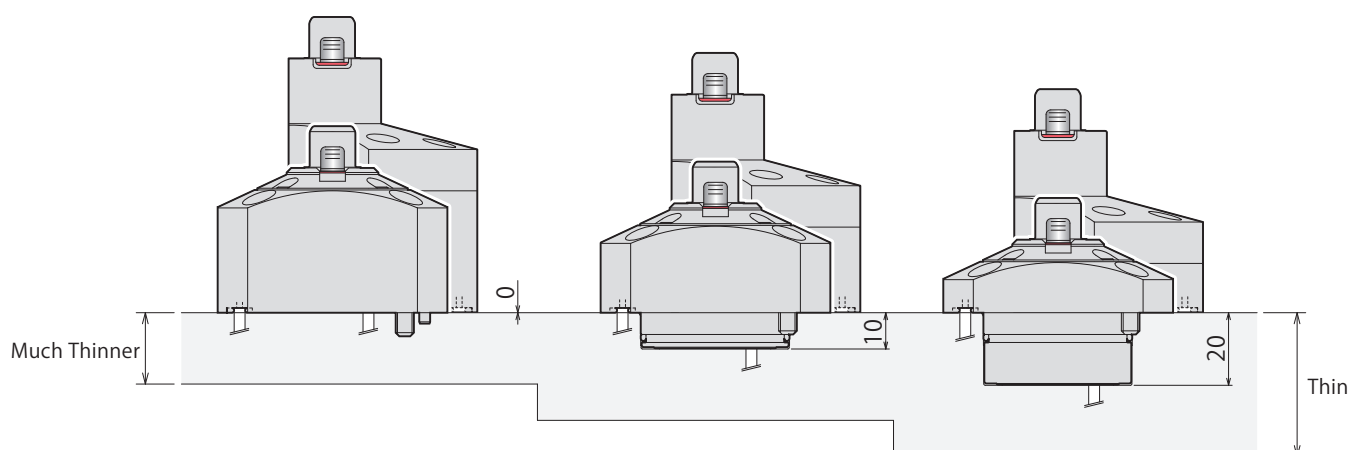

- Seating Surface Height to Suit Variety of Work


Level the height in 5mm increments according to the phase of workpiece seating surface.

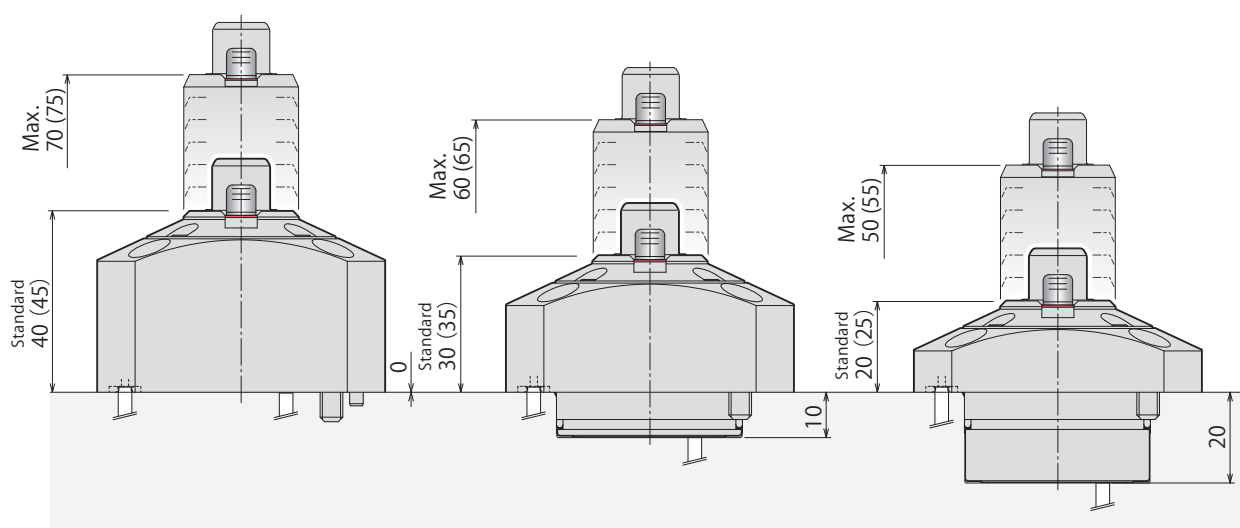

※ The number of () is referred to SFB3000.

• Hole Diameter to Suit Variety of Work

In order to suit different hole diameters and tolerances, hole diameters can be specified in 0.5mm increments.




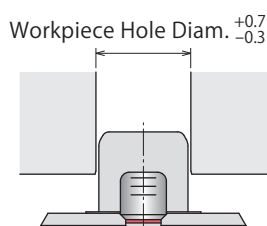


Model	Cap	Workpiece Hole Diameter (mm)																					
		6	6.5	7	7.5	8	8.5	9	9.5	10	10.5	11	11.5	12	12.5	13	13.5	14	14.5	15	15.5	16	
SFB0600	With Cap	Allowable Range																					
SFB/SFC1000	No Cap	Allowable Range																					
SFB/SFC2000	With Cap								Allowable Range														
SFB/SFC3000																	Allowable Range						



• More Powerful and Stable Clamping Force

The secure sequential operating structure provides reliable clamping force with a simple circuit structure.

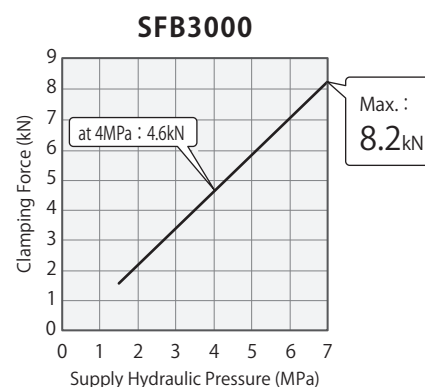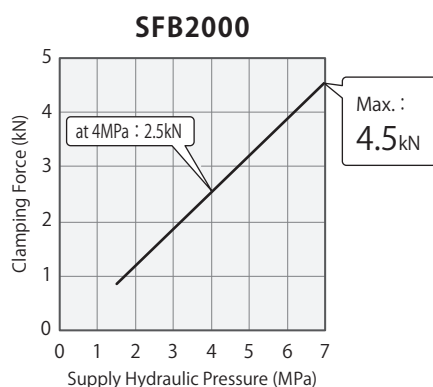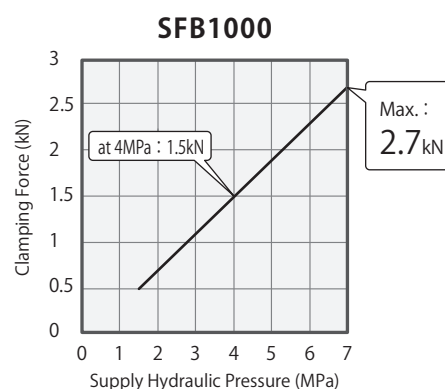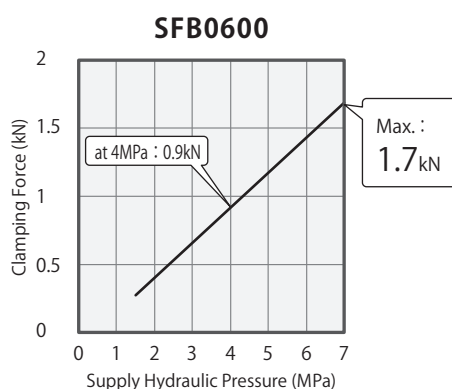

※ Max. operating pressure is 4MPa or 6MPa regarding to some of workpiece hole diameter.

Hole Clamp

SFB

SFC

Swing Clamp

LHA

LHC

LHS

LHW

LG/LT

TLA-2

TLB-2

TLA-1

Link Clamp

LKA

LKC

LKW

LJ/LM

TMA-2

TMA-1

Work Support

LD

LC

TNC

TC

Air Sensing

Lift Cylinder

LLW

Linear Cylinder /

Compact Cylinder

LL

LLR

LLU

DP

DR

DS

DT

Block Cylinder

DBA/DBC

Centering Vise

FVA

FVD

FVC

Control Valve

BZL

BZT

BZX/JZG

BZS

Pallet Clamp

VS/VT

Expansion

Locating Pin

VFL/VFM

VFJ/VFK

Pull Stud Clamp

FP

FQ

Customized

Spring Cylinder

DWA/DWB

More Safe Operation and Long Operating Life with KOSMEK Hole Clamp

● Cap Structure Available in Any Condition


※ SFB/SFC1000 does not have the cap.

NEW

For Body Size : Type 06

Applicable Hole

Diameter $\phi 6 \sim$ (SFB)

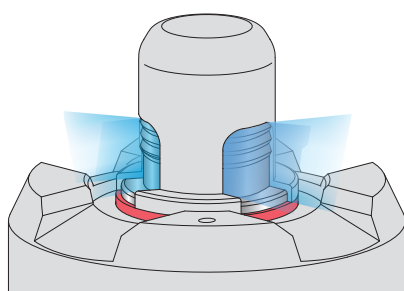


■ Effective air purging

Small clearance leads to effective air purging.

It prevents cutting chips and coolant from entering inside the hole clamp.


50% of air flow consumption compared to our previous model.

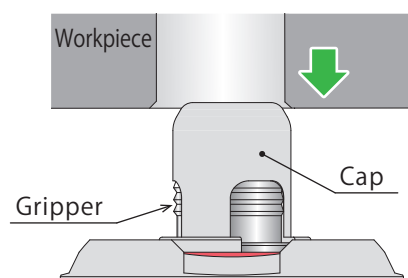

■ Protects gripper when loading workpiece

Cap protects gripper.

Workpiece does not hit gripper when loading and unloading.

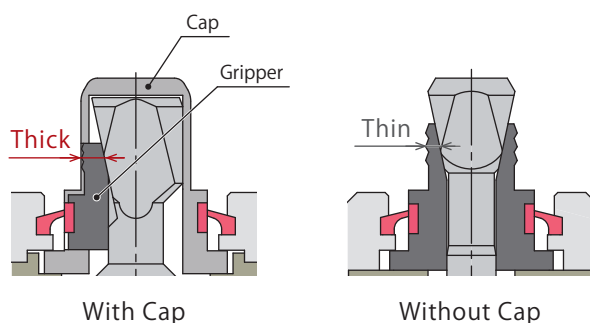

■ Thicker Gripper, Longer Life


No degradation in performance even after

1 million cycles※ internal tests on A2017 aluminum workpieces.

(※ 500,000 cycles test on SCM435 thermal refined steel)

• Pursuing Good Design for Cutting Chips


Having smaller seating surface and wide sweep area on the flange enables easy flow of cutting chips and reduction in coolant usage.

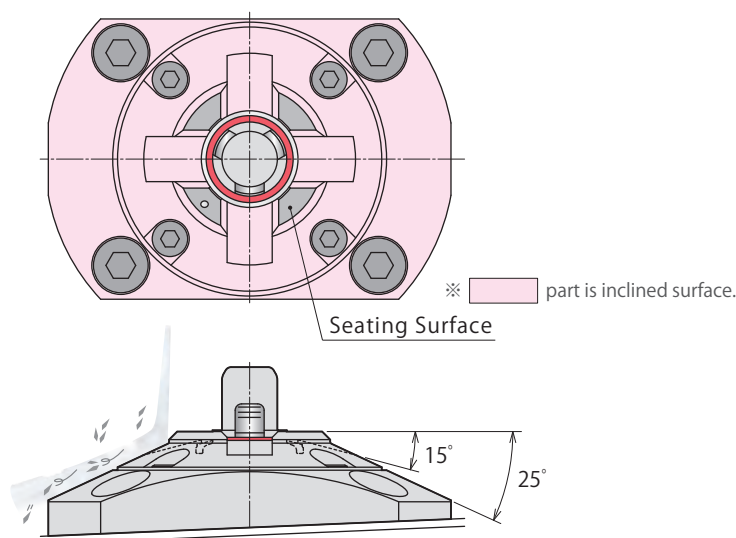

• Secure Clamp Action Out of Sight

Built-in spring grips workpiece strongly and pulls it in.

There is no effect by the temperature and/or amount of oil.

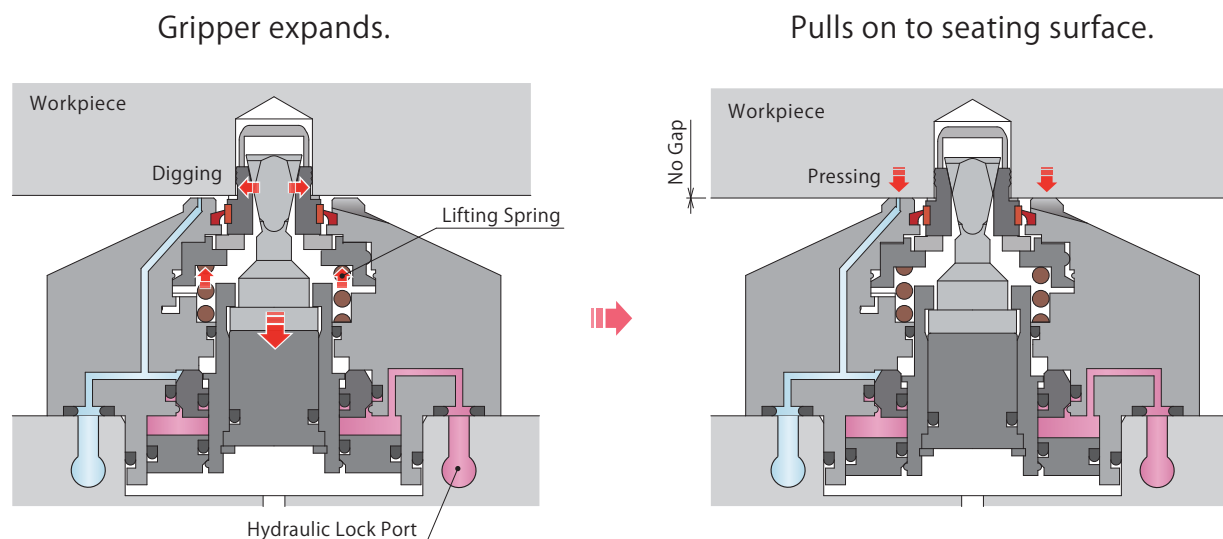


More Safe Operation and Long Operating Life with KOSMEK Hole Clamp

• Clamp action detecting function is in standard


Seat check confirmation and release-end confirmation allow to check the movement of the workpiece. Suitable for automated production line.

※SFC does not have the release-end confirmation.

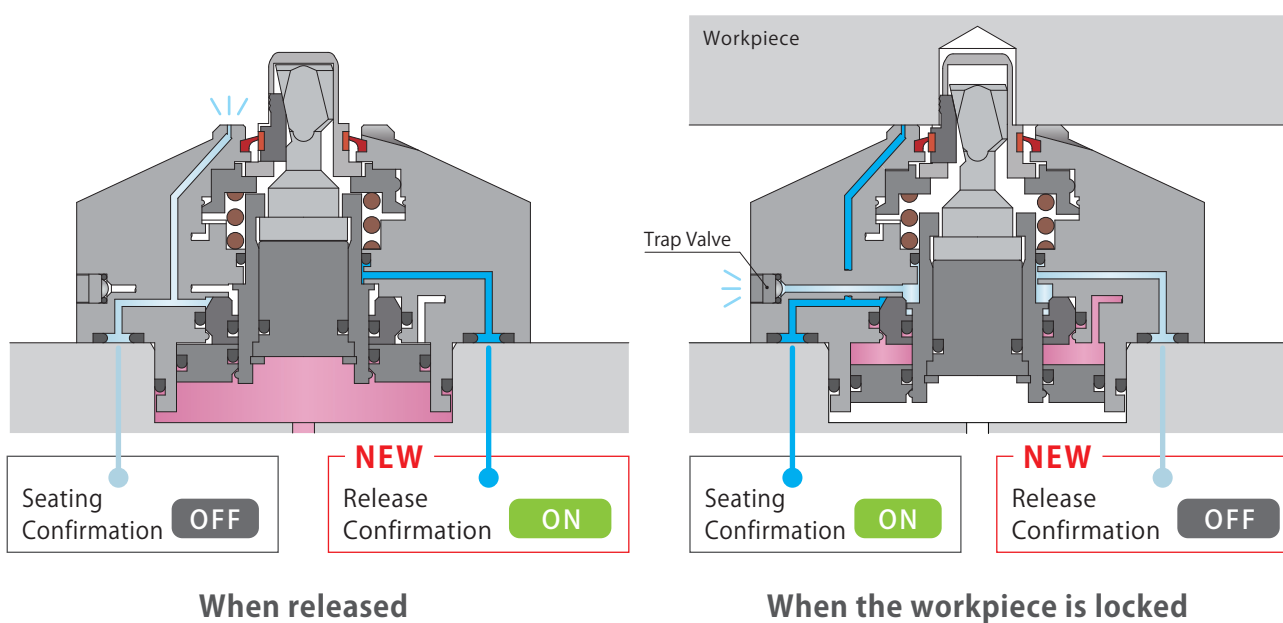

• Abnormality Detection for Unpredictable Troubles

Anomaly detection for unpredictable trouble. It can be used in automated line.

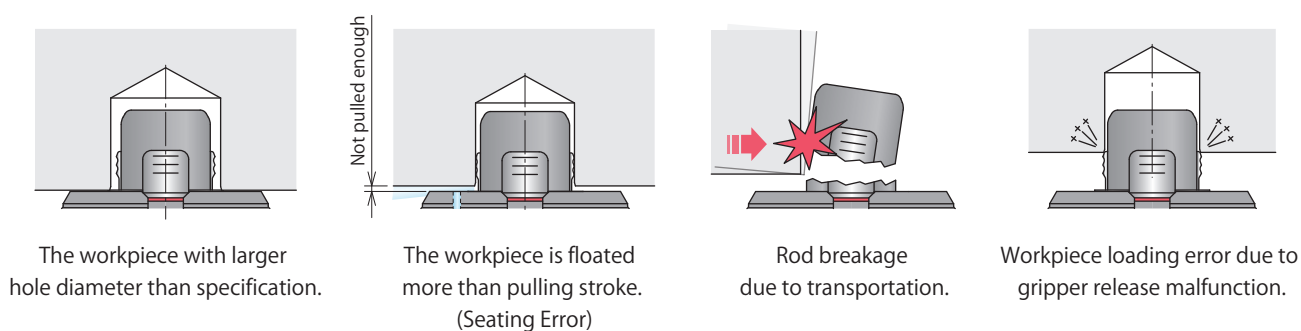


Offset Model



Hydraulic Hole Clamp Offset Model

Model SFC

The offset model allows for machining with no interference of workpieces, fixtures, tools, etc. when there is interference by using the standard SFB model.

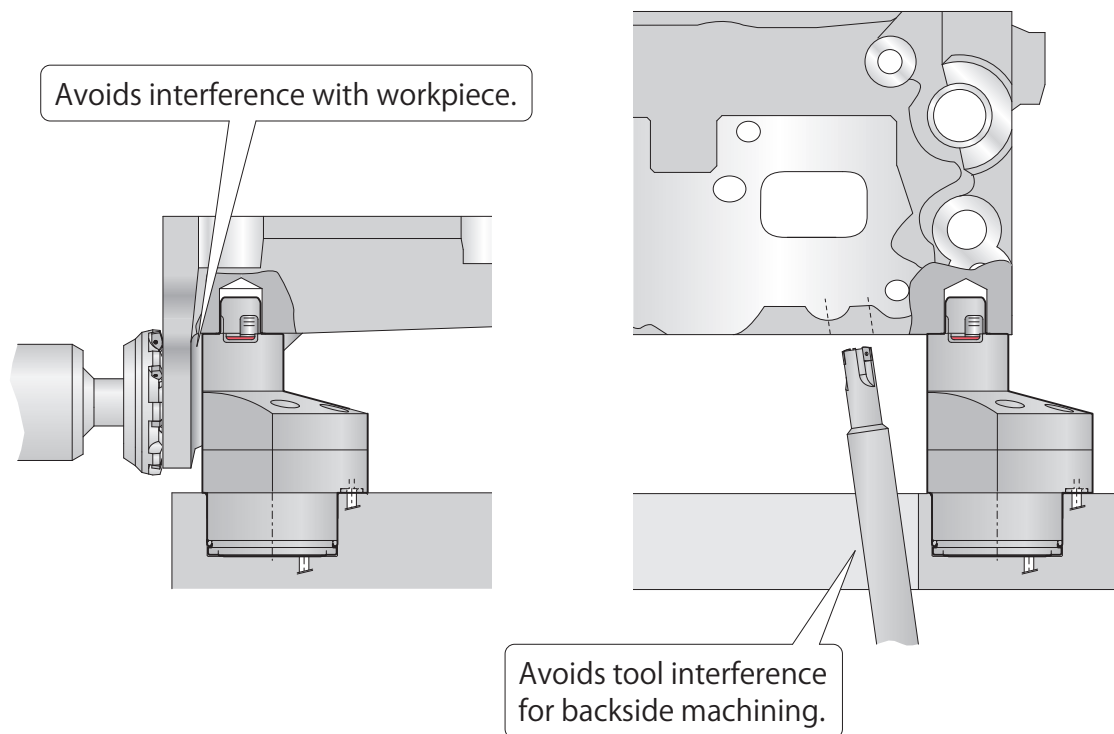

High-Power Series

Pneumatic Series

Hydraulic Series

Valve / Coupler Hydraulic Unit

Manual Operation Accessories

Cautions / Others

Hole Clamp

SFB

SFC

Swing Clamp

LHA
LHC
LHS
LHW
LG/LT
TLA-2
TLB-2
TLA-1

Link Clamp

LKA
LKC
LKW
LJ/LM
TMA-2
TMA-1

Work Support

LD
LC
TNC
TC

Air Sensing Lift Cylinder

LLW

Linear Cylinder / Compact Cylinder

LL
LLR
LLU
DP
DR
DS
DT

Block Cylinder

DBA/DBC

Centering Vise

FVA
FVD
FVC

Control Valve

BZL
BZT
BZX/JZG
BZS

Pallet Clamp

VS/VT

Expansion Locating Pin

VFL/VFM
VFJ/VFK

Pull Stud Clamp

FP
FQ

Customized Spring Cylinder

DWA/DWB

Hydraulic Hole Clamp

Model SFB

Low Pressure (1.5 ~ 7MPa)

Many Varieties


PAT.



Index

Hydraulic Hole Clamp Digest	P.365
Action Description	P.374
Model No. Indication	P.375
Specifications	P.379
Performance Curve	P.381
External Dimensions	
• Body Size:06 Mounting Length 0mm (SFB0600-G0)	P.383
• Body Size:06 Mounting Length 10/20mm (SFB0600-M□)	P.384
• Body Size:10 Mounting Length 0mm (SFB1000-G0)	P.385
• Body Size:10 Mounting Length 10/20mm (SFB1000-M□)	P.386
• Body Size:20 Mounting Length 0mm (SFB2000-G0)	P.387
• Body Size:20 Mounting Length 10/20mm (SFB2000-M□)	P.389
• Body Size:30 Mounting Length 0mm (SFB3000-G0)	P.391
• Body Size:30 Mounting Length 10/20mm (SFB3000-M□)	P.393
Operation Control Cycle	P.395
Layout Sample	P.395
Circuit Reference	P.396
Cautions	
• Notes for Hydraulic Hole Clamp	P.421
• Cautions (Common)	P.1355
• Installation Notes • Hydraulic Fluid List • Notes on Hydraulic Cylinder Speed Control Circuit	
• Notes on Handling • Maintenance/Inspection • Warranty	


Action Description

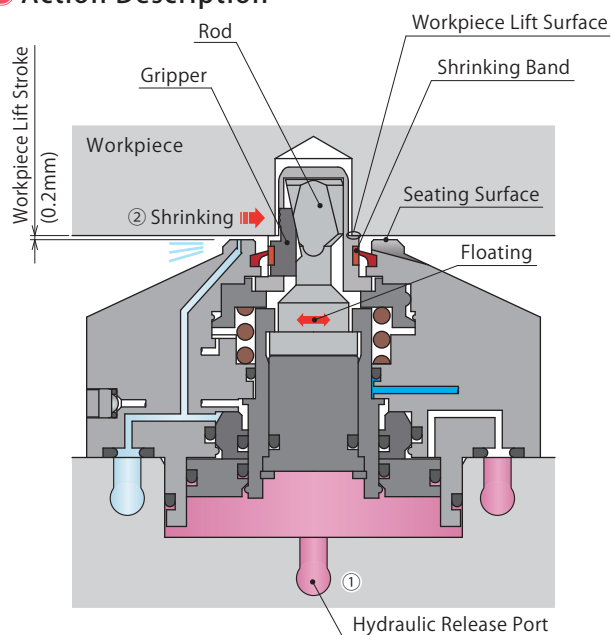

Released State

- ① Hydraulic pressure is supplied to the release port.
↓
- ② The rod is lifted up and the gripper retracts.
(For workpiece lifting option, there is a gap between workpiece bottom surface and seating surface.)
When releasing is completed, the release confirmation sensor turns ON.

Hydraulic Pressure Switch		Seating Confirmation (Air Sensor)	Release Confirmation (Air Sensor)
Release Pressure	Lock Pressure		
ON	OFF	OFF	ON

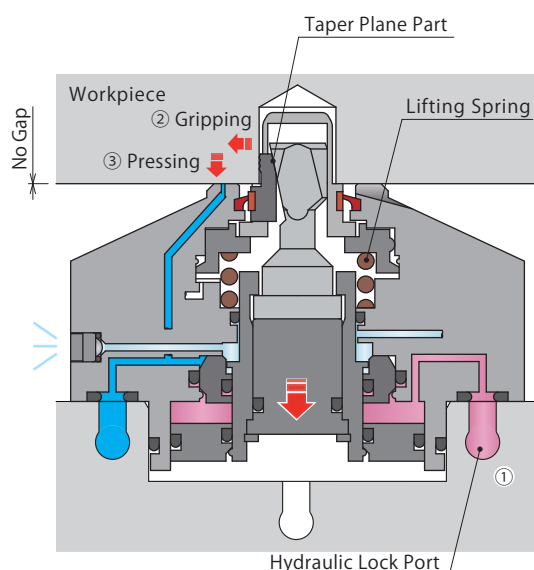


Locked State

- ① Hydraulic pressure is supplied to the lock port.
↓
- ② The rod descends and the gripper expands along the taper plane. (Since the gripper is lifted by spring force, it does not pull down.)
↓
- ③ When pulling force exceeds the spring force for lift up, pulling force works after the gripper digs into workpiece. Then, it presses workpiece onto seating surface.
(Clamping force = Pressing force onto seating surface.)

Hydraulic Pressure Switch		Seating Confirmation (Air Sensor)	Release Confirmation (Air Sensor)
Release Pressure	Lock Pressure		
OFF	ON	ON	OFF

Valve for Incomplete-Clamping Detection

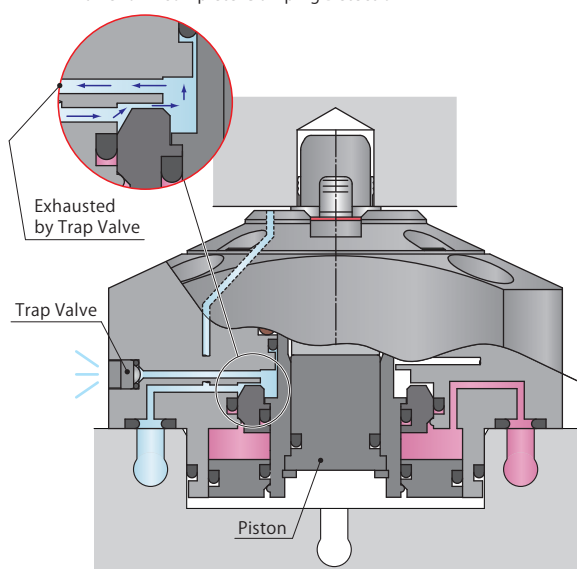

Abnormality Detected State (Clamping without Workpiece)

The built-in check valve function and seating confirmation air pressure detect abnormal condition as follows.

- When clamping workpiece which has larger workpiece hole diameter or clamping without workpiece (In this state the gripper expands but the lifting spring does not have pulling force so the workpiece lifting surface does not descend.)
- When rod or gripper is broken.
- If the piston is fully stroked when it has to stop at the bottom.
- In the case workpiece is floated more than 1mm when setting it.

Hydraulic Pressure Switch		Seating Confirmation (Air Sensor)	Release Confirmation (Air Sensor)
Release Pressure	Lock Pressure		
OFF	ON	OFF	OFF

High-Power
Series

Pneumatic Series

Hydraulic Series

Valve / Coupler
Hydraulic UnitManual Operation
Accessories

Cautions / Others

Hole Clamp

SFB

SFC

Swing Clamp

LHA

LHC

LHS

LHW

LG/LT

TLA-2

TLB-2

TLA-1

Link Clamp

LKA

LKC

LKW

LJ/LM

TMA-2

TMA-1

Work Support

LD

LC

TNC

TC

Air Sensing
Lift Cylinder

LLW

Linear Cylinder /
Compact Cylinder

LL

LLR

LLU

DP

DR

DS

DT

Block Cylinder

DBA/DBC

Centering Vise

FVA

FVD

FVC

Control Valve

BZL

BZT

BZX/JZG

BZS

Pallet Clamp

VS/VT

Expansion
Locating Pin

VFL/VFM

VFJ/VFK

Pull Stud Clamp


FP

FQ

Customized
Spring Cylinder


DWA/DWB

Model No. Indication (Workpiece Hole Shape : Straight)

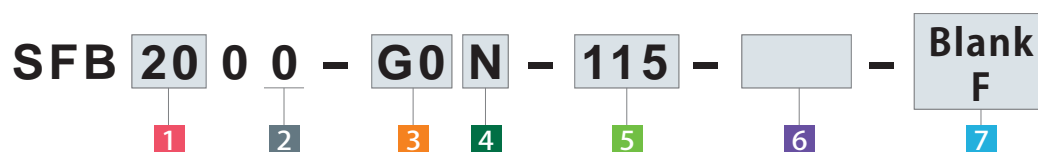


1 Body Size ※ Please refer to the specifications, the performance curve and the external dimensions for details.

- 06** : Available in workpiece hole diameters between $\phi 6$ and $\phi 9$ (With Cap)
10 : Available in workpiece hole diameters between $\phi 6$ and $\phi 9$ (No Cap)
20 : Available in workpiece hole diameters between $\phi 9$ and $\phi 13$ (With Cap)
30 : Available in workpiece hole diameters between $\phi 13$ and $\phi 16$ (With Cap)



SFB1000
(No Cap)




SFB0600/SFB2000/SFB3000
(With Cap)

2 Design No.

0 : Revision Number

3 Mounting Methods

- G0** : Mounting Length 0mm
M1 : Mounting Length 10mm
M2 : Mounting Length 20mm

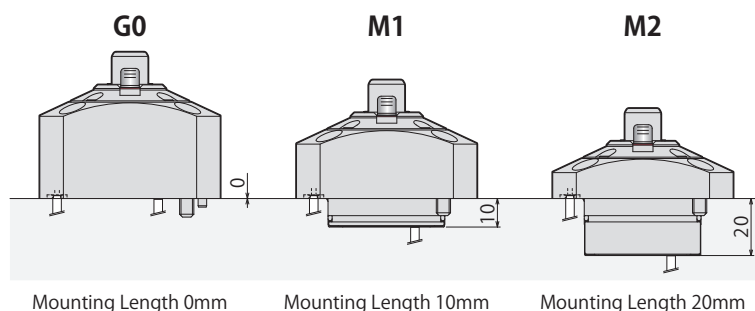


4 Workpiece Lifting Option

- A** : With Lifting Function (Workpiece Lifting Option)
N : Without Lifting Function

The lifting function lifts the workpiece 0.2mm up from the seating surface when the clamp is released.

Note :

When using SFB with expansion locating pin(s) (model VFH, VFL, VFM, VFJ, VFK, VWH, VWM, VWK, VX,VFP,SWG), please choose **N** : Without Lifting Function.

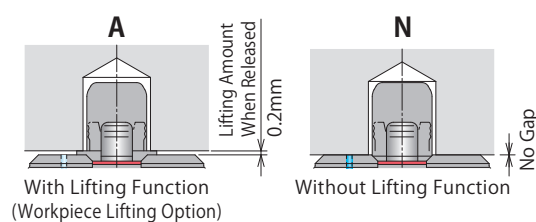


5 Workpiece Hole Code

Workpiece Hole Code : Workpiece Hole Diameter $\phi d \begin{smallmatrix} +0.7 \\ -0.3 \end{smallmatrix}$

※ Workpiece hole diameter should be specified in 0.5mm increments from the allowable range in the table below.

Workpiece Hole Diameter $\phi d \begin{smallmatrix} +0.7 \\ -0.3 \end{smallmatrix}$

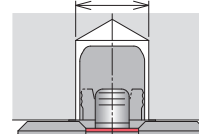







Workpiece Hole Code		060	065	070	075	080	085	090	095	100	105	110	115	120	125	130	135	140	145	150	155	160
Workpiece Hole Diam. $\phi d \begin{smallmatrix} +0.7 \\ -0.3 \end{smallmatrix}$ (mm)		6	6.5	7	7.5	8	8.5	9	9.5	10	10.5	11	11.5	12	12.5	13	13.5	14	14.5	15	15.5	16
SFB0600	With Cap	▲	▲	▲	▲	▲	▲	▲	▲	▲	▲	▲	▲	▲	▲	▲	▲	▲	▲	▲	▲	▲
SFB1000	No Cap	▲	▲	▲	▲	▲	▲	▲	▲	▲	▲	▲	▲	▲	▲	▲	▲	▲	▲	▲	▲	▲
SFB2000	With Cap																					
SFB3000																						


※ Max. operating pressure : 4.0MPa in case of ▲ workpiece hole diameter. 6.0MPa in case of ■ workpiece hole diameter.

6 Seating Height Dimension

Blank : Standard Height (★ part in the following table.)

H **Seating Height** : Specifying Seating Height (In 5mm increments)

Model	3 Mounting Methods	Seating Height H (mm)													
		Standard Height	20	25	30	35	40	45	50	55	60	65	70	75	
SFB0600	G0	40					★	H  Range							
SFB1000	M1	30				★	H  Range								
SFB2000	M2	20	★	H  Range											
SFB3000	G0	45					★	H  Range							
	M1	35				★	H  Range								
	M2	25	★	H  Range											

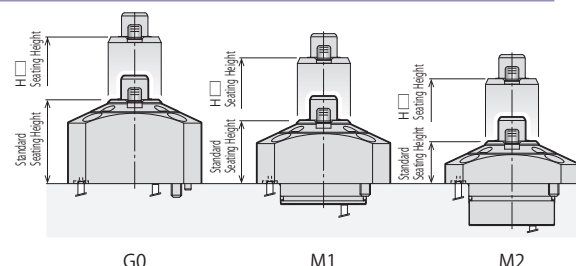

※ ★ is standard height and seating height dimension code is [Blank].


※ Entry example when specifying non-standard seating height.
Seating Height 50mm : **H50**

7 Gripper (Workpiece Hole) Shape

Blank : With Serration (Workpiece Hole Shape: Straight)

F : Without Serration (Workpiece Hole Shape: Straight)


Blank




With Serration

Standard (Digs into and powerfully clamps a workpiece.)

F



Without Serration



Slope Angle
Less than 3°

Taper Hole

Refer to P.377 ~ P.378 for the taper workpiece hole.

● Model No. Indication (Workpiece Hole Shape : Tapered)

SFB **20** **0** **0** - **G0** **N** - **115** - - **T**

1
2
3
4
5
6
7


1 Body Size ※ Please refer to the specifications, the performance curve and the external dimensions for details.

06 : Available in workpiece hole mouth diameters between $\phi 6.5$ and $\phi 9$ (With Cap)


10 : Available in workpiece hole mouth diameters between $\phi 6.5$ and $\phi 9$ (No Cap)

20 : Available in workpiece hole mouth diameters between $\phi 9$ and $\phi 13$ (With Cap)

30 : Available in workpiece hole mouth diameters between $\phi 13$ and $\phi 16$ (With Cap)



SFB1000
(No Cap)



SFB0600/SFB2000/SFB3000
(With Cap)

2 Design No.


0 : Revision Number

3 Mounting Methods

G0 : Mounting Length 0mm

M1 : Mounting Length 10mm

M2 : Mounting Length 20mm

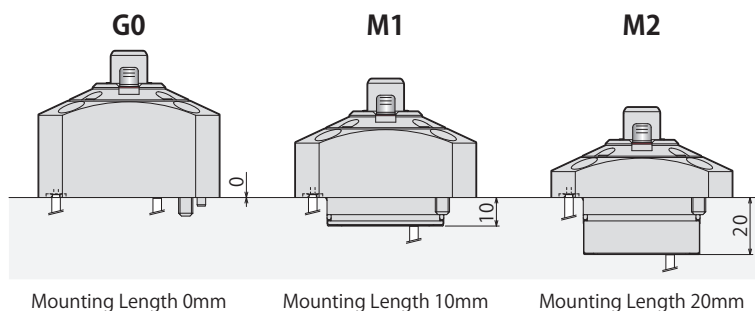

4 Workpiece Lifting Option


A : With Lifting Function (Workpiece Lifting Option)

N : Without Lifting Function

The lifting function lifts the workpiece 0.2mm up from the seating surface when the clamp is released.

Note :

When using SFB with expansion locating pin(s)
(model VFH, VFL, VFM, VFJ, VFK, VWH, VWM, VWK, VX, VFP, SWG),
please choose **N** : Without Lifting Function.

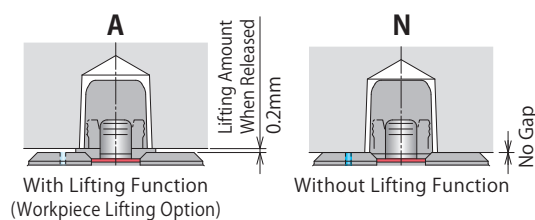


5 Workpiece Hole Code (Workpiece Hole Mouth Diameter)

Workpiece Hole Code : Workpiece Hole Mouth Diameter ϕd

- ※ Workpiece hole mouth diameter ϕd should be specified in 0.5mm increments from the allowable range in the following table.
- ※ The allowable tolerance of the hole mouth diameter ϕd differs depending on the slope angle. Refer to the table below.

Workpiece Hole Mouth Diameter ϕd

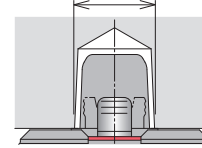


Workpiece Hole Code	060	065	070	075	080	085	090	095	100	105	110	115	120	125	130	135	140	145	150	155	160
Workpiece Hole Mouth Diam. ϕd (mm)	-	6.5	7	7.5	8	8.5	9	9.5	10	10.5	11	11.5	12	12.5	13	13.5	14	14.5	15	15.5	16
SFB0600 With Cap		▲	▲	▲	▲	▲	▲	▲	▲	▲	▲	▲	▲	▲	▲	▲	▲	▲	▲	▲	▲
SFB1000 No Cap		▲	▲	▲	▲	▲	▲	▲	▲	▲	▲	▲	▲	▲	▲	▲	▲	▲	▲	▲	▲
SFB2000 With Cap																					
SFB3000																					

※ Max. operating pressure : 4.0MPa in case of ▲ workpiece hole diameter. 6.0MPa in case of ■ workpiece hole diameter.

※ Taper hole model is not available for Workpiece Hole Code: 060.

Workpiece Hole Slope Angle and Allowable Tolerance of Hole Mouth Diameter

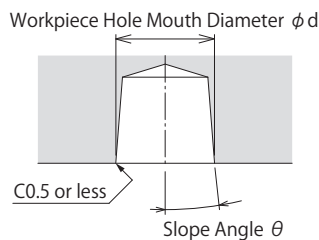

Model No.	Workpiece Hole Code	Slope Angle θ	Allowable Tolerance of Hole Mouth Diam.
SFB0600	065 ~ 085	$1 \leq \theta^\circ \leq 2.5$	$\phi d \pm 0.3$
		$2.5 < \theta^\circ \leq 3$	$\phi d \pm 0.15$
	090	$1 \leq \theta^\circ \leq 2$	$\phi d \pm 0.3$
		$2 < \theta^\circ \leq 2.5$	$\phi d \pm 0.15$
SFB1000	065 ~ 090	$1 \leq \theta^\circ \leq 2.5$	$\phi d \pm 0.3$
		$2.5 < \theta^\circ \leq 3$	$\phi d \pm 0.15$
	090	$1 \leq \theta^\circ \leq 2$	$\phi d \pm 0.3$
		$2 < \theta^\circ \leq 2.5$	$\phi d \pm 0.15$
SFB2000	090	$1 \leq \theta^\circ \leq 2.5$	$\phi d \pm 0.3$
		$2.5 < \theta^\circ \leq 3$	$\phi d \pm 0.15$
	095 ~ 130	$1 \leq \theta^\circ \leq 2.5$	$\phi d \pm 0.3$
		$2.5 < \theta^\circ \leq 3$	$\phi d \pm 0.15$
SFB3000	130 ~ 160	$1 \leq \theta^\circ \leq 2.5$	$\phi d \pm 0.3$
		$2.5 < \theta^\circ \leq 3$	$\phi d \pm 0.15$


※ Please contact us when the slope angle is less than 1°.

6 Seating Height Dimension

Blank : Standard Height (★ part in the following table.)

H **Seating Height** : Specifying Seating Height (In 5mm increments)

Model	3 Mounting Methods	Seating Height H (mm)													
		Standard Height	20	25	30	35	40	45	50	55	60	65	70	75	
SFB0600	G0	40					★	H <div><div></div></div> Range							
SFB1000	M1	30			★	H <div><div></div></div> Range									
SFB2000	M2	20	★	H <div><div></div></div> Range											
SFB3000	G0	45					★	H <div><div></div></div> Range							
	M1	35				★	H <div><div></div></div> Range								
	M2	25		★	H <div><div></div></div> Range										

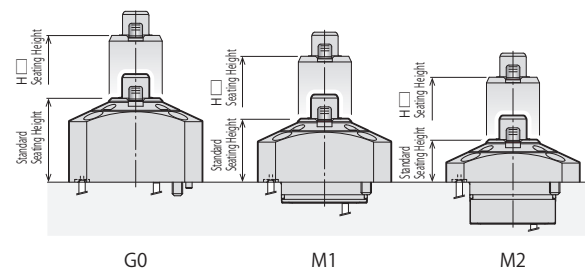


※ ★ is standard height and seating height dimension code is [Blank].


※ Entry example when specifying non-standard seating height.
Seating Height 50mm : **H50**

7 Workpiece Hole (Gripper) Shape

T : Taper Hole (with Serration)




T



With Serration

Standard (Digs into and powerfully clamps a workpiece.)

Workpiece Hole Shape : Taper Hole (with Serration)
(No Serration is not available.)



Hole Shape: Straight

Refer to P.375 ~ P.376 for the straight workpiece hole.

High-Power Series

Pneumatic Series

Hydraulic Series

Valve / Coupler Hydraulic Unit

Manual Operation Accessories

Cautions / Others

Hole Clamp

SFB

SFC

Swing Clamp

LHA

LHC

LHS

LHW

LG/LT

TLA-2

TLB-2

TLA-1

Link Clamp

LKA

LKC

LKW

LJ/LM

TMA-2

TMA-1

Work Support

LD

LC

TNC

TC

Air Sensing

Lift Cylinder

LLW

Linear Cylinder /

Compact Cylinder

LL

LLR

LLU

DP

DR

DS

DT

Block Cylinder

DBA/DBC

Centering Vise

FVA

FVD

FVC

Control Valve

BZL

BZT

BZX/JZG

BZS

Pallet Clamp

VS/VT

Expansion

Locating Pin

VFL/VFM

VFJ/VFK

Pull Stud Clamp

FP

FQ


Customized

Spring Cylinder

DWA/DWB

Specifications (Workpiece Hole Shape : Straight)

Applicable Model No.

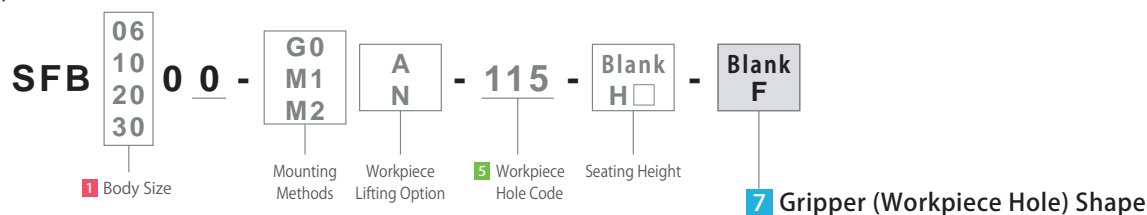

Model No.		SFB0600-□□-□-□ SFB0600-□□-□-□- F								SFB1000-□□-□-□ SFB1000-□□-□-□- F								SFB2000-□□-□-□ SFB2000-□□-□-□- F							
		5	Workpiece Hole Code	060	065	070	075	080	085	090	060	065	070	075	080	085	090	090	095	100	105	110	115	120	125
Workpiece	Hole Diam. $\phi d \begin{smallmatrix} +0.7 \\ -0.3 \end{smallmatrix}$ mm	6	6.5	7	7.5	8	8.5	9	6	6.5	7	7.5	8	8.5	9	9	9.5	10	10.5	11	11.5	12	12.5	13	
	Hardness	HB250 or less																							
Allowable Offset (Floating Clearance of Expanding Area) ^{※1} mm		±0.5																							
Full Stroke mm		4.2																							
Workpiece Pulling Stroke mm		1.0																							
Workpiece Lifting Stroke ^{※2} mm		0.2																							
Workpiece Lifting Force ^{※2} kN		0.09								0.09								0.15							
Cylinder Capacity	Release	cm ³								2.6								4.0							
(Empty Action)	Lock	cm ³								1.8								3.0							
Cylinder Inner Diameter ^{※3} mm		24								28								35							
Rod Diameter ^{※3} mm		15								15								18							
Max. Operating Pressure MPa		4.0						7.0		4.0		7.0						4.0		6.0		7.0			
Min. Operating Pressure MPa		1.5						1.5		1.5		1.5						1.5		1.5		1.5			
Withstanding Pressure MPa		6.0						10.5		6.0		10.5						6.0		9.0		10.5			
Recommended Air Blow Pressure MPa		0.2 ~ 0.3 (About 10L/min)								0.4 ~ 0.5 (About 20L/min)								0.2 ~ 0.3 (About 10L/min)							
Operating Temperature °C		0 ~ 70																							
Usable Fluid		General Hydraulic Oil Equivalent to ISO-VG-32																							
Weight		Refer to the External Dimensions pages.																							


[illegible]

Notes :

- ※ 1. The clamping part is an adjusting structure and the clamping operation is done by locating the workpiece hole. The numerical value in the table shows the amount of tolerance value of single clamp. Please consider the center distance accuracy of each clamping installation part and each workpiece hole when used with another location clamp / location cylinder, or when using more than two of these products.
- ※ 2. Workpiece lifting stroke and workpiece lifting force are functions only for lifting option.
- ※ 3. Clamping force cannot be calculated from the cylinder inner diameter and the rod diameter. Please refer to the clamping force curve.

Clamping Force Curve (Workpiece Hole Shape : Straight)

Applicable Model No.

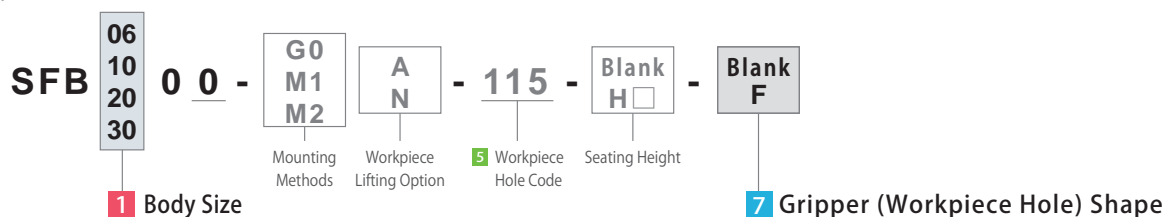


7 Gripper (Workpiece Hole) Shape : **Blank** (With Serration)

Model No.	SFB0600-□□-□-□	SFB1000-□□-□-□	SFB2000-□□-□-□	SFB3000-□□-□-□
5 Workpiece Hole Code	060 065 070 075 080 085 090	060 065 070 075 080 085 090	090 095 100 105 110 115 120 125 130	130 135 140 145 150 155 160
Hyd. Pressure 7 MPa	—	1.70	—	4.5
Hyd. Pressure 6 MPa	—	1.44	—	3.9
Hyd. Pressure 5 MPa	—	1.18	—	3.2
Hyd. Pressure 4 MPa	0.92	1.5	2.5	4.6
Hyd. Pressure 3 MPa	0.66	1.1	1.9	3.4
Hyd. Pressure 2 MPa	0.40	0.7	1.2	2.2
Hyd. Pressure 1.5 MPa	0.27	0.5	0.9	1.6
Clamping Force Calculation Formula ^{※1} kN	$F = 0.26 \times P - 0.12$	$F = 0.4 \times P - 0.1$	$F = 0.67 \times P - 0.15$	$F = 1.21 \times P - 0.24$
Max. Operating Pressure MPa	4.0	7.0	4.0	7.0

7 Gripper (Workpiece Hole) Shape : **F** (Without Serration)


Model No.	SFB0600-□□-□-□- F	SFB1000-□□-□-□- F	SFB2000-□□-□-□- F	SFB3000-□□-□-□- F
5 Workpiece Hole Code	060 065 070 075 080 085 090	060 065 070 075 080 085 090	090 095 100 105 110 115 120 125 130	130 135 140 145 150 155 160
Hyd. Pressure 7 MPa	—	0.44	—	1.3
Hyd. Pressure 6 MPa	—	0.38	—	1.1
Hyd. Pressure 5 MPa	—	0.30	—	0.9
Hyd. Pressure 4 MPa	0.23	0.40	0.7	1.3
Hyd. Pressure 3 MPa	0.17	0.30	0.5	0.95
Hyd. Pressure 2 MPa	0.10	0.20	0.3	0.60
Hyd. Pressure 1.5 MPa	0.07	0.10	0.2	0.45
Clamping Force Calculation Formula ^{※1} kN	$F = 0.065 \times P - 0.025$	$F = 0.12 \times P - 0.05$	$F = 0.2 \times P - 0.1$	$F = 0.34 \times P - 0.07$
Max. Operating Pressure MPa	4.0	7.0	4.0	7.0

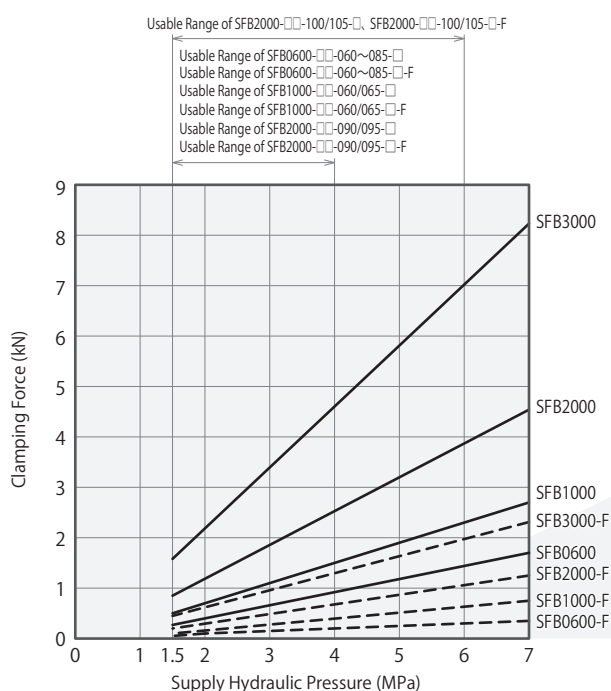

Notes:

- The table and graph show the relationship between clamping force (kN) and supply hydraulic pressure (MPa).
- Clamping force shows a pressing force against the seating surface.
- Thin wall around the workpiece hole can be deformed by clamping action, and the clamping force will not fill the specification.
- Clamping force of **F**: Without Serration shows the calculated value when the friction coefficient of workpiece and gripper is $\mu 0.1$.


※1. F : Clamping Force (kN), P : Supply Hydraulic Pressure (MPa)

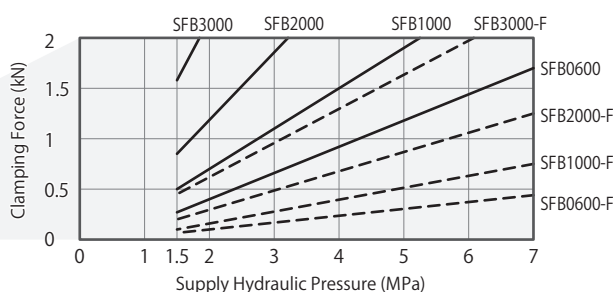

382

※The drawing shows the released state of SFB0600-G0A-□.

Workpiece Lifting Stroke ※3
(Clearance from Seating Surface when Releasing)

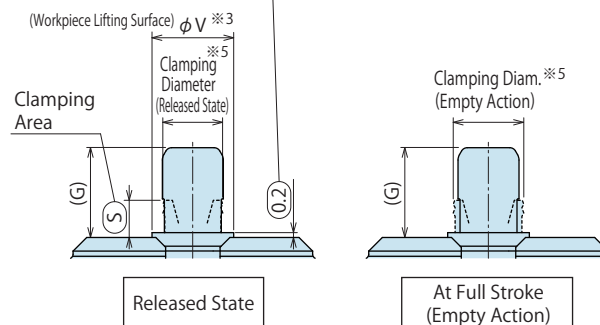

Technical drawing of a mechanical part (Fig. 10.10) showing a cross-section with dimensions: G , 15° , (Width 5 Slot Part), AA , 25° , $H \pm 0.005$, and a diameter of $\phi 22$.



- ※1. The workpiece must be resting on all seating surfaces when clamping. If this is not done the workpiece can be deformed by the clamping force.
- ※2. The port names are marked on the product surface.
(HYD: Hydraulic Lock Port, FC: Seating Confirmation Air Port, BLOW: Air Blow Port, SENSOR: Release Confirmation Air Port)
Continuously supply air pressure to the air blow port and the seating confirmation air port.
- ※3. The numerical value is only for the workpiece lifting option.
- ※4. Refer to Seating Height: Standard for unlisted dimensions.
- ※5. For -T: Taper Hole model, the first gripper ridge is the reference diameter.

Blind Hole (Straight Hole)

Workpiece Hole Diameter: $\phi d \begin{smallmatrix} +0.7 \\ -0.3 \end{smallmatrix}$

Depth: $G+0.5$ or more

Selection Rules:

- When Selecting **A**: C0.3 or less
- When Selecting **N**: C0.5 or less

Through Hole (Straight Hole)

Workpiece Hole Diameter: $\phi d \begin{smallmatrix} +0.7 \\ -0.3 \end{smallmatrix}$

Depth: S or more

Surface Y: ≈ 6

Selection Rules:

- When Selecting **A**: C0.3 or less
- When Selecting **N**: C0.5 or less

Taper Hole

Workpiece Hole Mouth Diameter ϕd

Depth: $G+0.5$ or more

Slope Angle: 3° or less

Selection Rules:


- When Selecting **A**: C0.3 or less
- When Selecting **N**: C0.5 or less

Refer to P.378 for tolerance.

- Notes:


1. Thin wall around the workpiece hole could be deformed by clamping action, and clamping force will not fill the specification.
Please make sure to test the clamping function before using and adjust to the appropriate supply of pressure.
- ※6. When the clamp head is sticking above the surface Y of the workpiece, please make sure there is no interference with the clamp cylinders during machining.

Machining Dimensions of Mounting Area

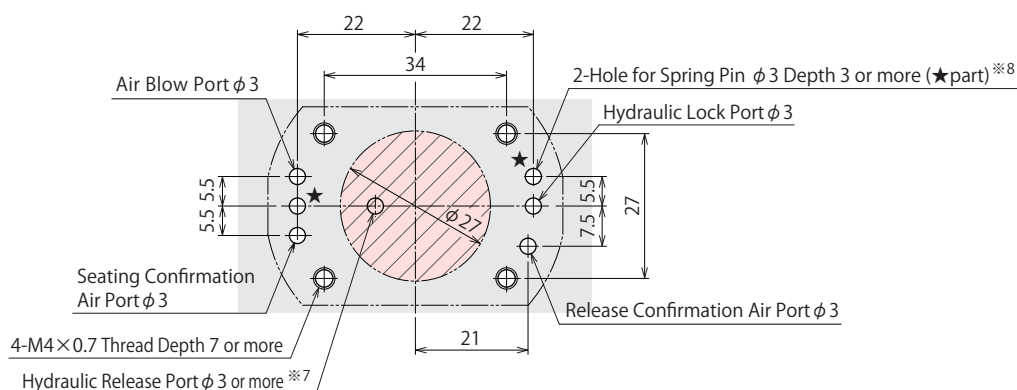


Notes :

- There should be no burrs at the hole contact surface.
- The mounting surface should be machined with a surface roughness of Rz6.3 or better.

※7. Please make a hydraulic release port within the range of .

※8. The distance accuracy for machining the holes for spring pins (2 parts marked with ★) should be within ± 0.1 mm.

Model No. Indication

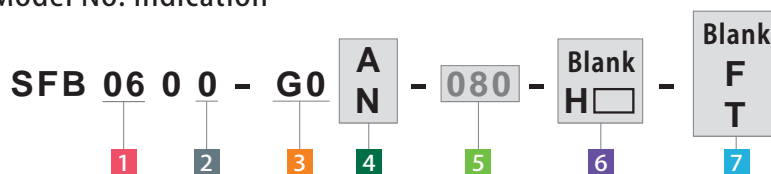

- Body Size (When selecting 06)
- Design No.
- Mounting Methods (When selecting G0)
- Workpiece Lifting Option
- Workpiece Hole Code
- Seating Height Dimension
- Shape of Gripper (Workpiece Hole)

External Dimensions and Machining Dimensions for Mounting (mm)

Model No.		SFB0600-G0□-□-□-□						
	5 Workpiece Hole Code	060	065	070	075	080	085	090
Workpiece Hole Diam. ϕ d	7 Blank, F ※11	6 ± 0.3	6.5 ± 0.3	7 ± 0.3	7.5 ± 0.3	8 ± 0.3	8.5 ± 0.3	9 ± 0.3
Clamping Diameter	at Released	5.5	6	6.5	7	7.5	8	8.5
	Empty Action	7.2	7.7	8.2	8.7	9.2	9.7	10.2
Clamping Diameter	at Released	-	5.7	6.2	6.7	7.2	7.7	8.2
	Empty Action	-	7.4	7.9	8.4	8.9	9.4	9.9
Allowable Offset (Floating Clearance of Expanding Area) ※9		± 0.5						
Full Stroke		4.2						
Workpiece Pulling Stroke		1.0						
Workpiece Lifting Stroke ※10		0.2						
7 Shape of Gripper Blank, F	G	8	8	8	8	8	8	9.5
	S	3.3	3.3	3.3	3.3	3.3	3.3	4.3
	U	5.6	6.1	6.6	7.1	7.6	8.1	8.6
7 Shape of Gripper T	G	-	8	8	8	8	8	9.5
	S	-	3.3	3.3	3.3	3.3	3.3	4.3
	U	-	6	6.5	7	7.5	8	8.6
Mx		5	5.6	5.6	5.6	5.6	6.4	7
V		7.5	8	8.5	9	9.5	10	11.5
W		11.5	12.5	12.5	13.5	13.5	14.5	15.5
X		19.5	19.5	19.5	19.5	19.5	19.5	20.5

Notes : ※ 9. The clamping part is an adjusting structure and the clamping operation is done by locating the workpiece hole. The numerical value in the table shows the amount of tolerance value of single clamp. Please consider the center distance accuracy of each clamping installation part and each workpiece hole when used with other location clamps / location cylinders, or when using more than two of these products.

※ 10. Workpiece lifting stroke is the function only for lifting option.

※ 11. For -T: Taper Hole option, the allowable tolerance of the hole mouth diameter differs depending on the slope angle. (Refer to P.378.)

6 Seating Height Dimension		Standard Height	Specifying Seating Height					
3 Mounting Method		Blank	H45	H50	H55	H60	H65	H70
In case of G0 (Mounting Length 0mm)	H	40	45	50	55	60	65	70
	AA	-	6.8	11.8	16.8	21.8	26.8	31.8
	Weight kg	0.4	0.4	0.5	0.5	0.5	0.5	0.5

High-Power
Series

Pneumatic Series

Hydraulic Series

Valve / Coupler
Hydraulic Unit

Manual Operation
Accessories

Cautions / Others

Hole Clamp

SFB

SFC

Swing Clamp

LHA

LHC

LHS

LHW

LG/LT

TLA-2

TLB-2

TLA-1

Link Clamp

LKA

LKC

LKW

LJ/LM

TMA-2

TMA-1

Work Support

LD

LC

TNC

TC

Air Sensing

Lift Cylinder

LLW

Linear Cylinder /

Compact Cylinder

LL

LLR

LLU

DP

DR

DS

DT

Block Cylinder

DBA/DBC

Centering Vise

FVA

FVD

FVC

Control Valve

BZL

BZT

BZX/JZG

BZS

Pallet Clamp

VS/VT

Expansion

Locating Pin

VFL/VFM

VFJ/VFK

Pull Stud Clamp

FP

FQ


Customized

Spring Cylinder

DWA/DWB

External Dimensions


※The drawing shows the released state of SFB0600-M1A-□.

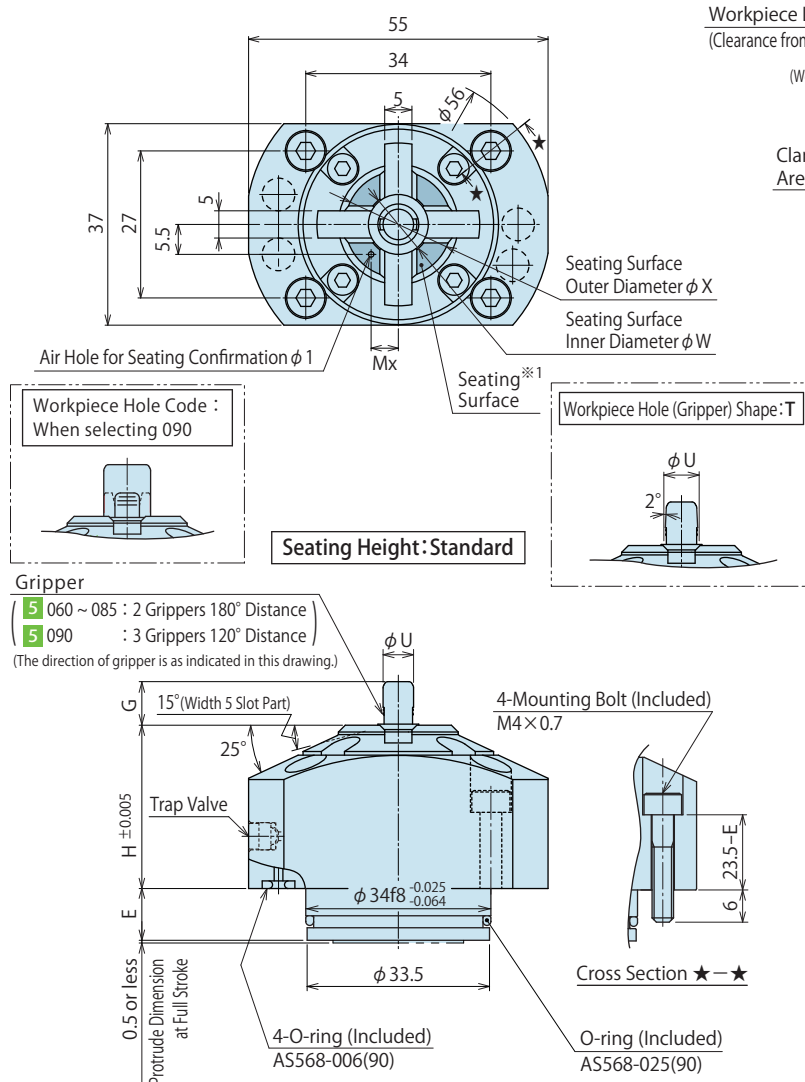


Expanding Area Detail

Workpiece Lifting Stroke ※4

(Clearance from Seating Surface when Releasing)

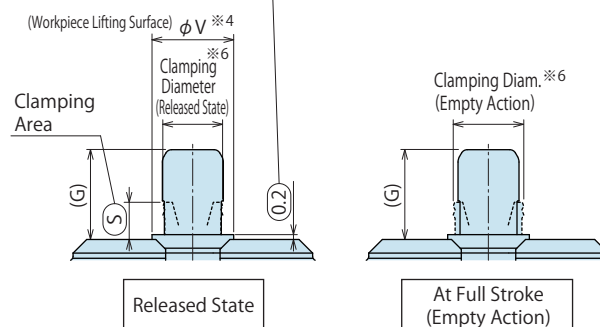


Specifying Seating Height ※5

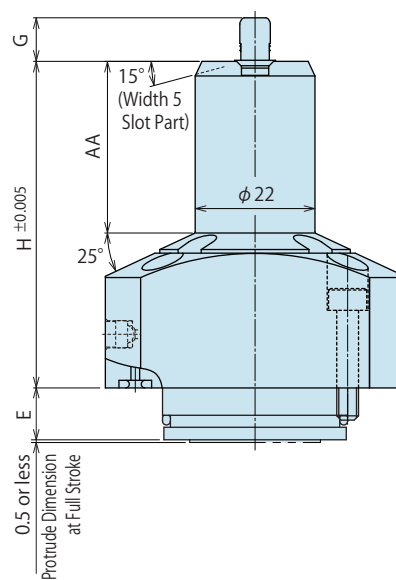

Notes:

- ※1. The workpiece must be resting on all seating surfaces when clamping. If this is not done the workpiece can be deformed by the clamping force.
- ※2. Use jack bolts to remove the product, keeping it parallel to the mounting surface.
- ※3. The port names are marked on the product surface. (HYD: Hydraulic Lock Port, FC: Seating Confirmation Air Port, BLOW: Air Blow Port, SENSOR: Release Confirmation Air Port) Continuously supply air pressure to the air blow port and the seating confirmation air port.
- ※4. The numerical value is only for the workpiece lifting option.
- ※5. Refer to Seating Height: Standard for unlisted dimensions.
- ※6. For -T: Taper Hole option, the first gripper ridge is the reference diameter.


Workpiece (Pallet) Hole Dimensions

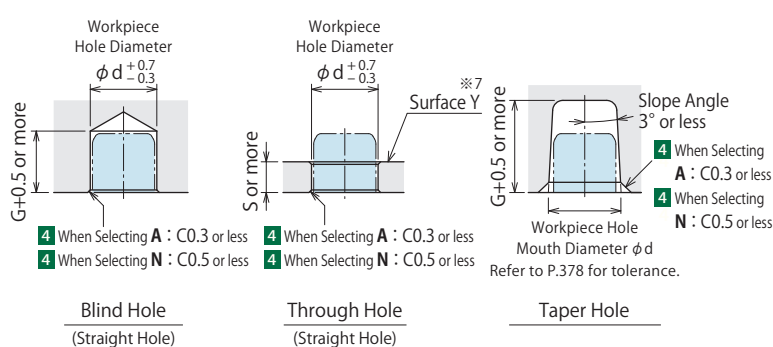

Notes:


1. Thin wall around the workpiece hole could be deformed by clamping action, and clamping force will not fill the specification. Please make sure to test the clamping function before using and adjust to the appropriate supply of pressure.
- ※7. When the clamp head is sticking above the surface Y of the workpiece, please make sure there is no interference with the clamp cylinders during machining.

Machining Dimensions of Mounting Area

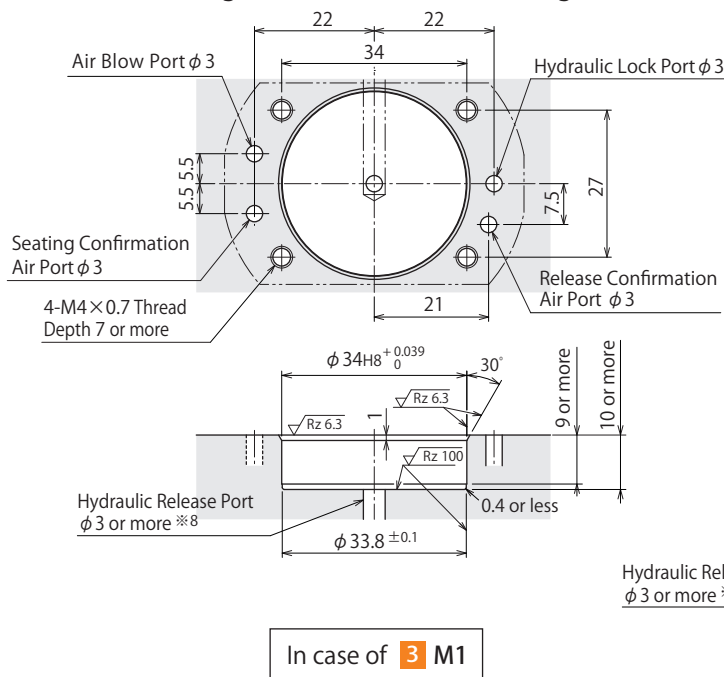


Notes :

- There should be no burrs at the hole contact surface.
- Please contact us when adding a spacer.
- Release hydraulic pressure can be supplied from the bottom surface in case of **3 M1**, and from the side or bottom surface in case of **3 M2** to the main body mounting hole. Please make a hydraulic release port within \blacklozenge area in the case supplied from the side.

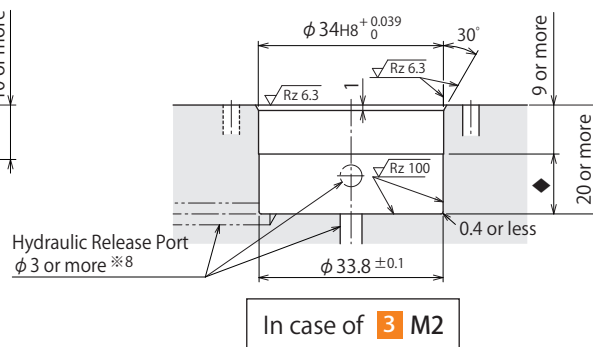

Model No. Indication

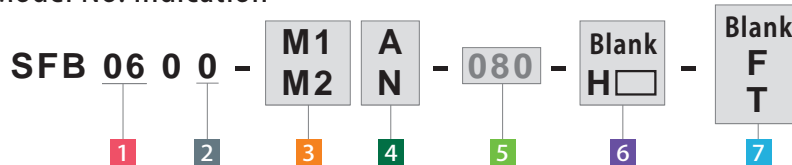

- Body Size (When selecting 06)
- Design No.
- Mounting Methods (When selecting M1/M2)
- Workpiece Lifting Option
- Workpiece Hole Code
- Seating Height Dimension
- Shape of Gripper (Workpiece Hole)

External Dimensions and Machining Dimensions for Mounting

Model No.		SFB0600-M□□-□□□□						
5 Workpiece Hole Code		060	065	070	075	080	085	090
Workpiece Hole Diam. φ d 7 Blank, F ※11		6 +0.7 -0.3	6.5 +0.7 -0.3	7 +0.7 -0.3	7.5 +0.7 -0.3	8 +0.7 -0.3	8.5 +0.7 -0.3	9 +0.7 -0.3
Clamping Diameter 7 Blank, F	at Released	5.5	6	6.5	7	7.5	8	8.5
	Empty Action	7.2	7.7	8.2	8.7	9.2	9.7	10.2
Clamping Diameter 7 T	at Released	—	5.7	6.2	6.7	7.2	7.7	8.2
	Empty Action	—	7.4	7.9	8.4	8.9	9.4	9.9
Allowable Offset (Floating Clearance of Expanding Area) ※9					±0.5			
Full Stroke					4.2			
Workpiece Pulling Stroke					1.0			
Workpiece Lifting Stroke ※10					0.2			
7 Shape of Gripper Blank, F	G	8	8	8	8	8	8	9.5
	S	3.3	3.3	3.3	3.3	3.3	3.3	4.3
	U	5.6	6.1	6.6	7.1	7.6	8.1	8.6
7 Shape of Gripper T	G	—	8	8	8	8	8	9.5
	S	—	3.3	3.3	3.3	3.3	3.3	4.3
	U	—	6	6.5	7	7.5	8	8.6
Mx		5	5.6	5.6	5.6	5.6	6.4	7
V		7.5	8	8.5	9	9.5	10	11.5
W		11.5	12.5	12.5	13.5	13.5	14.5	15.5
X		19.5	19.5	19.5	19.5	19.5	19.5	20.5

Notes : $\times 9$. The clamping part is an adjusting structure and the clamping operation is done by locating the workpiece hole. The numerical value in the table shows the amount of tolerance value of single clamp. Please consider the center distance accuracy of each clamping installation part and each workpiece hole when used with other location clamps / location cylinders, or when using more than two of these products.

$\times 10$. Workpiece lifting stroke is the function only for lifting option.

$\times 11$. For -T: Taper Hole option, the allowable tolerance of the hole mouth diameter differs depending on the slope angle. (Refer to P.378.)

											(mm)
6 Seating Height Dimension		Standard Height	Specifying Seating Height								
3 Mounting Method		Blank	H25	H30	H35	H40	H45	H50	H55	H60	
In case of M1 (Mounting Length 10mm)	H	30	—	—	35	40	45	50	55	60	
	E	9.5	—	—	9.5	9.5	9.5	9.5	9.5	9.5	
	AA	—	—	—	6.8	11.8	16.8	21.8	26.8	31.8	
	Weight kg	0.3	—	—	0.4	0.4	0.4	0.4	0.4	0.4	
In case of M2 (Mounting Length 20mm)	H	20	25	30	35	40	45	50	—	—	
	E	19.5	19.5	19.5	19.5	19.5	19.5	19.5	—	—	
	AA	—	6.8	11.8	16.8	21.8	26.8	31.8	—	—	
	Weight ka	0.3	0.3	0.3	0.3	0.3	0.4	0.4	—	—	

High-Power Series

Pneumatic Series

Hydraulic Series

Valve / Coupler Hydraulic Unit

Manual Operation Accessories

Cautions / Others

Hole Clamp

SFB

SFC

Swing Clamp

LHA

LHC

LHS

LHW

LG/LT

TLA-2

TLB-2

TLA-1

Link Clamp

LKA

LKC

LKW

LJ/LM

TMA-2

TMA-1

Work Support

LD

LC

TNC

TC

Air Sensing

Lift Cylinder

LLW

Linear Cylinder / Compact Cylinder

LL

LLR

LLU

DP

DR

DS

DT

Block Cylinder

DBA/DBC

Centering Vise

FVA

FVD

FVC

Control Valve

BZL

BZT

BZX/JZG

BZS

Pallet Clamp

VS/VT

Expansion

Locating Pin

VFL/VFM

VFJ/VFK

Pull Stud Clamp

FP

FQ

Customized

Spring Cylinder

DWA/DWB


※The drawing shows the released state of SFB1000-G0A-□.



Workpiece Lifting Stroke ※3



(Clamp Rod Diameter)

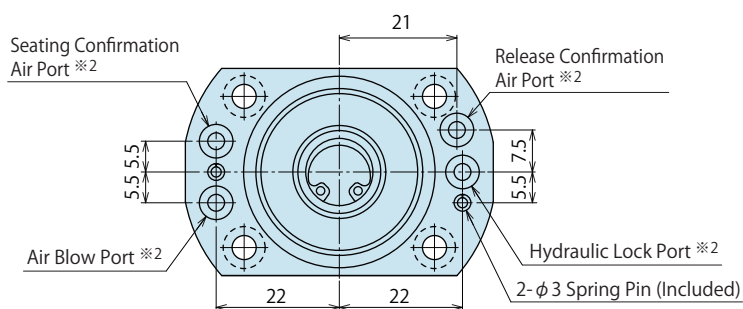


Notes:

- ※1. The workpiece must be resting on all seating surfaces when clamping. If this is not done the workpiece can be deformed by the clamping force.
- ※2. The port names are marked on the product surface.
(HYD: Hydraulic Lock Port, FC: Seating Confirmation Air Port, BLOW: Air Blow Port, SENSOR: Release Confirmation Air Port)
Continuously supply air pressure to the air blow port and the seating confirmation air port.
- ※3. The numerical value is only for the workpiece lifting option.
- ※4. Refer to Seating Height: Standard for unlisted dimensions.
- ※5. For -T: Taper Hole model, the first gripper ridge is the reference diameter.




1. Thin wall around the workpiece hole could be deformed by clamping action, and clamping force will not fill the specification.
Please make sure to test the clamping function before using and adjust to the appropriate supply of pressure.
- ※6. When the clamp head is sticking above the surface Y of the workpiece, please make sure there is no interference with the clamp cylinders during machining.

Machining Dimensions of Mounting Area

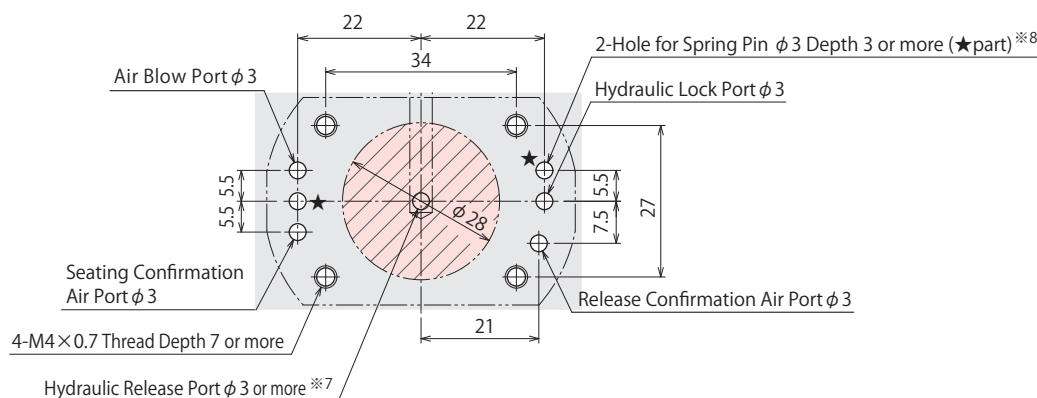


Notes :

- There should be no burrs at the hole contact surface.
- The mounting surface should be machined with a surface roughness of Rz6.3 or better.

※7. Please make a hydraulic release port within the range of .

※8. The distance accuracy for machining the holes for spring pins (2 parts marked with ★) should be within ±0.1mm.

Model No. Indication

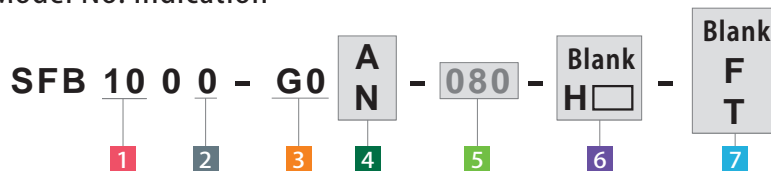

- Body Size (When selecting 10)
- Design No.
- Mounting Methods (When selecting G0)
- Workpiece Lifting Option
- Workpiece Hole Code
- Seating Height Dimension
- Shape of Gripper (Workpiece Hole)

External Dimensions and Machining Dimensions for Mounting (mm)

Model No.		SFB1000-G0□-□-□-□						
	5 Workpiece Hole Code	060	065	070	075	080	085	090
Workpiece Hole Diam. φd	7 Blank, F ※11	6 ^{+0.7} _{-0.3}	6.5 ^{+0.7} _{-0.3}	7 ^{+0.7} _{-0.3}	7.5 ^{+0.7} _{-0.3}	8 ^{+0.7} _{-0.3}	8.5 ^{+0.7} _{-0.3}	9 ^{+0.7} _{-0.3}
Clamping Diameter	at Released	5.5	6	6.5	7	7.5	8	8.5
	Empty Action	7.2	7.7	8.2	8.7	9.2	9.7	10.2
Clamping Diameter	at Released	-	5.4	5.9	6.4	6.85	7.35	7.85
	Empty Action	-	7.1	7.6	8.1	8.55	9.05	9.55
Allowable Offset (Floating Clearance of Expanding Area) ※9		±0.5						
Full Stroke		4.2						
Workpiece Pulling Stroke		1.0						
Workpiece Lifting Stroke ※10		0.2						
7 Shape of Gripper Blank, F	G	9	9	9	10	10	10	10
	S	5.5	5.5	5.5	6	6	6	6
	U	5.55	6.05	6.55	7.05	7.55	8.05	8.55
7 Shape of Gripper T	G	-	9	9	9	10	10	10
	S	-	5.5	5.5	5.5	6	6	6
	U	-	5.45	5.95	6.45	6.9	7.4	7.9
Mx		5.6	5.6	5.6	6.4	6.4	7	7
V		8.5	9	9.5	10	10.5	11	11.5
W		12.5	13.5	13.5	14.5	14.5	15.5	15.5
X		19.5	19.5	19.5	19.5	19.5	20.5	20.5

Notes : ※9. The clamping part is an adjusting structure and the clamping operation is done by locating the workpiece hole. The numerical value in the table shows the amount of tolerance value of single clamp. Please consider the center distance accuracy of each clamping installation part and each workpiece hole when used with other location clamps / location cylinders, or when using more than two of these products.

※10. Workpiece lifting stroke is the function only for lifting option.

※11. For -T: Taper Hole option, the allowable tolerance of the hole mouth diameter differs depending on the slope angle. (Refer to P.378.)

6 Seating Height Dimension		Standard Height						
3 Mounting Method		Specifying Seating Height						
		Blank	H45	H50	H55	H60	H65	H70
In case of G0 (Mounting Length 0mm)	H	40	45	50	55	60	65	70
	AA	-	6.8	11.8	16.8	21.8	26.8	31.8
	Weight kg	0.4	0.4	0.5	0.5	0.5	0.5	0.5

High-Power
Series

Pneumatic Series

Hydraulic Series

Valve / Coupler
Hydraulic Unit

Manual Operation
Accessories

Cautions / Others

Hole Clamp

SFB

SFC

Swing Clamp

LHA

LHC

LHS

LHW

LG/LT

TLA-2

TLB-2

TLA-1

Link Clamp

LKA

LKC

LKW

LJ/LM

TMA-2

TMA-1

Work Support

LD

LC

TNC

TC

Air Sensing

Lift Cylinder

LLW

Linear Cylinder /

Compact Cylinder

LL

LLR

LLU

DP

DR

DS

DT

Block Cylinder

DBA/DBC

Centering Vise

FVA

FVD

FVC

Control Valve

BZL

BZT

BZX/JZG

BZS

Pallet Clamp

VS/VT

Expansion

Locating Pin

VFL/VFM

VFJ/VFK

Pull Stud Clamp

FP

FQ


Customized

Spring Cylinder

DWA/DWB

External Dimensions


※The drawing shows the released state of SFB1000-M1A-□.

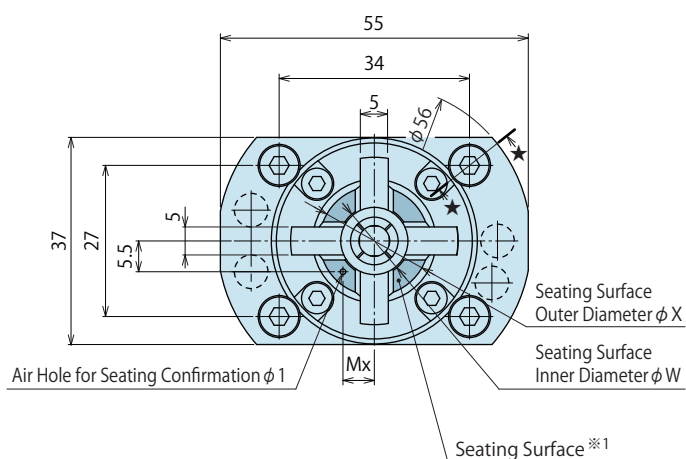


Expanding Area Detail

Workpiece Lifting Stroke ※4


(Clearance from Seating Surface when Releasing)

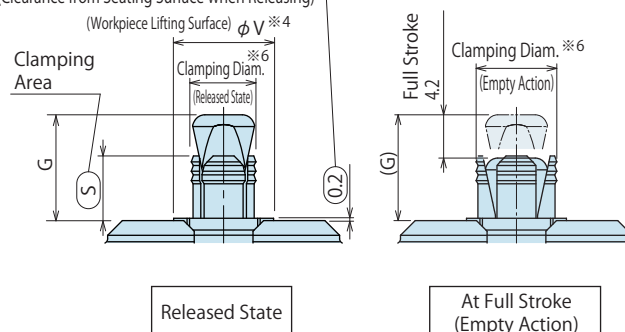

Seating Height: Standard

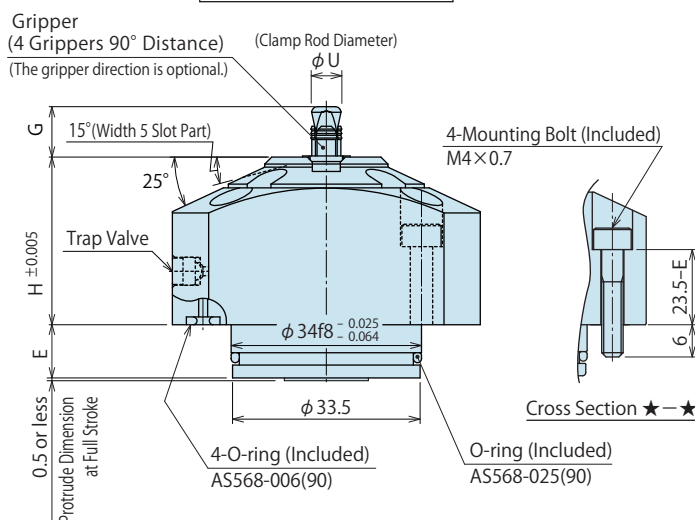


Specifying Seating Height ※5

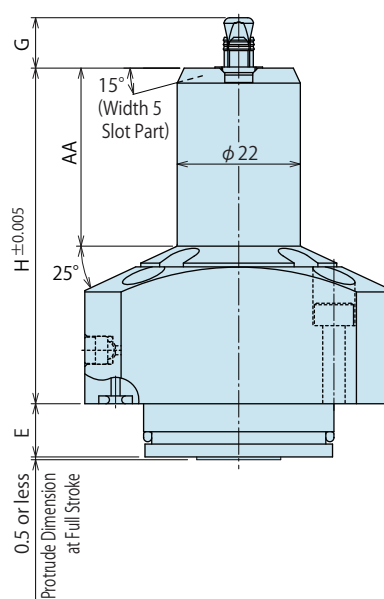

Notes:

- ※1. The workpiece must be resting on all seating surfaces when clamping. If this is not done the workpiece can be deformed by the clamping force.
- ※2. Use jack bolts to remove the product, keeping it parallel to the mounting surface.
- ※3. The port names are marked on the product surface. (HYD: Hydraulic Lock Port, FC: Seating Confirmation Air Port, BLOW: Air Blow Port, SENSOR: Release Confirmation Air Port) Continuously supply air pressure to the air blow port and the seating confirmation air port.
- ※4. The numerical value is only for the workpiece lifting option.
- ※5. Refer to Seating Height: Standard for unlisted dimensions.
- ※6. For -T: Taper Hole option, the first gripper ridge is the reference diameter.


Workpiece (Pallet) Hole Dimensions

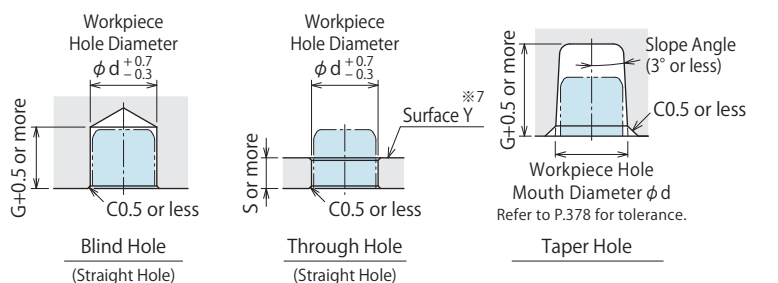

Notes:


1. Thin wall around the workpiece hole could be deformed by clamping action, and clamping force will not fill the specification. Please make sure to test the clamping function before using and adjust to the appropriate supply of pressure.
- ※7. When the clamp head is sticking above the surface Y of the workpiece, please make sure there is no interference with the clamp cylinders during machining.

Machining Dimensions of Mounting Area

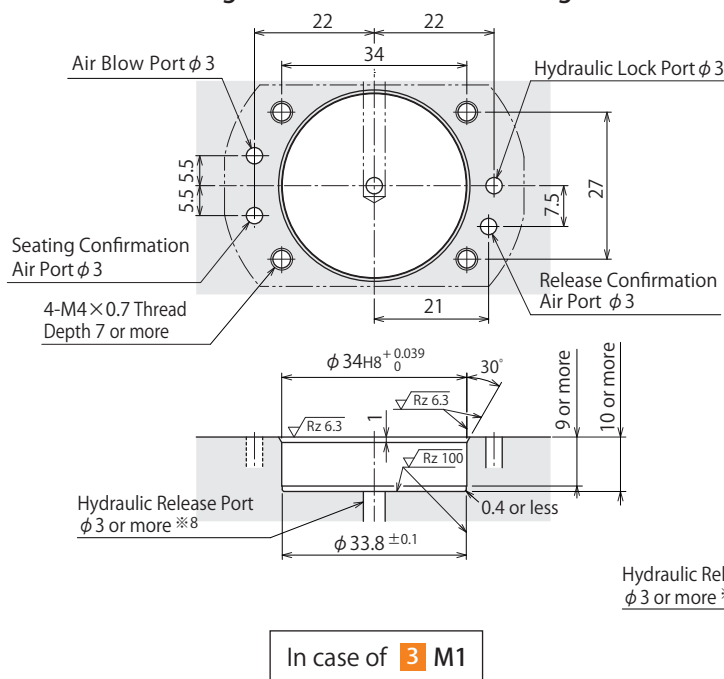


Notes :

- There should be no burrs at the hole contact surface.
- Please contact us when adding a spacer.
- Release hydraulic pressure can be supplied from the bottom surface in case of **3 M1**, and from the side or bottom surface in case of **3 M2** to the main body mounting hole. Please make a hydraulic release port within \blacklozenge area in the case supplied from the side.

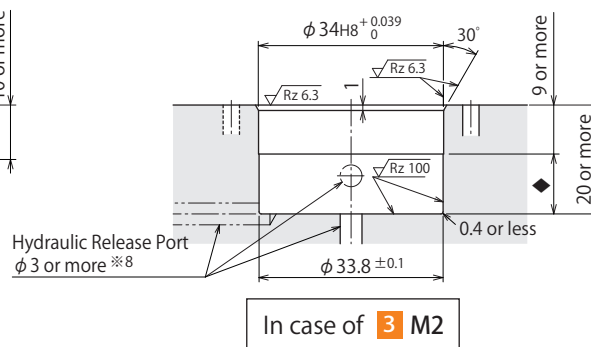

Model No. Indication

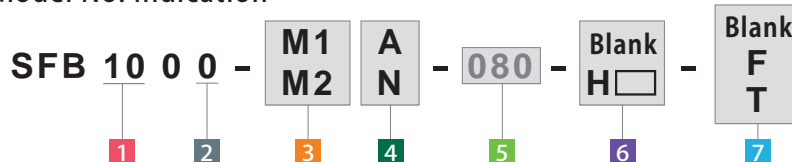

- Body Size (When selecting 10)
- Design No.
- Mounting Methods (When selecting M1/M2)
- Workpiece Lifting Option
- Workpiece Hole Code
- Seating Height Dimension
- Shape of Gripper (Workpiece Hole)

External Dimensions and Machining Dimensions for Mounting

Model No.		SFB1000-M□□-□□□□						
	5 Workpiece Hole Code	060	065	070	075	080	085	090
Workpiece Hole Diam. φd	7 Blank, F ※11	6 ±0.7 0.3	6.5 ±0.7 0.3	7 ±0.7 0.3	7.5 ±0.7 0.3	8 ±0.7 0.3	8.5 ±0.7 0.3	9 ±0.7 0.3
Clamping Diameter	at Released	5.5	6	6.5	7	7.5	8	8.5
	Empty Action	7.2	7.7	8.2	8.7	9.2	9.7	10.2
Clamping Diameter	at Released	-	5.4	5.9	6.4	6.85	7.35	7.85
	Empty Action	-	7.1	7.6	8.1	8.55	9.05	9.55
Allowable Offset (Floating Clearance of Expanding Area) ※9		±0.5						
Full Stroke		4.2						
Workpiece Pulling Stroke		1.0						
Workpiece Lifting Stroke ※10		0.2						
7 Shape of Gripper Blank, F	G	9	9	9	10	10	10	10
	S	5.5	5.5	5.5	6	6	6	6
	U	5.55	6.05	6.55	7.05	7.55	8.05	8.55
7 Shape of Gripper T	G	-	9	9	9	10	10	10
	S	-	5.5	5.5	5.5	6	6	6
	U	-	5.45	5.95	6.45	6.9	7.4	7.9
Mx		5.6	5.6	5.6	6.4	6.4	7	7
V		8.5	9	9.5	10	10.5	11	11.5
W		12.5	13.5	13.5	14.5	14.5	15.5	15.5
X		19.5	19.5	19.5	19.5	19.5	20.5	20.5

Notes : ※ 9. The clamping part is an adjusting structure and the clamping operation is done by locating the workpiece hole. The numerical value in the table shows the amount of tolerance value of single clamp. Please consider the center distance accuracy of each clamping installation part and each workpiece hole when used with other location clamps / location cylinders, or when using more than two of these products.

※ 10. Workpiece lifting stroke is the function only for lifting option.

※ 11. For -T: Taper Hole option, the allowable tolerance of the hole mouth diameter differs depending on the slope angle. (Refer to P.378.)

6 Seating Height Dimension		Standard Height	Specifying Seating Height							
3 Mounting Method		Blank	H25	H30	H35	H40	H45	H50	H55	H60
In case of M1 (Mounting Length 10mm)	H	30	-	-	35	40	45	50	55	60
	E	9.5	-	-	9.5	9.5	9.5	9.5	9.5	9.5
	AA	-	-	-	6.8	11.8	16.8	21.8	26.8	31.8
	Weight kg	0.3	-	-	0.4	0.4	0.4	0.4	0.4	0.4
In case of M2 (Mounting Length 20mm)	H	20	25	30	35	40	45	50	-	-
	E	19.5	19.5	19.5	19.5	19.5	19.5	19.5	-	-
	AA	-	6.8	11.8	16.8	21.8	26.8	31.8	-	-
	Weight kg	0.3	0.3	0.3	0.3	0.3	0.4	0.4	-	-

High-Power
Series

Pneumatic Series

Hydraulic Series

Valve / Coupler
Hydraulic UnitManual Operation
Accessories

Cautions / Others

Hole Clamp

SFB

SFC

Swing Clamp

LHA

LHC

LHS

LHW

LG/LT

TLA-2

TLB-2

TLA-1

Link Clamp

LKA

LKC

LKW

LJ/LM

TMA-2

TMA-1

Work Support

LD

LC

TNC

TC

Air Sensing

Lift Cylinder

LLW

Linear Cylinder /

Compact Cylinder

LL

LLR

LLU

DP

DR

DS

DT

Block Cylinder

DBA/DBC

Centering Vise

FVA

FVD

FVC

Control Valve

BZL

BZT

BZX/JZG

BZS

Pallet Clamp

VS/VT

Expansion

Locating Pin

VFL/VFM

VFJ/VFK

Pull Stud Clamp

FP

FQ

Customized




Spring Cylinder

DWA/DWB


External Dimensions

※The drawing shows the released state of SFB2000-G0A-□.

※ Expanding Area Detail

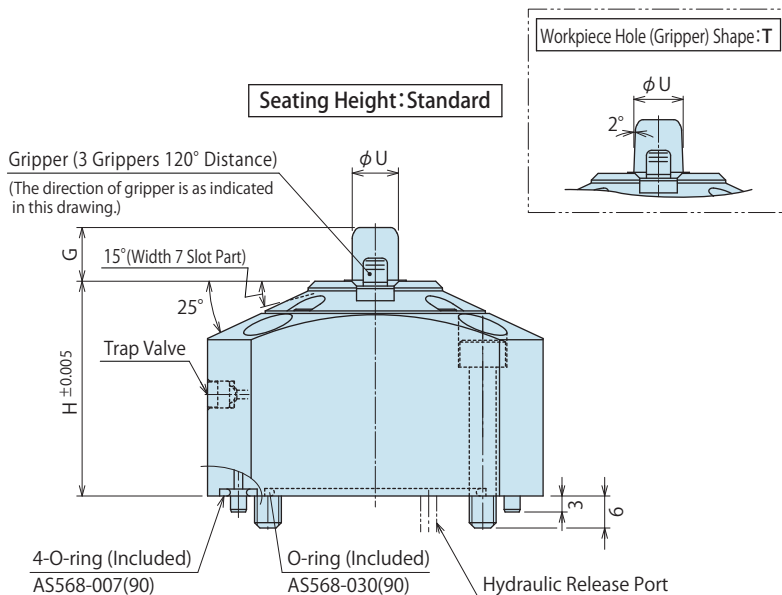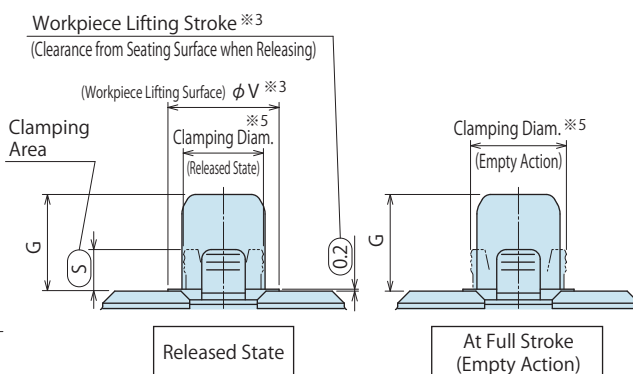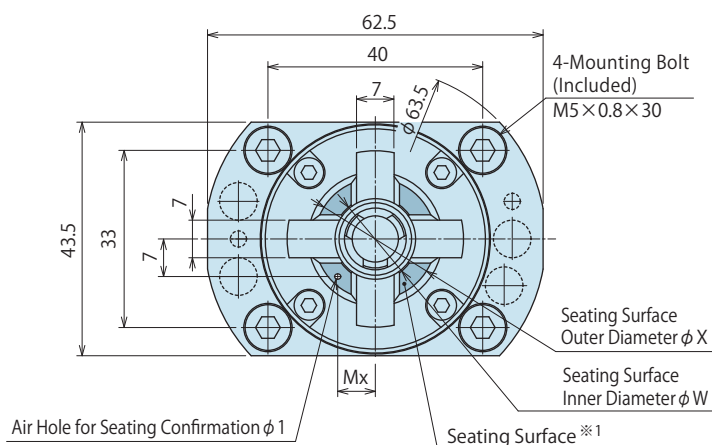


Specifying Seating Height $\phi 4$

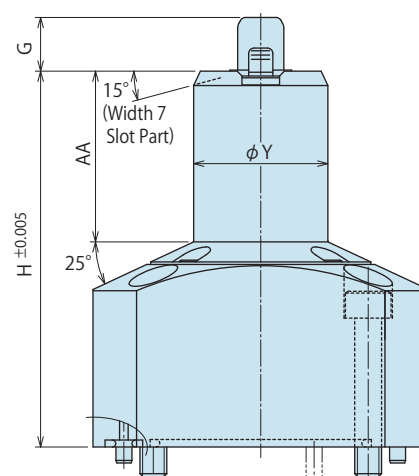

Notes:

1. The workpiece must be resting on all seating surfaces when clamping. If this is not done the workpiece can be deformed by the clamping force.
2. The port names are marked on the product surface. (HYD: Hydraulic Lock Port, FC: Seating Confirmation Air Port, BLOW: Air Blow Port, SENSOR: Release Confirmation Air Port) Continuously supply air pressure to the air blow port and the seating confirmation air port.
3. The numerical value is only for the workpiece lifting option.
4. Refer to Seating Height: Standard for unlisted dimensions.
5. For -T: Taper Hole model, the first gripper ridge is the reference diameter.

Workpiece (Pallet) Hole Dimensions

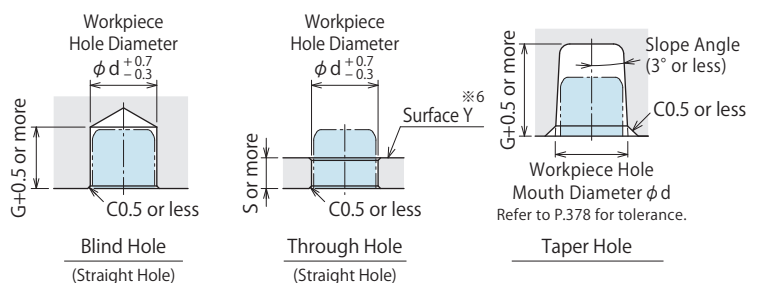






Notes:

1. Thin wall around the workpiece hole could be deformed by clamping action, and clamping force will not fill the specification. Please make sure to test the clamping function before using and adjust to the appropriate supply of pressure.
6. When the clamp head is sticking above the surface Y of the workpiece, please make sure there is no interference with the clamp cylinders during machining.


External Dimensions

※The drawing shows the released state of SFB2000-M1A-□.

✧ Expanding Area Detail

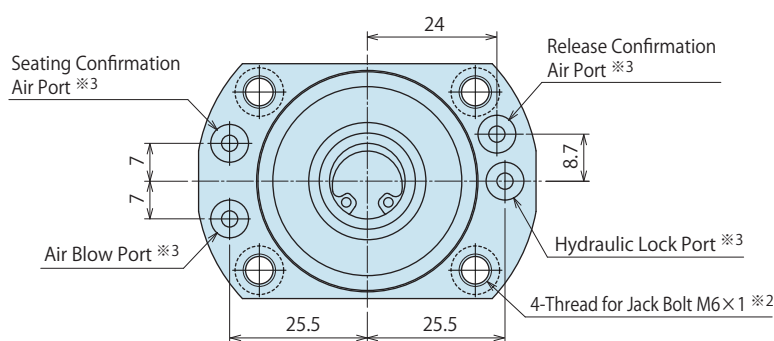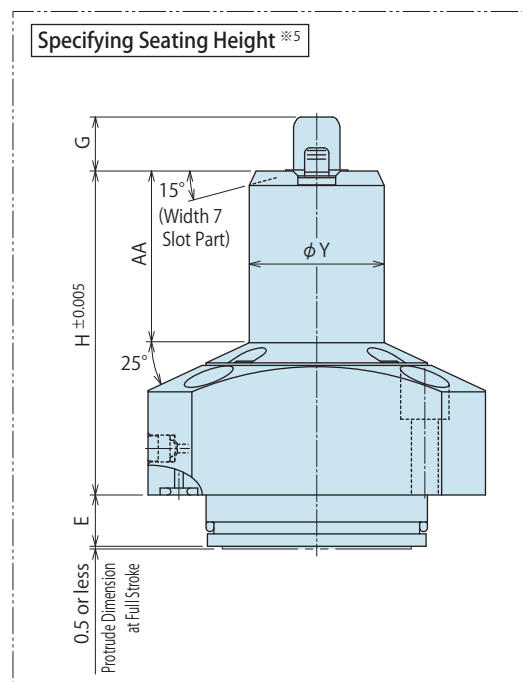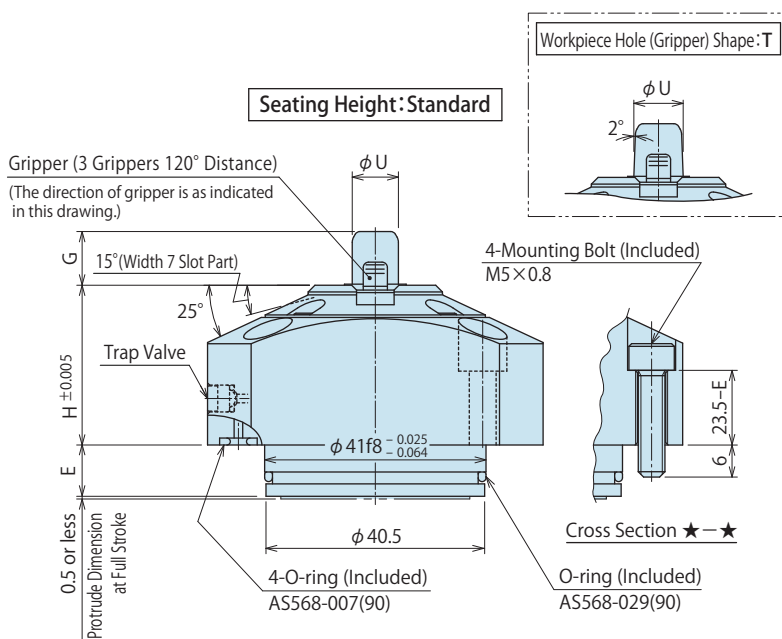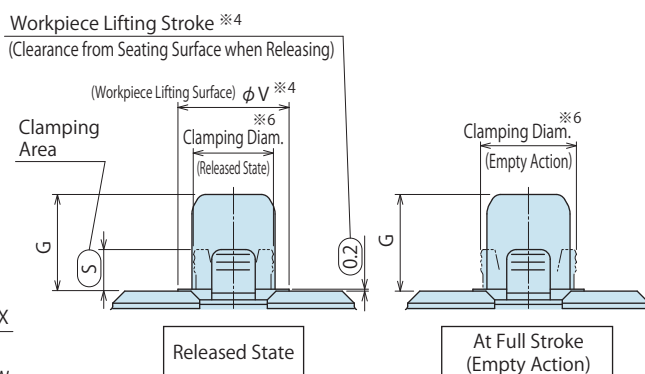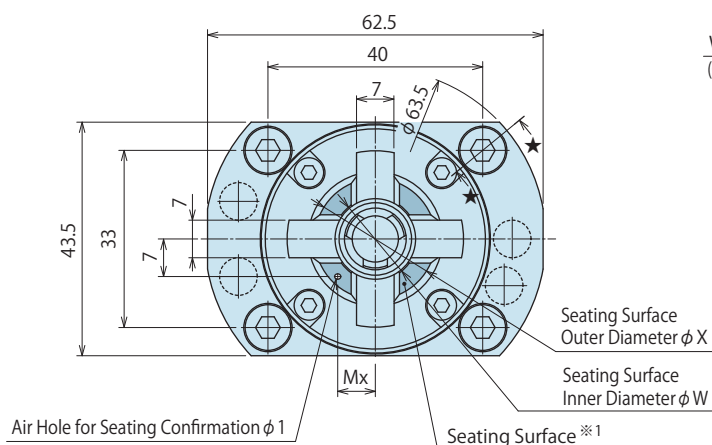

Workpiece (Pallet) Hole Dimensions

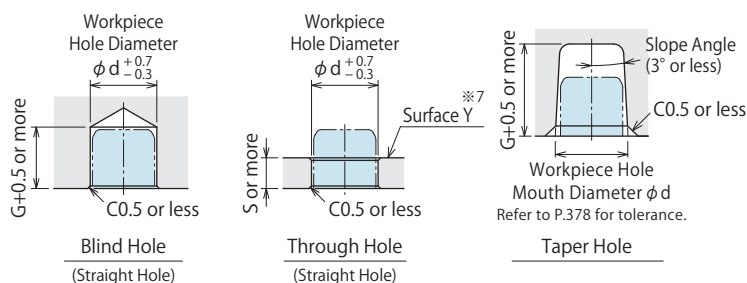


Notes:

- ※1. The workpiece must be resting on all seating surfaces when clamping. If this is not done the workpiece can be deformed by the clamping force.
- ※2. Use jack bolts to remove the product, keeping it parallel to the mounting surface.
- ※3. The port names are marked on the product surface.
(HYD: Hydraulic Lock Port, FC: Seating Confirmation Air Port, BLOW: Air Blow Port, SENSOR: Release Confirmation Air Port)
Continuously supply air pressure to the air blow port and the seating confirmation air port.
- ※4. The numerical value is only for the workpiece lifting option.
- ※5. Refer to Seating Height: Standard for unlisted dimensions.
- ※6. For -T: Taper Hole option, the first gripper ridge is the reference diameter.

Notes:


1. Thin wall around the workpiece hole could be deformed by clamping action, and clamping force will not fill the specification.
Please make sure to test the clamping function before using and adjust to the appropriate supply of pressure.
- ※7. When the clamp head is sticking above the surface Y of the workpiece, please make sure there is no interference with the clamp cylinders during machining.

Machining Dimensions of Mounting Area

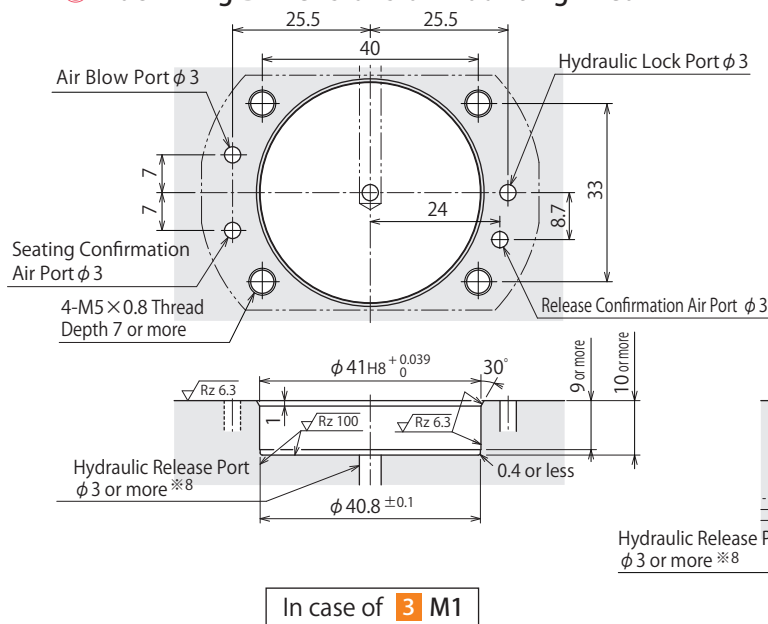


Notes :

- There should be no burrs at the hole contact surface.
- Please contact us when adding a spacer.
- Release hydraulic pressure can be supplied from the bottom surface in case of **3 M1**, and from the side or bottom surface in case of **3 M2** to the main body mounting hole. Please make a hydraulic release port within \diamond area in the case supplied from the side.

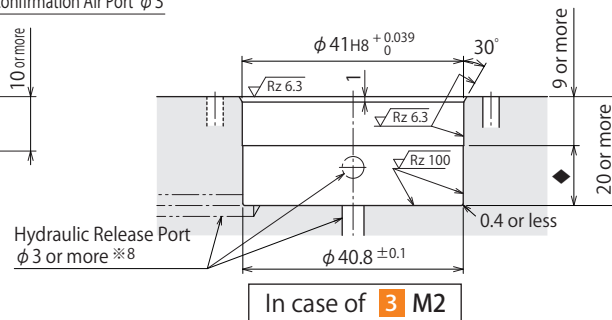

Model No. Indication

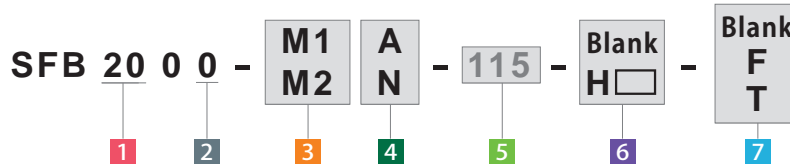

External Dimensions and Machining Dimensions for Mounting

Model No.		SFB2000-M□□-□-□□								
	5 Workpiece Hole Code	090	095	100	105	110	115	120	125	130
Workpiece Hole Diam. ϕ d	7 Blank, F $\times 11$	9 ± 0.7	9.5 ± 0.7	10 ± 0.7	10.5 ± 0.7	11 ± 0.7	11.5 ± 0.7	12 ± 0.7	12.5 ± 0.7	13 ± 0.7
Clamping Diameter	at Released	8.5	9	9.5	10	10.5	11	11.5	12	12.5
	Empty Action	10.2	10.7	11.2	11.7	12.2	12.7	13.2	13.7	14.2
Clamping Diameter	at Released	8.2	8.5	9	9.5	9.95	10.45	10.95	11.45	11.95
	Empty Action	9.9	10.2	10.7	11.2	11.65	12.15	12.65	13.15	13.65
Allowable Offset (Floating Clearance of Expanding Area) $\times 9$		± 0.5								
Full Stroke		4.2								
Workpiece Pulling Stroke		1.0								
Workpiece Lifting Stroke $\times 10$		0.2								
7 Shape of Gripper Blank, F	G	10	10	10	11.5	11.5	11.5	11.5	11.5	11.5
	S	4.3	4.3	4.3	5.8	5.8	5.8	5.8	5.8	5.8
	U	8.6	9.1	9.6	10.1	10.6	11.1	11.6	12.1	12.6
7 Shape of Gripper T	G	10	10	10	10	11.5	11.5	11.5	11.5	11.5
	S	4.3	4.3	4.3	4.3	5.8	5.8	5.8	5.8	5.8
	U	8.6	9	9.5	10	10.4	10.9	11.4	11.9	12.4
Mx		7	7	7	7.1	7.1	7.8	7.8	9.0	9.0
V		11.5	12	12.5	13	13.5	14	14.5	15	15.5
W		15.5	16.5	16.5	17.5	17.5	18.5	18.5	19.5	19.5
X		22.5	22.5	22.5	23.5	23.5	23.5	23.5	25.5	25.5
Y		25	25	25	25	25	26	26	27	27

Notes : $\times 9$. The clamping part is an adjusting structure and the clamping operation is done by locating the workpiece hole. The numerical value in the table shows the amount of tolerance value of single clamp. Please consider the center distance accuracy of each clamping installation part and each workpiece hole when used with other location clamps / location cylinders, or when using more than two of these products.

$\times 10$. Workpiece lifting stroke is the function only for lifting option.

$\times 11$. For -T: Taper Hole option, the allowable tolerance of the hole mouth diameter differs depending on the slope angle. (Refer to P.378.)

6 Seating Height Dimension		Standard Height	Specifying Seating Height							
3 Mounting Method		Blank	H25	H30	H35	H40	H45	H50	H55	H60
In case of M1 (Mounting Length 10mm)	H	30	-	-	35	40	45	50	55	60
	E	9.5	-	-	9.5	9.5	9.5	9.5	9.5	9.5
	AA	5 090 ~ 110	-	-	6.8	11.8	16.8	21.8	26.8	31.8
		5 115,120	-	-	7.0	12.0	17.0	22.0	27.0	32.0
		5 125,130	-	-	7.2	12.2	17.2	22.2	27.2	32.2
	Weight kg	0.6	-	-	0.6	0.6	0.6	0.6	0.7	0.7
In case of M2 (Mounting Length 20mm)	H	20	25	30	35	40	45	50	-	-
	E	19.5	19.5	19.5	19.5	19.5	19.5	19.5	-	-
	AA	5 090 ~ 110	-	6.8	11.8	16.8	21.8	26.8	-	-
		5 115,120	-	7.0	12.0	17.0	22.0	27.0	-	-
		5 125,130	-	7.2	12.2	17.2	22.2	27.2	-	-
	Weight kg	0.4	0.4	0.4	0.4	0.5	0.5	0.5	-	-

High-Power Series

Pneumatic Series

Hydraulic Series

Valve / Coupler Hydraulic Unit

Manual Operation Accessories

Cautions / Others

Hole Clamp

SFB

SFC

Swing Clamp

LHA

LHC

LHS

LHW

LG/LT

TLA-2

TLB-2

TLA-1

Link Clamp

LKA

LKC

LKW

LJ/LM

TMA-2

TMA-1

Work Support

LD

LC

TNC

TC

Air Sensing

Lift Cylinder

LLW

Linear Cylinder / Compact Cylinder

LL

LLR

LLU

DP

DR

DS

DT

Block Cylinder

DBA/DBC

Centering Vise

FVA

FVD

FVC

Control Valve

BZL

BZT

BZX/JZG

BZS

Pallet Clamp

VS/VT

Expansion Locating Pin

VFL/VFM

VFJ/VFK

Pull Stud Clamp

FP

FQ





Customized Spring Cylinder

DWA/DWB



External Dimensions

※The drawing shows the released state of SFB3000-G0A-□.

※ Expanding Area Detail

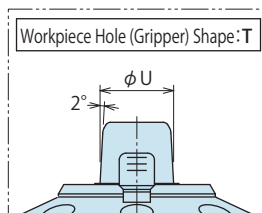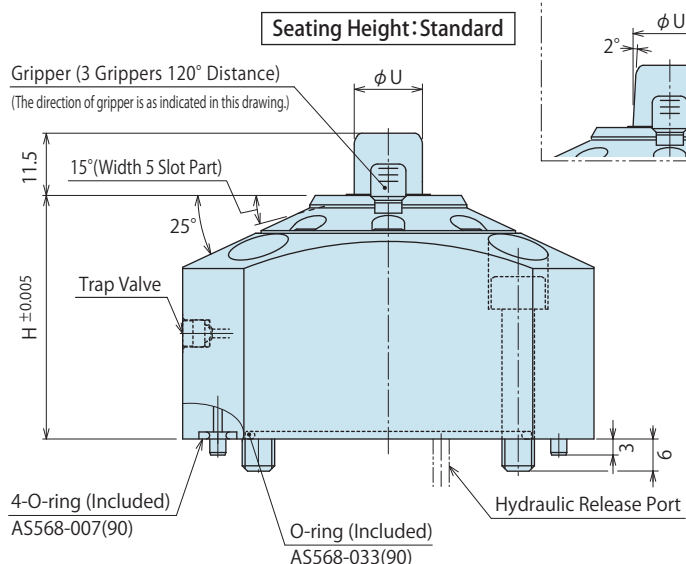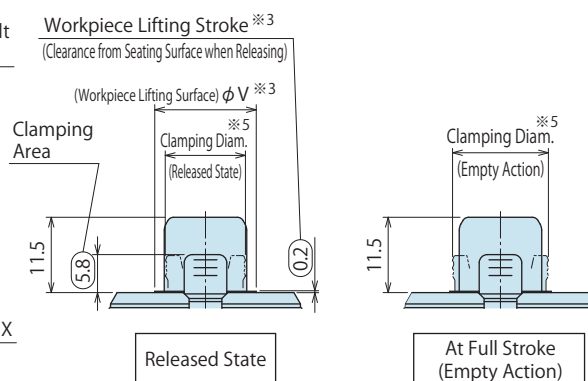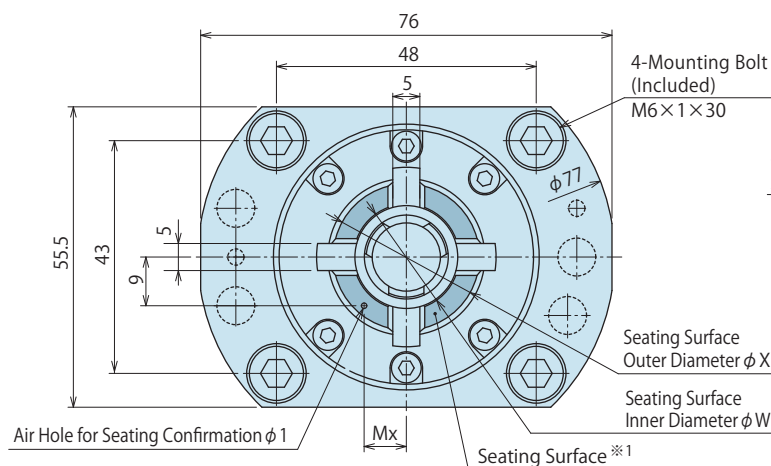


Specifying Seating Height ϕY

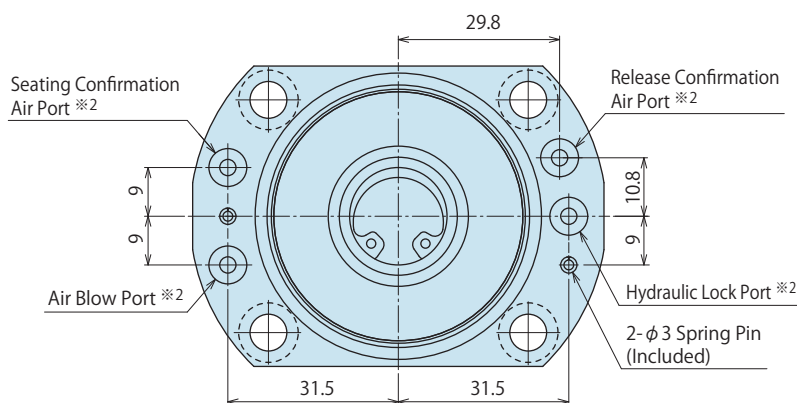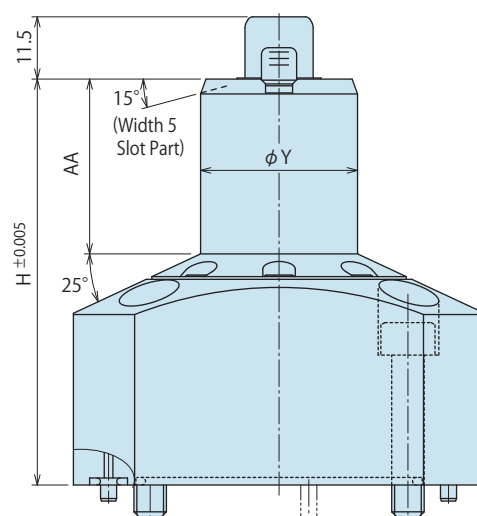

Notes:

1. The workpiece must be resting on all seating surfaces when clamping. If this is not done the workpiece can be deformed by the clamping force.
2. The port names are marked on the product surface. (HYD: Hydraulic Lock Port, FC: Seating Confirmation Air Port, BLOW: Air Blow Port, SENSOR: Release Confirmation Air Port) Continuously supply air pressure to the air blow port and the seating confirmation air port.
3. The numerical value is only for the workpiece lifting option.
4. Refer to Seating Height: Standard for unlisted dimensions.
5. For -T: Taper Hole model, the first gripper ridge is the reference diameter.


Workpiece (Pallet) Hole Dimensions

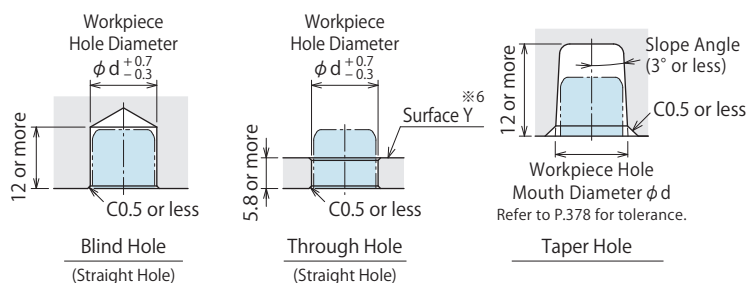


Notes:

1. Thin wall around the workpiece hole could be deformed by clamping action, and clamping force will not fill the specification. Please make sure to test the clamping function before using and adjust to the appropriate supply of pressure.
6. When the clamp head is sticking above the surface Y of the workpiece, please make sure there is no interference with the clamp cylinders during machining.


Machining Dimensions of Mounting Area

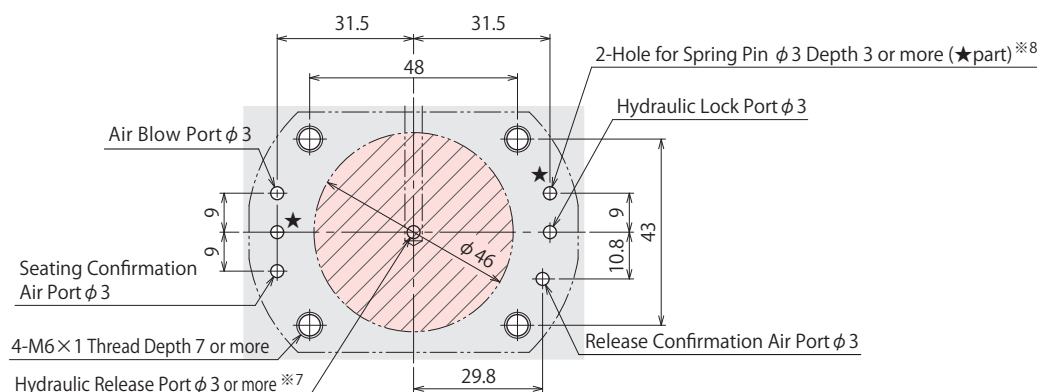

Notes :

- There should be no burrs at the hole contact surface.
- The mounting surface should be machined with a surface roughness of Rz6.3 or better.
- Please make a hydraulic release port within the range of .
- The distance accuracy for machining the holes for spring pins (2 parts marked with ★) should be within $\pm 0.1\text{mm}$.

Model No. Indication

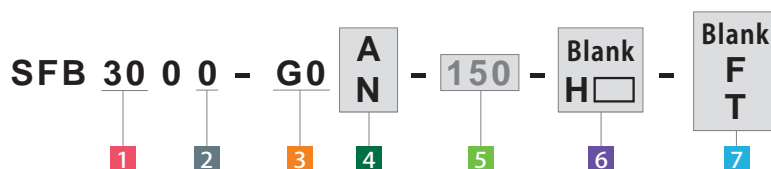

- Body Size (When selecting 30)
- Design No.
- Mounting Methods (When selecting G0)
- Workpiece Lifting Option
- Workpiece Hole Code
- Seating Height Dimension
- Shape of Gripper (Workpiece Hole)

External Dimensions and Machining Dimensions for Mounting (mm)

Model No.		SFB3000-G0□-□-□-□						
	5 Workpiece Hole Code	130	135	140	145	150	155	160
Workpiece Hole Diam. ϕ d	7 Blank, F $\times 11$	13 ± 0.7 0.3	13.5 ± 0.7 0.3	14 ± 0.7 0.3	14.5 ± 0.7 0.3	15 ± 0.7 0.3	15.5 ± 0.7 0.3	16 ± 0.7 0.3
Clamping Diameter	at Released	12.5	13	13.5	14	14.5	15	15.5
	Empty Action	14.2	14.7	15.2	15.7	16.2	16.7	17.2
Clamping Diameter	at Released	11.95	12.45	12.95	13.45	13.95	14.45	14.95
	Empty Action	13.65	14.15	14.65	15.15	15.65	16.15	16.65
Allowable Offset (Floating Clearance of Expanding Area) $\times 9$		± 0.5						
Full Stroke		4.2						
Workpiece Pulling Stroke		1.0						
Workpiece Lifting Stroke $\times 10$		0.2						
U	7 Blank, F	12.6	13.1	13.6	14.1	14.6	15.1	15.6
	7 T	12.4	12.9	13.4	13.9	14.4	14.9	15.4
Mx		7.8	7.8	7.8	7.8	7.8	8.8	8.8
V		15.5	16	16.5	17	17.5	18	18.5
W		19.5	20.5	20.5	21.5	21.5	22.5	22.5
X		27	27	27	27	27	28	28
Y		29	29	29	29	29	30	30

Notes : $\times 9$. The clamping part is an adjusting structure and the clamping operation is done by locating the workpiece hole. The numerical value in the table shows the amount of tolerance value of single clamp. Please consider the center distance accuracy of each clamping installation part and each workpiece hole when used with other location clamps / location cylinders, or when using more than two of these products.

$\times 10$. Workpiece lifting stroke is the function only for lifting option.

$\times 11$. For -T: Taper Hole option, the allowable tolerance of the hole mouth diameter differs depending on the slope angle. (Refer to P.378.)

6 Seating Height Dimension		Standard Height						
3 Mounting Method		Specifying Seating Height						
		Blank	H50	H55	H60	H65	H70	H75
In case of G0 (Mounting Length 0mm)	H	45	50	55	60	65	70	75
	AA	—	7.3	12.3	17.3	22.3	27.3	32.3
	Weight kg	1.1	1.1	1.1	1.2	1.2	1.2	1.2

High-Power
Series

Pneumatic Series

Hydraulic Series

Valve / Coupler
Hydraulic Unit

Manual Operation
Accessories

Cautions / Others

Hole Clamp

SFB

SFC

Swing Clamp

LHA

LHC

LHS

LHW

LG/LT

TLA-2

TLB-2

TLA-1

Link Clamp

LKA

LKC

LKW

LJ/LM

TMA-2

TMA-1

Work Support

LD

LC

TNC

TC

Air Sensing

Lift Cylinder

LLW

Linear Cylinder /

Compact Cylinder

LL

LLR

LLU

DP

DR

DS

DT

Block Cylinder

DBA/DBC

Centering Vise

FVA

FVD

FVC

Control Valve

BZL

BZT

BZX/JZG

BZS

Pallet Clamp

VS/VT

Expansion

Locating Pin

VFL/VFM

VFJ/VFK

Pull Stud Clamp

FP

FQ

Customized






Spring Cylinder

DWA/DWB


External Dimensions

※The drawing shows the released state of SFB3000-M1A-□.

✧ Expanding Area Detail

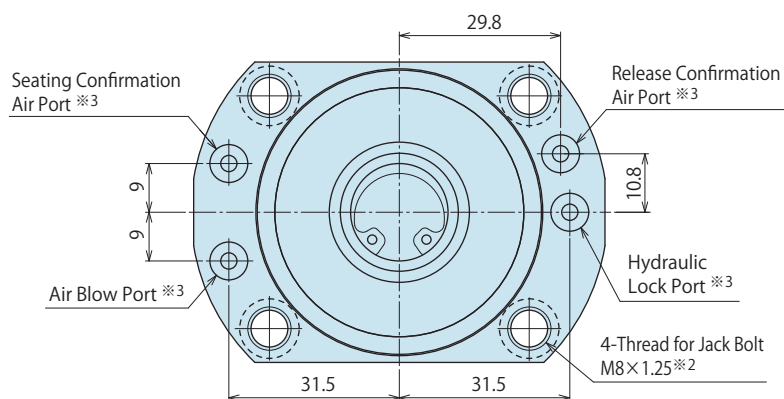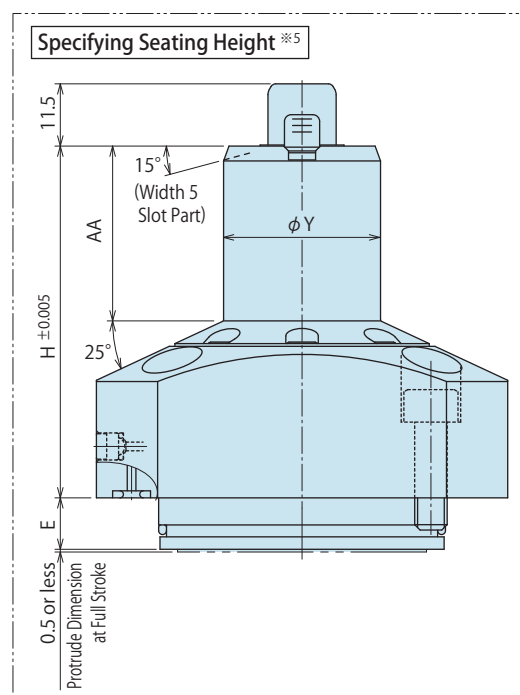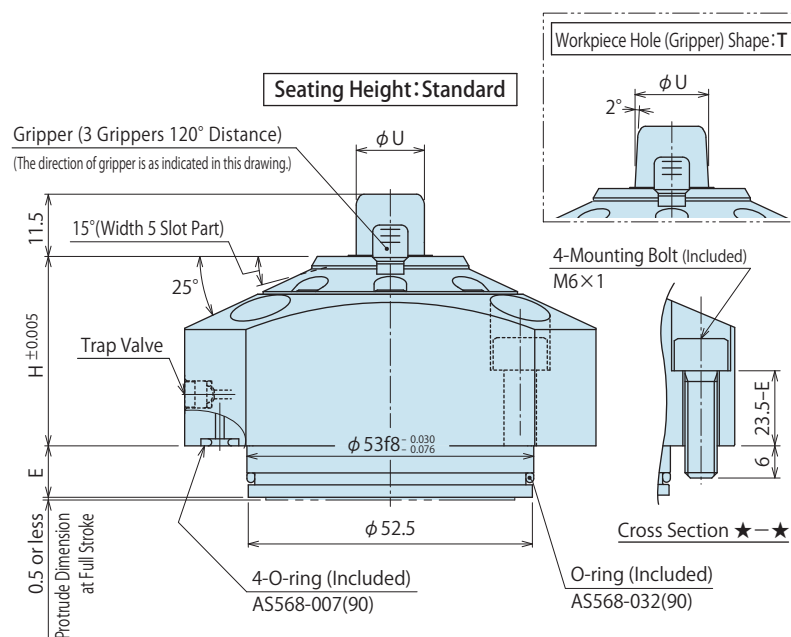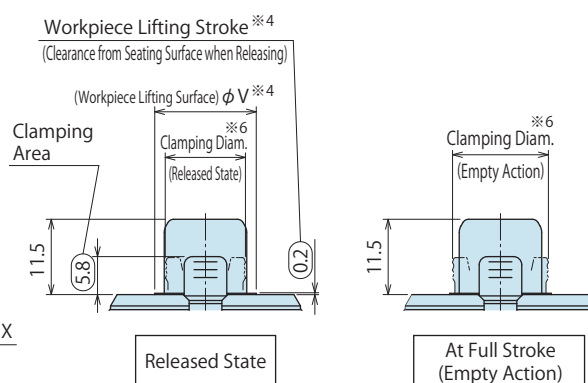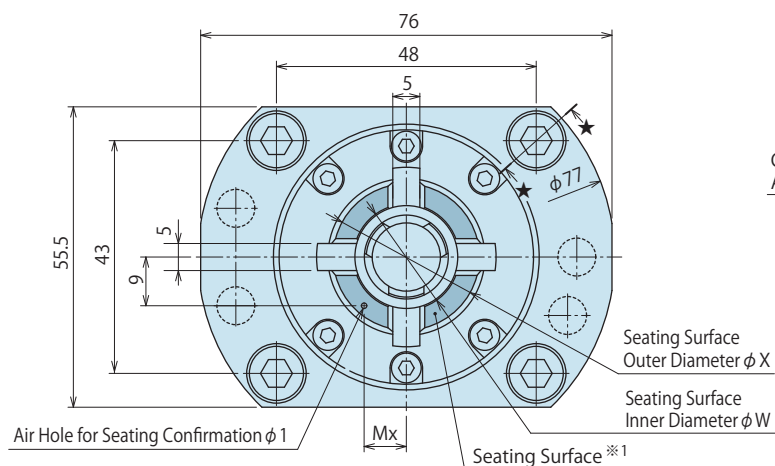

Workpiece (Pallet) Hole Dimensions

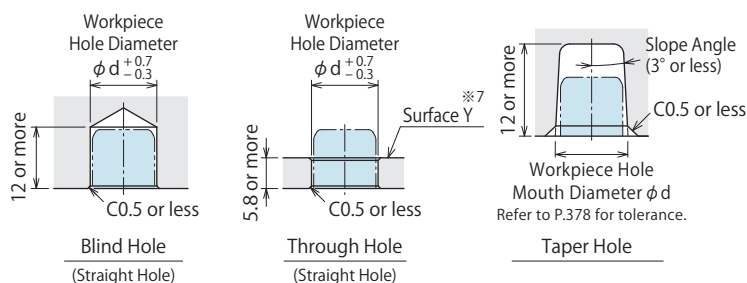


Notes:

- ※1. The workpiece must be resting on all seating surfaces when clamping. If this is not done the workpiece can be deformed by the clamping force.
- ※2. Use jack bolts to remove the product, keeping it parallel to the mounting surface.
- ※3. The port names are marked on the product surface.
(HYD: Hydraulic Lock Port, FC: Seating Confirmation Air Port, BLOW: Air Blow Port, SENSOR: Release Confirmation Air Port)
Continuously supply air pressure to the air blow port and the seating confirmation air port.
- ※4. The numerical value is only for the workpiece lifting option.
- ※5. Refer to Seating Height: Standard for unlisted dimensions.
- ※6. For **-T**: Taper Hole option, the first gripper ridge is the reference diameter.

Notes:


1. Thin wall around the workpiece hole could be deformed by clamping action, and clamping force will not fill the specification.
Please make sure to test the clamping function before using and adjust to the appropriate supply of pressure.
- ※7. When the clamp head is sticking above the surface Y of the workpiece, please make sure there is no interference with the clamp cylinders during machining.

Machining Dimensions of Mounting Area

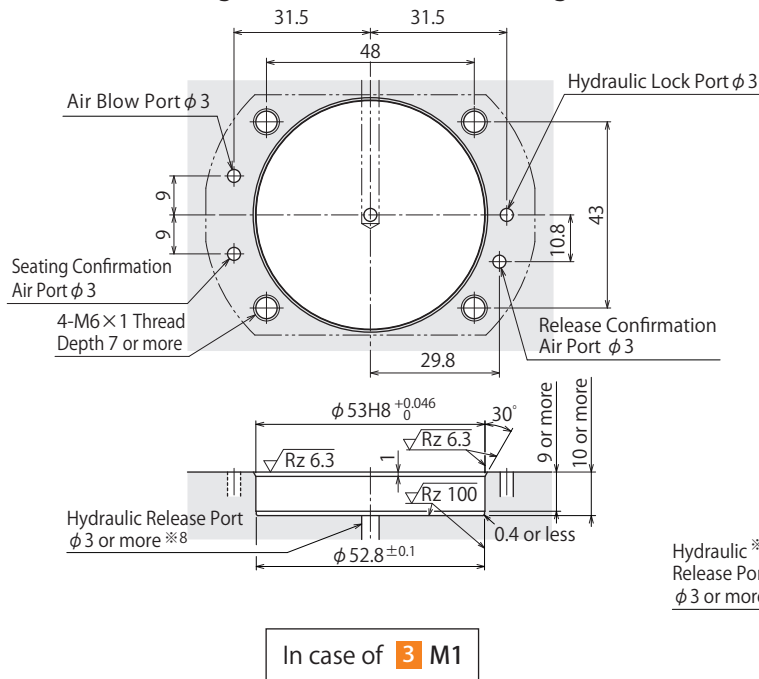

Notes :

- There should be no burrs at the hole contact surface.
- Please contact us when adding a spacer.
- Release hydraulic pressure can be supplied from the bottom surface in case of **3 M1**, and from the side or bottom surface in case of **3 M2** to the main body mounting hole. Please make a hydraulic release port within **◆** area in the case supplied from the side.

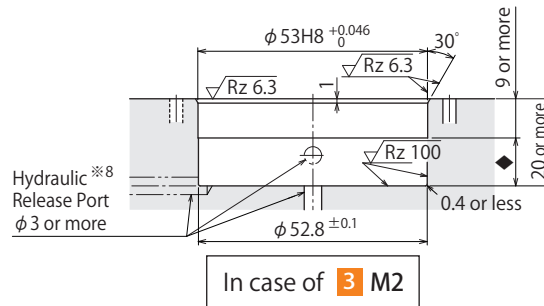

Model No. Indication



- Body Size (When selecting 30)
- Design No.
- Mounting Methods (When selecting M1/M2)
- Workpiece Lifting Option
- Workpiece Hole Code
- Seating Height Dimension
- Shape of Gripper (Workpiece Hole)

External Dimensions and Machining Dimensions for Mounting

Model No.	SFB3000-M□□-□-□-□						
5 Workpiece Hole Code	130	135	140	145	150	155	160
Workpiece Hole Diam. φ d 7 Blank, F ※11	13 ± 0.7/0.3	13.5 ± 0.7/0.3	14 ± 0.7/0.3	14.5 ± 0.7/0.3	15 ± 0.7/0.3	15.5 ± 0.7/0.3	16 ± 0.7/0.3
Clamping Diameter at Released	12.5	13	13.5	14	14.5	15	15.5
7 Blank, F Empty Action	14.2	14.7	15.2	15.7	16.2	16.7	17.2
Clamping Diameter at Released	11.95	12.45	12.95	13.45	13.95	14.45	14.95
7 T Empty Action	13.65	14.15	14.65	15.15	15.65	16.15	16.65
Allowable Offset (Floating Clearance of Expanding Area) ※9	±0.5						
Full Stroke	4.2						
Workpiece Pulling Stroke	1.0						
Workpiece Lifting Stroke ※10	0.2						
U 7 Blank, F	12.6	13.1	13.6	14.1	14.6	15.1	15.6
7 T	12.4	12.9	13.4	13.9	14.4	14.9	15.4
Mx	7.8	7.8	7.8	7.8	7.8	8.8	8.8
V	15.5	16	16.5	17	17.5	18	18.5
W	19.5	20.5	20.5	21.5	21.5	22.5	22.5
X	27	27	27	27	27	28	28
Y	29	29	29	29	29	30	30

Notes : ※ 9. The clamping part is an adjusting structure and the clamping operation is done by locating the workpiece hole. The numerical value in the table shows the amount of tolerance value of single clamp. Please consider the center distance accuracy of each clamping installation part and each workpiece hole when used with other location clamps / location cylinders, or when using more than two of these products.

※ 10. Workpiece lifting stroke is the function only for lifting option.

※ 11. For -T: Taper Hole option, the allowable tolerance of the hole mouth diameter differs depending on the slope angle. (Refer to P.378.)

6 Seating Height Dimension		Standard Height								
3 Mounting Method		Specifying Seating Height								
		Blank	H30	H35	H40	H45	H50	H55	H60	H65
In case of M1 (Mounting Length 10mm)	H	35	—	—	40	45	50	55	60	65
	E	9.5	—	—	9.5	9.5	9.5	9.5	9.5	9.5
	AA	—	—	—	7.3	12.3	17.3	22.3	27.3	32.3
	Weight kg	1.0	—	—	1.0	1.0	1.0	1.1	1.1	1.1
In case of M2 (Mounting Length 20mm)	H	25	30	35	40	45	50	55	—	—
	E	19.5	19.5	19.5	19.5	19.5	19.5	19.5	—	—
	AA	—	7.3	12.3	17.3	22.3	27.3	32.3	—	—
	Weight kg	0.8	0.9	0.9	0.9	1.0	1.0	1.0	—	—

High-Power Series

Pneumatic Series

Hydraulic Series

Valve / Coupler Hydraulic Unit

Manual Operation Accessories

Cautions / Others

Hole Clamp

SFB

SFC

Swing Clamp

LHA

LHC

LHS

LHW

LG/LT

TLA-2

TLB-2

TLA-1

Link Clamp

LKA

LKC

LKW

LJ/LM

TMA-2

TMA-1

Work Support

LD

LC

TNC

TC

Air Sensing

Lift Cylinder

LLW

Linear Cylinder / Compact Cylinder

LL

LLR

LLU

DP

DR

DS

DT

Block Cylinder

DBA/DBC

Centering Vise

FVA

FVD

FVC

Control Valve

BZL

BZT

BZX/JZG

BZS

Pallet Clamp

VS/VT

Expansion Locating Pin

VFL/VFM

VFJ/VFK

Pull Stud Clamp


FP

FQ

Customized Spring Cylinder

DWA/DWB

Operation Control Cycle

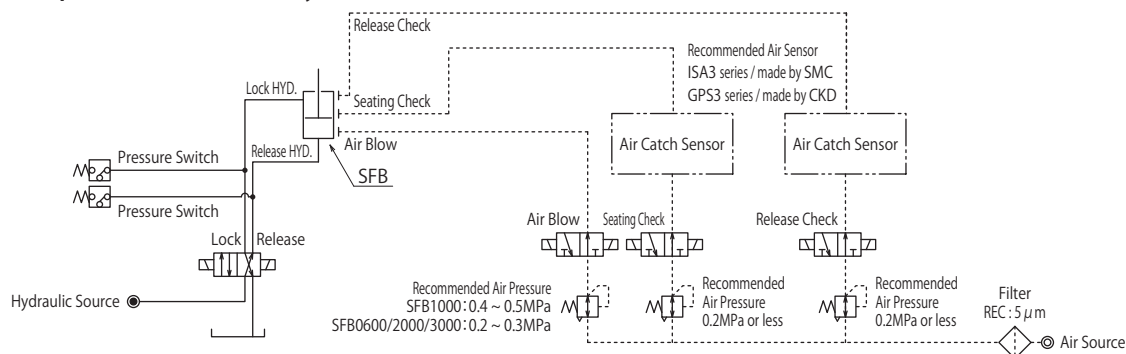


State			Workpiece Loading	Locking	Locking Completed (Machining)	Releasing	Releasing Completed	Workpiece Unloading
Solenoid Valve	Work Clamp	Lock						
	Release							
	Air Blow	Always ON						
	Seating Check Air	Always ON						
Hyd. Pressure SW Air Sensor Signal	Pressure SW for Lock Hyd. Pressure		OFF	ON		OFF		
	Pressure SW for Release Hyd. Pressure		ON	OFF		ON		
	Air Sensor for Seating Check	with Lifting Function	OFF	ON or OFF ※1		OFF		
		w/o Lifting Function	OFF	ON		ON		OFF
Air Sensor for Release Check			ON	OFF		ON		

Note: ※1. ON when a workpiece is locked properly. OFF when clamping without a workpiece or when clamping error is detected.

Layout Sample

※ This drawing shows a combination layout sample of SFB (Hole Clamp) and VFM (Expansion Locating Pin).

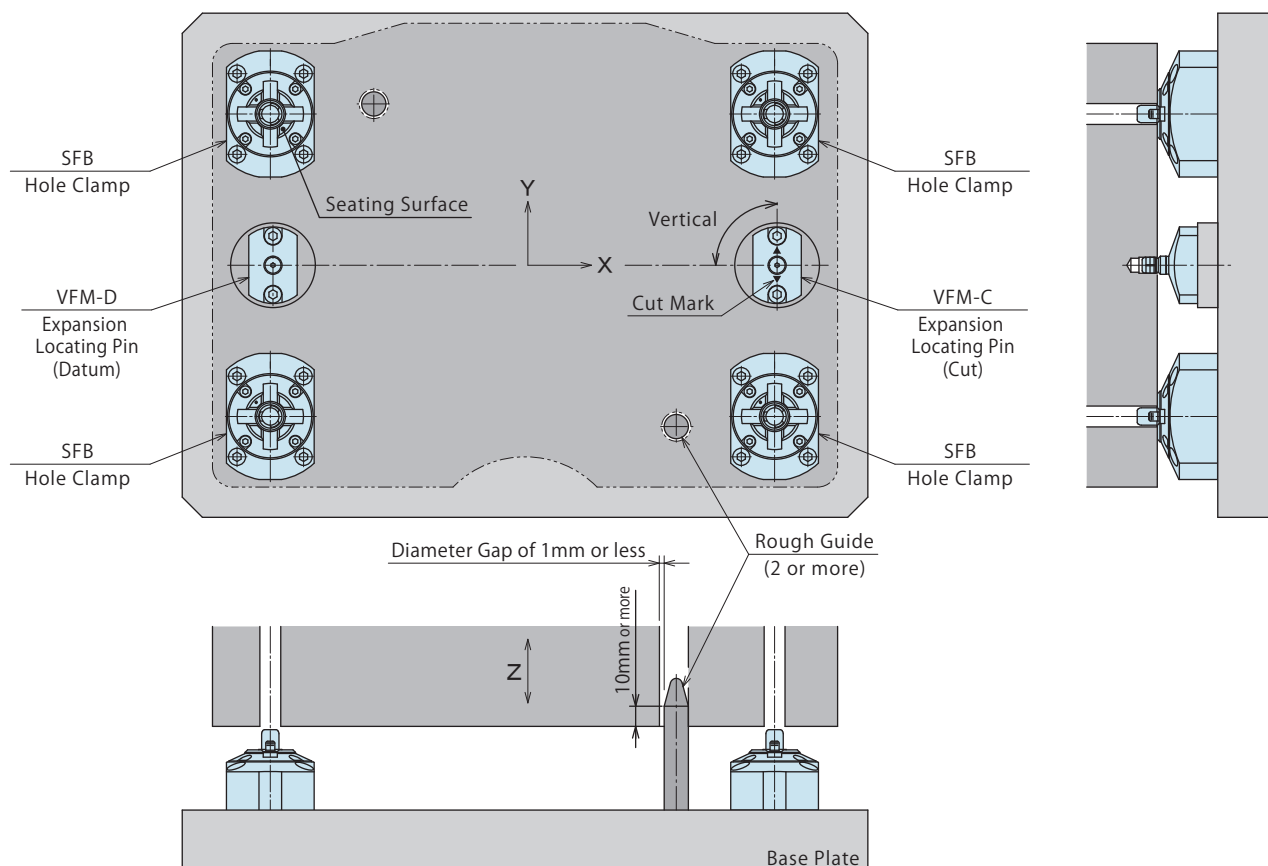


Notes :

- In order to prevent the clamping part from damage, please set up rough guide of 2 or more when loading / unloading a workpiece. Please refer to the above drawing for the length of rough guide and the diameter gap. (Use of rough guides depends on the loading / unloading condition of the workpiece.)
- When using a combination of VFM (Expansion Locating Pin) and SFB (Hole Clamp), please choose N: without lifting function.


Hydraulic and Pneumatic Circuit Reference

※This drawing shows a combination circuit reference of SFB (Hole Clamp) and VFM (Expansion Locating Pin).

When controlled with one solenoid valve

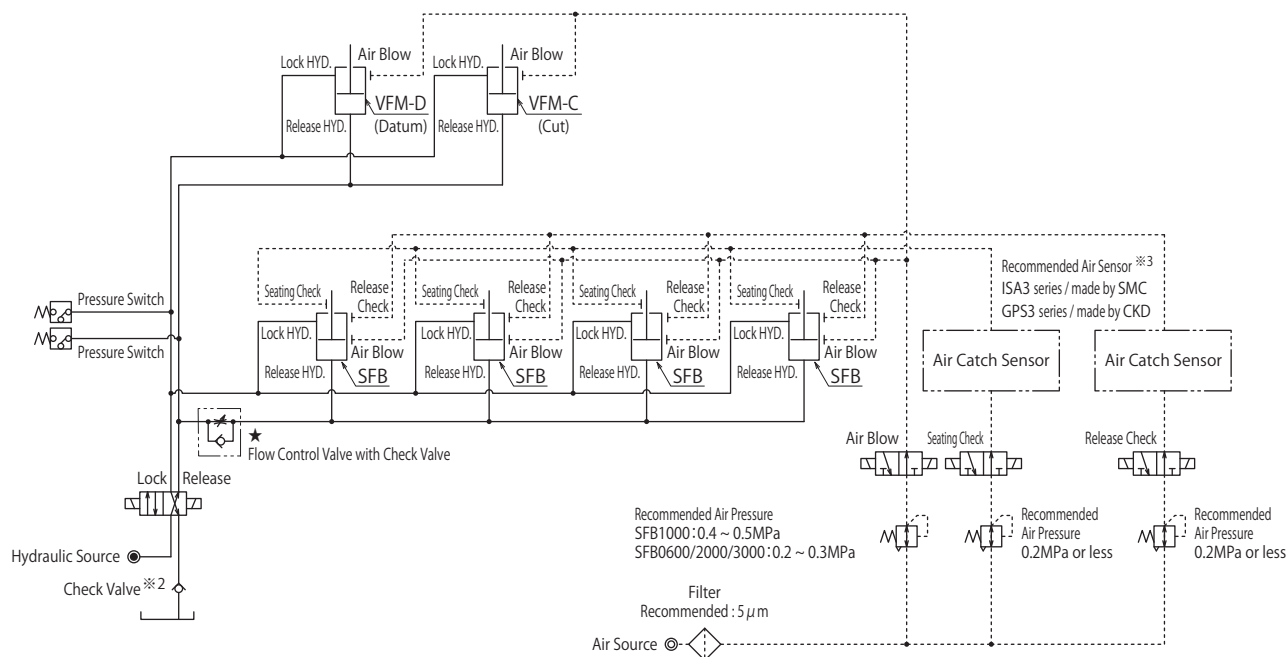

When controlled with two solenoid valves

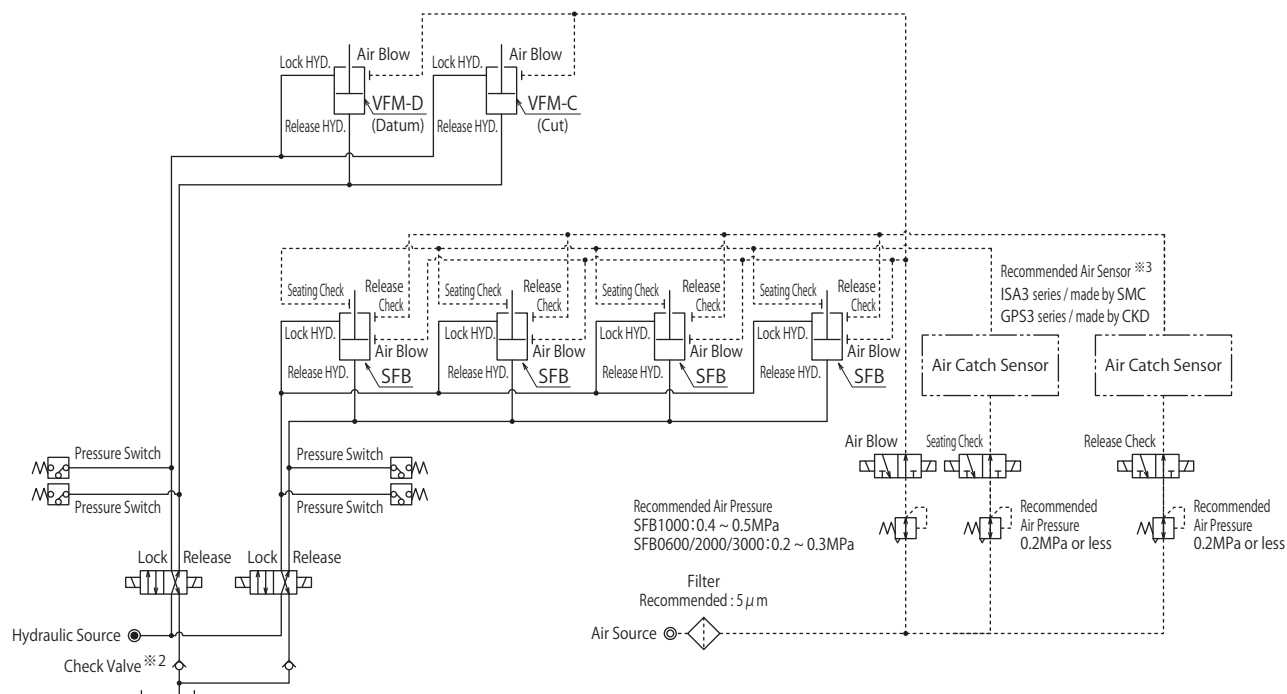

Notes:

1. Please use solenoid valve to make a sequence operation that SFB (Hole Clamp) starts working after VFM (Expansion Locating Pin) completes the movement. When unable to use solenoid valve, please prepare flow control valve with check valve at ★(1 piece) to adjust sequencing speed. If SFB operates before VFM, there is a possibility for the equipment to be damaged due to a thrust load on SFB.
- ※2. Expanded VFM cylinder sometimes releases (unclamps) due to a back pressure of tank-port.
Please prepare check valve (recommend cracking pressure: less than 0.04MPa).
- ※3. In case high accuracy is required for air sensor setting, please install an air sensor for individual clamp.

High-Power
Series

Pneumatic Series

Hydraulic Series

Valve / Coupler
Hydraulic Unit

Manual Operation
Accessories

Cautions / Others

Hole Clamp

SFB

SFC

Swing Clamp

LHA

LHC

LHS

LHW

LG/LT

TLA-2

TLB-2

TLA-1

Link Clamp

LKA

LKC

LKW

LJ/LM

TMA-2

TMA-1

Work Support

LD

LC

TNC

TC

Air Sensing

Lift Cylinder

LLW

Linear Cylinder /

Compact Cylinder

LL

LLR

LLU

DP

DR

DS

DT

Block Cylinder

DBA/DBC

Centering Vise

FVA

FVD

FVC

Control Valve

BZL

BZT

BZX/JZG

BZS

Pallet Clamp

VS/VT

Expansion

Locating Pin

VFL/VFM

VFJ/VFK

Pull Stud Clamp

FP

FQ

Customized


Spring Cylinder

DWA/DWB

Cautions

Notes for Design


- 1) Check Specifications
 - Please use each product according to the specifications.
 - This product is hydraulic double-acting model which locks and releases with hydraulic pressure.
- 2) Working Reference Plate (Seating Surface) Z axis.
 - The upper surface of the flange of this product is the seating surface of workpiece and locates in Z direction.

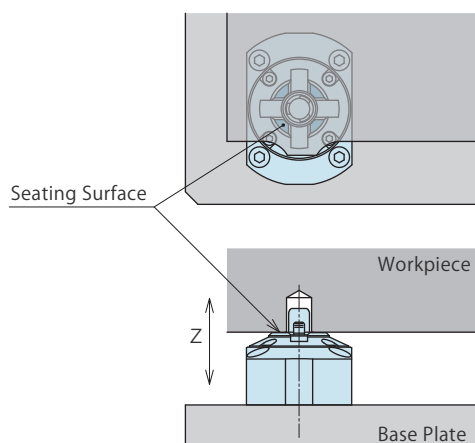

When clamping, make sure all seating surfaces touch a workpiece.
When the workpiece is not touching the seating surface area, please refer to external dimension chart and calculate contacting pressure with clamping force and seating area not to deform the workpiece.

3) Seating Confirmation Mechanism

- It will be detected when a workpiece is pressed against the seating surface by locking (clamping) action.

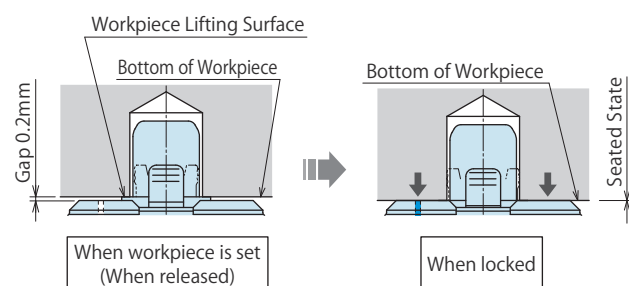

With lifting function, when workpiece is set (before supplying lock hydraulic pressure), the workpiece is lifted up by built-in spring, and there will be a gap of 0.2mm between workpiece bottom surface and seating surface.

4) Clamp Installation

- The clamping part of this product has floating structure ($\pm 0.5\text{mm}$). Please consider the center distance accuracy of each clamping installation part and each workpiece hole when used with other location clamps / location cylinders, or when using more than two of these products.

5) Clamping Force

- Clamping force shows a pressing force against the seating surface.


Make sure to conduct test clamping and adjust supply pressure accordingly. Insufficient clamping force and/or expanding force leads to workpiece detachment.

- 6) Workpiece hole size, slope angle and workpiece hardness should be within the range of the specification.

When workpiece hole diameter is larger than specification.	Expansion stroke is insufficient and the clamping force will not fill the specifications.
When using it with insufficient clamping force.	Leads to falling of the workpiece.
When workpiece hole diameter is smaller than specification.	Difficult to attach/detach the workpiece leading to damage.
When workpiece hole depth is shallow.	May lead to abnormal seating and damage.
When workpiece hole taper slope angle is larger than specification.	The load concentrates on the gripper point when clamping and could lead to damage.
When workpiece hole is harder than specified.	Gripper does not dig into the workpiece enough and it cannot clamp securely.

7) Wall Thickness around Workpiece Hole

- Thin wall around the workpiece hole could be deformed by clamping action, and clamping force does not fill the specification. Make sure to conduct test clamping and adjust supply pressure accordingly. Insufficient clamping force leads to workpiece detachment.

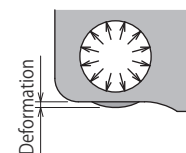

8) Air Blow Port and Seating Confirmation Port

- Continuously supply air pressure to the air blow port and the seating confirmation port.
If air supply is shut off during operation, contaminants enter into the clamp leading to malfunctions.

9) Release Confirmation Air Port

- The trap valve makes an exhaust sound during the locking (clamping) operation, but this is not abnormal.

High-Power
Series

Pneumatic Series

Hydraulic Series

Valve / Coupler
Hydraulic UnitManual Operation
Accessories

Cautions / Others

Hole Clamp

SFB

SFC

Swing Clamp

LHA

LHC

LHS

LHW

LG/LT

TLA-2

TLB-2

TLA-1

Link Clamp

LKA

LKC

LKW

LJ/LM

TMA-2

TMA-1

Work Support

LD

LC

TNC

TC

Air Sensing
Lift Cylinder

LLW

Linear Cylinder /
Compact Cylinder

LL

LLR

LLU

DP

DR

DS

DT

Block Cylinder

DBA/DBC

Centering Vise

FVA

FVD

FVC

Control Valve

BZL

BZT

BZX/JZG

BZS

Pallet Clamp

VS/VT

Expansion
Locating Pin

VFL/VFM

VFJ/VFK

Pull Stud Clamp

FP


FQ

Customized
Spring Cylinder

DWA/DWB

10) Release Action

- When releasing, it lifts up a workpiece which is normal.
When using in a horizontal application, it is recommended to install a fall prevention of workpiece for temporal tacking.

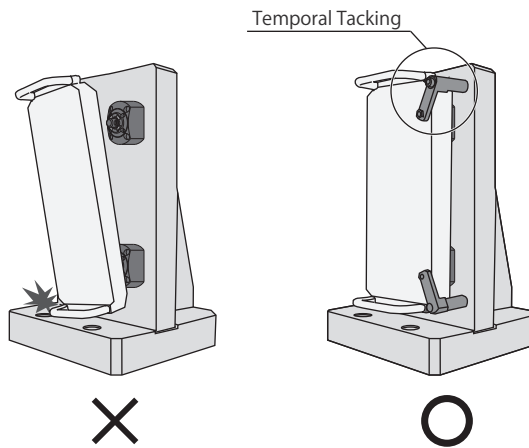

11) Horizontal Locating


- When a workpiece is set, please make sure there is no lifting or slope of the workpiece. If the clamping operation is done with lifting or slope of the workpiece, it will lead to possible damage of a clamp and deformation of the workpiece hole.

12) Please detach a workpiece with all clamps fully released.

- When a workpiece is detached during lock or release operation, it will lead to damage of clamp or fall of workpiece.

13) Please set up rough guides.

- When detaching a workpiece with slope it may cause damage of clamp or fall of workpiece.

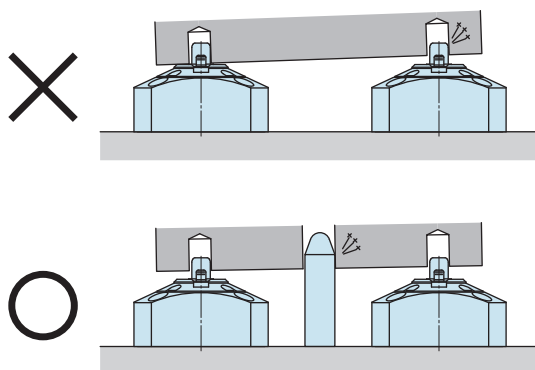

When using the product with other location clamps / cylinders, please set rough guides considering the center distance accuracy of each mounting hole and workpiece hole of location clamp / cylinders.

Cautions

Installation Notes


- 1) Check the Usable Fluid
- Please use the appropriate fluid by referring to the Hydraulic Fluid List (P. 1355).

2) Installation / Removal of Hole Clamp

- Use four hexagonal socket bolts for mounting (with tensile strength of 12.9) and tighten them with the torque shown in the table below. Tighten them evenly to prevent twisting or jamming.

Model No.	Thread Size	Tightening Torque (N·m)
SFB0600	M4×0.7	3.2
SFB/SFC1000	M4×0.7	3.2
SFB/SFC2000	M5×0.8	6.3
SFB/SFC3000	M6	10.0

- When removing a hole clamp of mounting length 10mm/20mm, use thread for jack bolt (SFB : 4 mounting bolt holes, SFC : 2 mounting bolt holes), in order not to damage the installation tap. The following shows the case in which the parallel pin (hollow set) is set in the tapped hole so that the installation tap will not be damaged.

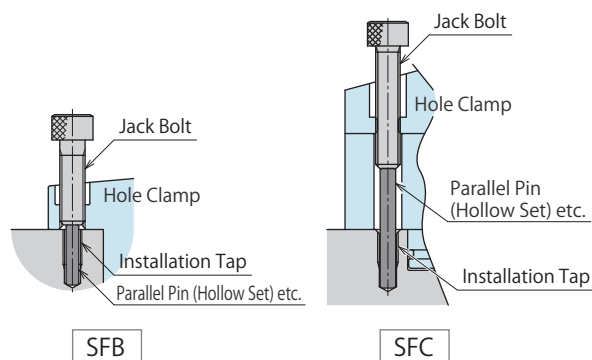


3) Port Position of the Hole Clamp

- The port names are marked on the product surface. Be careful of installation direction.
(HYD : Hydraulic Lock Port, FC : Seating Confirmation Air Port, BLOW : Air Blow Port, SENSOR : Release Confirmation Air Port)
Release pressure is supplied from the bottom of cylinder.

- 4) Use air piping with outer diameter $\phi 6$ (inner diameter $\phi 4$) or larger for air blow.
- In order to conduct an effective air blow, it is recommended to use air piping with outer diameter $\phi 6$ (inner diameter $\phi 4$) or larger.

Maintenance and Inspection

- 1) Please refer to P.1357 for general maintenance.
- 2) Regularly clean the clamping part and the seating surface.
 - There is an air blow mechanism in this product, and cutting chips and coolant can be removed. However, as it may be hard to remove clinging cutting chips, sludge, etc., please confirm there are no contaminants when a workpiece is set. If operating with dirt adhering to the clamping part, it will lead to a workpiece fall due to insufficient clamping force, defective operation, and oil leakage etc.

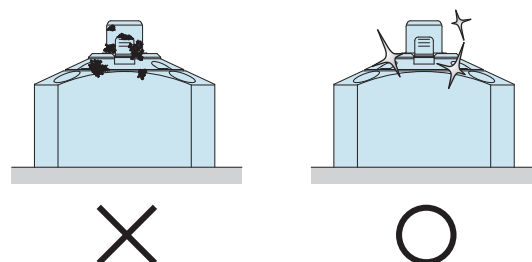

Even with general cleaning on exterior of hole clamp, there may be contaminants within internal parts of the component. If necessary, please call us for repair.
If repair or modifications are carried out by anyone other than Kosmek, or without our approval or confirmation, it will void warranty.

- 3) Clamping force will be decreased by friction of a gripper surface due to repeated operation. Replacement period differs depending on operating air pressure, workpiece material and shape of hole. When you find friction on gripper surface, the gripper needs to be replaced. Please contact us for overhaul.

Material of Clamping Hole	Gripper Replacement Frequency Guide
A2017 Aluminum	Locking operation 1 million cycles
SCM435 Thermal Refined Steel	Locking operation 500,000 cycles

※ It varies depending on the operating conditions. Please request an overhaul after confirming its suitability for the actual machine.

※ Please refer to P.1355 for common cautions.

• Installation Notes • Hydraulic Fluid List • Notes on Hydraulic Cylinder Speed Control Circuit
• Notes on Handling • Maintenance/Inspection • Warranty

MEMO

High-Power
Series

Pneumatic Series

Hydraulic Series

Valve / Coupler
Hydraulic Unit

Manual Operation
Accessories

Cautions / Others

Hole Clamp

SFB

SFC

Swing Clamp

LHA

LHC

LHS

LHW

LG/LT

TLA-2

TLB-2

TLA-1

Link Clamp

LKA

LKC

LKW

LJ/LM

TMA-2

TMA-1

Work Support

LD

LC

TNC

TC

Air Sensing Lift Cylinder

LLW

Linear Cylinder / Compact Cylinder

LL

LLR

LLU

DP

DR

DS

DT

Block Cylinder

DBA/DBC

Centering Vise

FVA

FVD

FVC

Control Valve

BZL

BZT

BZX/JZG

BZS

Pallet Clamp

VS/VT

Expansion Locating Pin

VFL/VFM

VFJ/VFK

Pull Stud Clamp

FP

FQ


Customized Spring Cylinder

DWA/DWB


Cautions

● Installation Notes (For Hydraulic Series)

- 1) Check the Usable Fluid
 - Please use the appropriate fluid by referring to the Hydraulic Fluid List.
- 2) Procedure before Piping
 - The pipeline, piping connector and fixture circuits should be cleaned by thorough flushing.
 - The dust and cutting chips in the circuit may lead to fluid leakage and malfunction.
 - There is no filter provided with Kosmek's product except for a part of valves which prevents foreign materials and contaminants from getting into the circuit.
- 3) Applying Sealing Tape
 - Wrap with tape 1 to 2 times following the screw direction.
 - Pieces of the sealing tape can lead to oil leakage and malfunction.
 - Please implement piping construction in a clear environment to prevent anything getting in products.
- 4) Air Bleeding of the Hydraulic Circuit
 - If the hydraulic circuit has excessive air, the action time may become very long. If air enters the circuit after connecting the hydraulic port or under the condition of no air in the oil tank, please perform the following steps.
 - ① Reduce hydraulic pressure to less than 2MPa.
 - ② Loosen the cap nut of pipe fitting closest to the clamp by one full turn.
 - ③ Shake the pipeline to loosen the outlet of pipe fitting.
Hydraulic fluid mixed with air comes out.

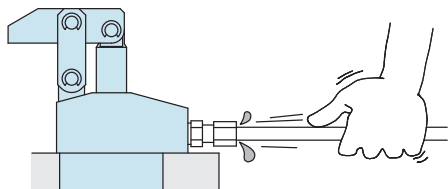

- ④ Tighten the cap nut after bleeding.
- ⑤ It is more effective to release air at the highest point inside the circuit or at the end of the circuit.
(Set an air bleeding valve at the highest point inside the circuit.)

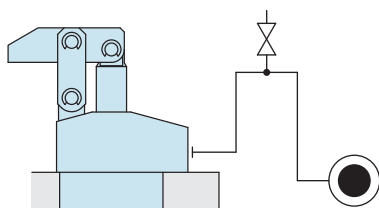

5) Checking Looseness and Retightening

- At the beginning of the machine installation, the bolt and nut may be tightened lightly. Check the looseness and re-tighten as required.

● Hydraulic Fluid List

ISO Viscosity Grade ISO-VG-32		
Maker	Anti-Wear Hydraulic Oil	Multi-Purpose Hydraulic Oil
Showa Shell Sekiyu	Tellus S2 M 32	Morlina S2 B 32
Idemitsu Kosan	Daphne Hydraulic Fluid 32	Daphne Super Multi Oil 32
JX Nippon Oil & Energy	Super Hyrando 32	Super Mulpus DX 32
Cosmo Oil	Cosmo Hydro AW32	Cosmo New Mighty Super 32
ExxonMobil	Mobil DTE 24	Mobil DTE 24 Light
Matsumura Oil	Hydol AW-32	
Castrol	Hyspin AWS 32	

Note : Please contact manufacturers when customers require products in the list above.


Notes on Hydraulic Cylinder Speed Control Unit




Please pay attention to the cautions below. Design the hydraulic circuit for controlling the action speed of hydraulic cylinder. Improper circuit design may lead to malfunctions and damages. Please review the circuit design in advance.

Flow Control Circuit for Single Acting Cylinder

For spring return single acting cylinders, restricting flow during release can extremely slow down or disrupt release action. The preferred method is to control the flow during the lock action using a valve that has free-flow in the release direction. It is also preferred to provide a flow control valve at each actuator.

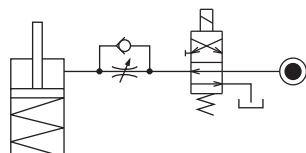

Accelerated clamping speed by excessive hydraulic flow to the cylinder may sustain damage. In this case add flow control to regulate flow. (Please add flow control to release flow if the lever weight is put on at the time of release action when using swing clamps.)

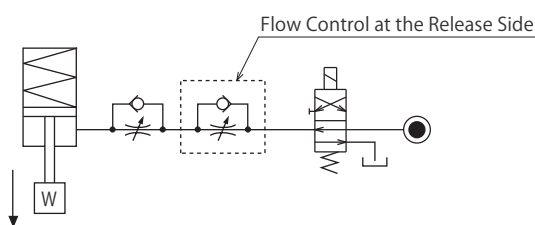

Flow Control Circuit for Double Acting Cylinder


Flow control circuit for double acting cylinder should have meter-out circuits for both the lock and release sides. Meter-in control can have adverse effect by presence of air in the system.

However, in the case of controlling LKE, TMA, TLA, both lock side and release side should be meter-in circuit.


Refer to P.75 for speed adjustment of LKE.

For TMA and TLA, if meter-out circuit is used, abnormal high pressure is created, which causes oil leakage and damage.

【Meter-out Circuit】(Except LKE/TMA/TLA)

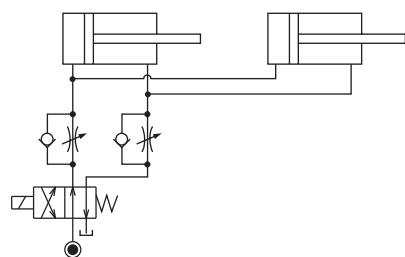


【Meter-in Circuit】(LKE/TMA/TLA must be controlled with meter-in.)

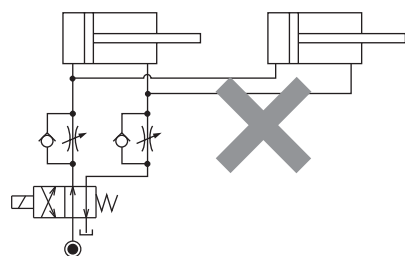


In the case of meter-out circuit, the hydraulic circuit should be designed with the following points.

- ① Single acting components should not be used in the same flow control circuit as the double acting components. The release action of the single acting cylinders may become erratic or very slow.

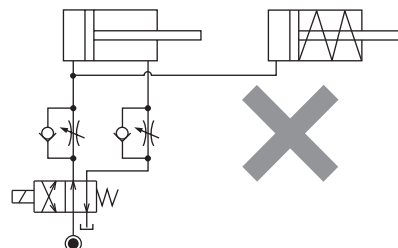


Refer to the following circuit when both the single acting cylinder and double acting cylinder are used together.


- Separate the control circuit.

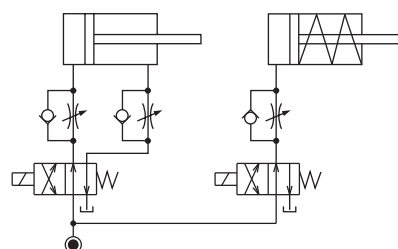

- Reduce the influence of double acting cylinder control unit. However, due to the back pressure in tank line, single action cylinder is activated after double action cylinder works.

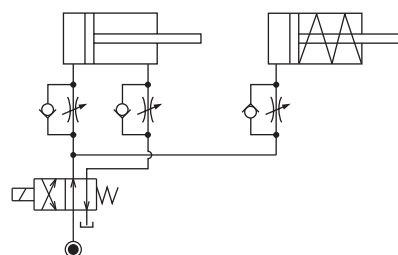


- ② In the case of meter-out circuit, the inner circuit pressure may increase during the cylinder action because of the fluid supply. The increase of the inner circuit pressure can be prevented by reducing the supplied fluid beforehand via the flow control valve. Especially when using sequence valve or pressure switches for clamping detection. If the back pressure is more than the set pressure then the system will not work as it is designed to.

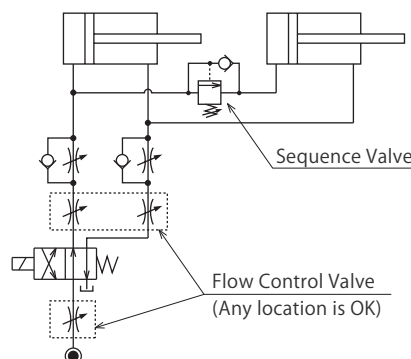

● Cautions

● Notes on Handling


- 1) It should be operated by qualified personnel.
- The hydraulic machine and air compressor should be operated and maintained by qualified personnel.
- 2) Do not operate or remove the product unless the safety protocols are ensured.
 - ① The machine and equipment can only be inspected or prepared when it is confirmed that the safety devices are in place.
 - ② Before the product is removed, make sure that the above-mentioned safety devices are in place. Shut off the pressure and power source, and make sure no pressure exists in the air and hydraulic circuits.
 - ③ After stopping the product, do not remove until the temperature drops.
 - ④ Make sure there is no abnormality in the bolts and respective parts before restarting the machine or equipment.
- 3) Do not touch a clamp (cylinder) while it is working. Otherwise, your hands may be injured due to clinching.

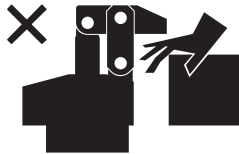


- 4) Do not disassemble or modify.
- If the equipment is taken apart or modified, the warranty will be voided even within the warranty period.

● Maintenance and Inspection

- 1) Removal of the Machine and Shut-off of Pressure Source
 - Before the machine is removed, make sure that safety devices and preventive devices are in place. Shut off the pressure and power source, and make sure no pressure exists in the air and hydraulic circuits.
 - Make sure there is no abnormality in the bolts and respective parts before restarting.
- 2) Regularly clean the area around the piston rod and plunger.
 - If it is used when the surface is contaminated with dirt, it may lead to packing seal damage, malfunctioning and fluid leakage.

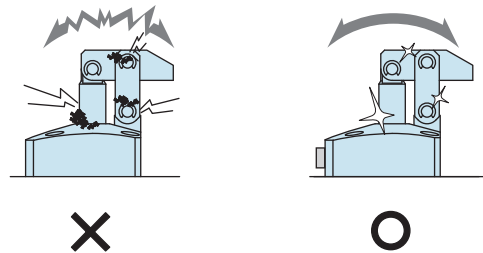

- 3) Please clean out the reference surfaces on a regular basis (taper reference surface and seating surface) of the locating products. (VS/VT/VFL/VFM/VFJ/VFK/WVS/VWM/VWK/VX/VXE/VXF)
 - The locating products, except VX/VXE/VXF model, can remove contaminants with cleaning functions. However, hardened cutting chips, adhesive coolant and others may not be removed. Make sure there are no contaminants before installing a workpiece/pallet.
 - Continuous use with contaminant on components will lead to locating accuracy failure, malfunction and fluid leakage.

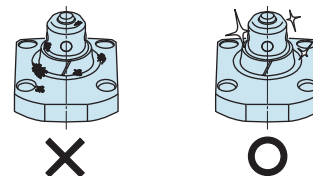

- 4) If disconnecting by couplers, air bleeding should be carried out on a regular basis to avoid air mixed in the circuit.
- 5) Regularly tighten nut, bolt, pin, cylinder, pipe line and others to ensure proper use.
- 6) Make sure the hydraulic fluid has not deteriorated.
- 7) Make sure there is a smooth action without an irregular noise.
 - Especially when it is restarted after left unused for a long period, make sure it can be operated correctly.
- 8) The products should be stored in the cool and dark place without direct sunshine or moisture.
- 9) Please contact us for overhaul and repair.

Cautions[Installation Notes
\(For Hydraulic Series\)](#)[Hydraulic Fluid List](#)[Notes on Hydraulic Cylinder
Speed Control Circuit](#)[Notes on Handling](#)[Maintenance/
Inspection](#)[Warranty](#)**Company Profile**[Company Profile](#)[Our Products](#)[History](#)**Index**[Search by](#)[Alphabetical Order](#)**Sales Offices**

● Warranty

1) Warranty Period

- The product warranty period is 18 months from shipment from our factory or 12 months from initial use, whichever is earlier.

2) Warranty Scope

- If the product is damaged or malfunctions during the warranty period due to faulty design, materials or workmanship, we will replace or repair the defective part at our expense.

Defects or failures caused by the following are not covered.

- ① If the stipulated maintenance and inspection are not carried out.
- ② If the product is used while it is not suitable for use based on the operator's judgment, resulting in defect.
- ③ If it is used or operated in an inappropriate way by the operator.
(Including damage caused by the misconduct of the third party.)
- ④ If the defect is caused by reasons other than our responsibility.
- ⑤ If repair or modifications are carried out by anyone other than Kosmek, or without our approval and confirmation, it will void warranty.
- ⑥ Other caused by natural disasters or calamities not attributable to our company.
- ⑦ Parts or replacement expenses due to parts consumption and deterioration.
(Such as rubber, plastic, seal material and some electric components.)

Damages excluding from direct result of a product defect shall be excluded from the warranty.

Sales Offices


Sales Offices across the World

JAPAN HEAD OFFICE Overseas Sales	TEL. +81-78-991-5162	FAX. +81-78-991-8787
	KOSMEK LTD. 1-5, 2-chome, Murotani, Nishi-ku, Kobe-city, Hyogo, Japan 651-2241 〒651-2241 兵庫県神戸市西区室谷2丁目1番5号	
United States of America SUBSIDIARY KOSMEK (USA) LTD.	TEL. +1-630-620-7650	FAX. +1-630-620-9015
	650 Springer Drive, Lombard, IL 60148 USA	
MEXICO REPRESENTATIVE OFFICE KOSMEK USA Mexico Office	TEL. +52-442-161-2347	
	Av. Santa Fe #103 int 59 Col. Santa Fe Juriquilla C.P. 76230 Queretaro, Qro Mexico	
EUROPE SUBSIDIARY KOSMEK EUROPE GmbH	TEL. +43-463-287587	FAX. +43-463-287587-20
	Schleppeplatz 2 9020 Klagenfurt am Wörthersee Austria	
CHINA KOSMEK (CHINA) LTD. 考世美(上海)贸易有限公司	TEL. +86-21-54253000	FAX. +86-21-54253709
	Room601, RIVERSIDE PYRAMID No.55, Lane21, Pusan Rd, Pudong Shanghai 200125, China 中国上海市浦东新区浦三路21弄55号银亿滨江中心601室 200125	
INDIA BRANCH OFFICE KOSMEK LTD - INDIA	TEL. +91-9880561695	
	F 203, Level-2, First Floor, Prestige Center Point, Cunningham Road, Bangalore -560052 India	
THAILAND REPRESENTATIVE OFFICE KOSMEK Thailand Representation Office	TEL. +66-2-300-5132	FAX. +66-2-300-5133
	67 Soi 58, RAMA 9 Rd., Suanluang, Suanluang, Bangkok 10250, Thailand	
TAIWAN (Taiwan Exclusive Distributor) Full Life Trading Co., Ltd. 盈生貿易有限公司	TEL. +886-2-82261860	FAX. +886-2-82261890
	16F-4, No.2, Jian Ba Rd., Zhonghe District, New Taipei City Taiwan 23511 台湾新北市中和區建八路2號 16F-4 (遠東世紀廣場)	
PHILIPPINES (Philippines Exclusive Distributor) G.E.T. Inc, Phil.	TEL. +63-2-310-7286	FAX. +63-2-310-7286
	Victoria Wave Special Economic Zone Mt. Apo Building, Brgy. 186, North Caloocan City, Metro Manila, Philippines 1427	
INDONESIA (Indonesia Exclusive Distributor) PT. Yamata Machinery	TEL. +62-21-29628607	FAX. +62-21-29628608
	Delta Commercial Park I, Jl. Kenari Raya B-08, Desa Jayamukti, Kec. Cikarang Pusat Kab. Bekasi 17530 Indonesia	

Sales Offices in Japan

Head Office Osaka Sales Office Overseas Sales	TEL. 078-991-5162	FAX. 078-991-8787
	〒651-2241 兵庫県神戸市西区室谷2丁目1番5号	
Tokyo Sales Office	TEL. 048-652-8839	FAX. 048-652-8828
	〒331-0815 埼玉県さいたま市北区大成町4丁目81番地	
Nagoya Sales Office	TEL. 0566-74-8778	FAX. 0566-74-8808
	〒446-0076 愛知県安城市美園町2丁目10番地1	
Fukuoka Sales Office	TEL. 092-433-0424	FAX. 092-433-0426
	〒812-0006 福岡県福岡市博多区上牟田1丁目8-10-101	

Global Network

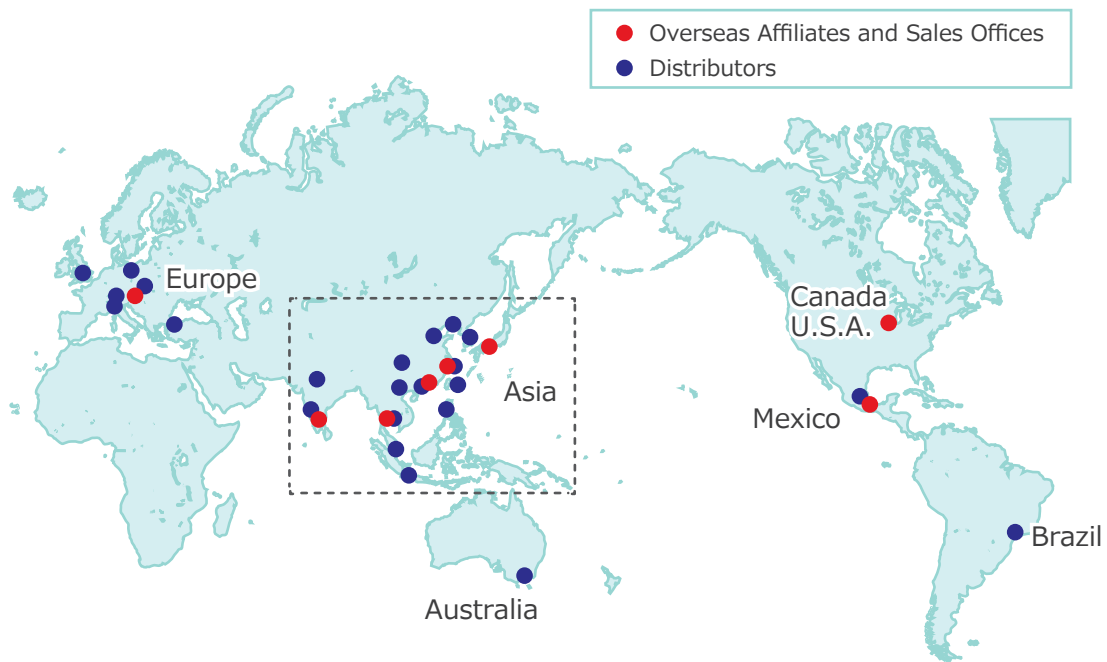

Asia Detailed Map



● FOR FURTHER INFORMATION ON UNLISTED SPECIFICATIONS AND SIZES, PLEASE CALL US.
 ● SPECIFICATIONS IN THIS CATALOG ARE SUBJECT TO CHANGE WITHOUT NOTICE.

